

## TST 507 Quick Install Guide

**Press and hold CODE for 6 seconds.** All tires are displayed on the screen. You should see FFF FFF or an alphanumeric code on your screen.

**To delete** sensor code, use + and – to navigate to the tire you want to clear. Press the SET button for 3 seconds to delete the sensor code.

**To program the sensor codes**, use + and – to navigate to the tire you will program. Place the bottom of your monitor close to the sensor; **press and release CODE**. The right corner light will illuminate, and the monitor should automatically display the code.

**Continue** by pressing – or + to navigate to the next tire/sensor.

**Tap MODE** (don't hold) exit programming.

**To set PSI parameters**, press and hold MODE until the monitor beeps and you see PSI. Tap MODE; you should see a C or an F. You can select F by tapping the + button. {Leave temperature at 158° F}

**To program the front axle parameters**, Press MODE again. Use - & + to set the parameters. When you see the high pressure icon (circle with 3 knobs), adjust the pressure setting. Tap MODE again to set the low parameter. Tapping MODE will then move you to the next axle.

**To save the programmed values**, press and release SET (DO NOT HOLD).