 


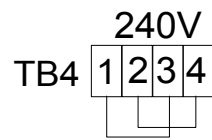
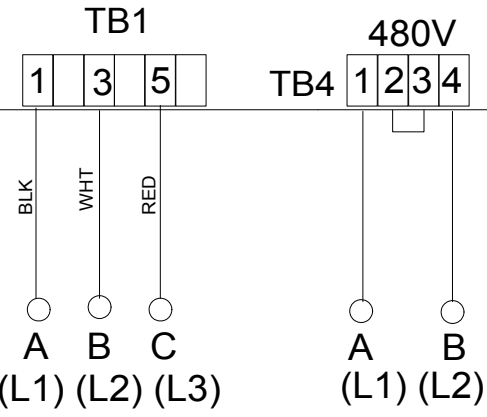


T-16A

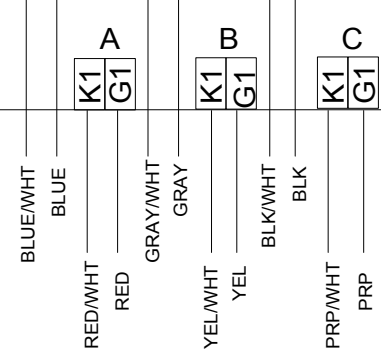

OPTION CARD X2
 DIRECT CONTROL X1

J1
 REMOVE FOR 50 Hz → X3

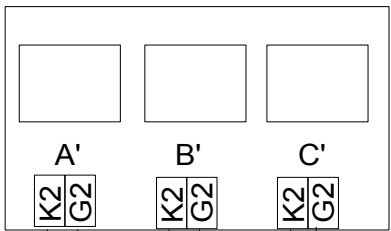

CONNECT TO PHASE INDICATOR

THESE COME FROM (TB1)
 LOCATED ON YOUR PTR6001

T-16A FIRING BOARD RETROFIT			
SCALE	NONE	APPROVED BY:	DRAWN BY SO
DATE	5/7/10		
Model	Serial		
BELLWOOD, ILL.	U.S.A.		DRAWING # 6001 TO T-16A