

# TABLE OF CONTENTS

## Introduction

About the Author .....	3
Acknowledgements.....	4
To the Reader .....	5

## HOW IT WORKS

### Chapter 1 - The Engine

How Engines Generate Motion .....	8
Parts of the Engine .....	10
How Power is Transmitted .....	17
Timing Belts and Chains .....	18

### Chapter 2 - The Transmission

Transmission Types .....	22
Identifying Failure .....	24
The Differential .....	25

### Chapter 3 - Ignition and Charging

Ignition Components .....	28
Charging Components .....	30
Charging System .....	32
Ignition System .....	34

### Chapter 4 - The Fuel System

Fuel System Diagram.....	37
Fuel System Components.....	38
Fuel System Plumbing .....	40

### Chapter 5 - The Cooling System

Cooling System Components.....	44
How the Cooling System Works...	47

### Chapter 6 - The Lubrication System

System Components .....	52
Checking the Oil .....	55

### Chapter 7 - The Braking System

Road Conditions .....	58
Tires .....	59
Brake Components .....	60-62
Brake Fluid .....	63
Brake Lights .....	66
Emergency Brake.....	67
Brake Fade .....	68-72

### Chapter 8 - Safety First

Let Someone Know .....	75
Personal Protection .....	76-78
Secure the Vehicle .....	78
Prepare for Emergencies.....	81

# TABLE OF CONTENTS

## DO IT YOURSELF (DIY)

### Chapter 9 - Checking Your Fluids

Transmission Fluid.....	86
Gear Oil .....	87
Coolant .....	88
Windshield Washer Fluid .....	89
Power Steering Fluid.....	90
Brake / Clutch Fluid.....	90, 91
Fuel .....	91

### Chapter 10 - Changing Your Oil

Tools and Supplies .....	95
Choosing the Oil .....	96
Raising the Vehicle .....	97
Replacing the Oil and Filter..	99, 104

### Chapter 11 - Replacing the Battery

Removing the old Battery .....	107
Servicing the New Battery .....	108
Installing the New Battery .....	109

### Chapter 12 - Jump Starting a Car

Push Starting .....	113
Portable Chargers .....	114
Jump Starting .....	115-119

### Chapter 12 - Jump Starting a Car

Using a Battery Charger .....	120
Charging with a Second Car .....	121

### Chapter 13 - Lights and Fuses

Changing Light Bulbs .....	125-127
Changing Fuses .....	128, 129

### Chapter 14 - How to do a Tune-up

Changing the Spark Plugs ..	134-138
Cleaning the Throttle .....	139
Servicing the EGR Valve .....	142
Clean/Replace Air Filter .....	146

### Chapter 15 - How to Use a Jack

Before you Jack up a Car.....	148
The Hydraulic Jack.....	149, 150
Using Floor and Scissor Jacks....	151

# TABLE OF CONTENTS

## Do it Yourself (DIY)

### Chapter 16 - Changing a Tire

Secure the Vehicle .....	156
Remove the Tire .....	157-158
Install the Tire .....	158-159

### Chapter 17 - Disk Brake Job

Safety First .....	163
Removing the Wheels .....	164
Removing Brake Caliper ....	165, 166
Replacing Brake Pads .....	167

### Chapter 18 - Drum Brake Job

Safety First .....	173
Removing the Wheels .....	174
Removing Brake Drum .....	174, 177
Replacing Brake Shoes .....	178, 180

### Chapter 19 - Troubleshooting

Engine .....	183
Brakes .....	193
Suspension .....	196

## Tips and Maintenance Schedules

### Chapter 20 - Tips and Schedules

Tips .....	202
Suggested Schedules .....	206

### Appendix A: Basic Tools .....

### Appendix B: Glossary .....

### Index .....

### YouTube Video Index.....

211

220

228

233

