

Clock Setting and Basic Timer Use(Single Time On)

CLOCK VISIBILITY	= Show Clock
DATE FORMAT	= MM/DD/YYYY
SET TIME	= Set to Current Time
SET DATE	= Set to Current Date
1001 EXT1 COMMANDS	= Timer 1
3601 TIMERS ENABLE	= Active
3602 START TIME 1	= 06:00:00 AM
3603 STOP TIME 1	= 06:00:00 PM
3604 START DAY 1	= Monday
3605 STOP DAY 1	= Sunday
3626 TIMER 1 SRC	= P1