

EXPOSED KITCHEN DECK FAUCETS

INSTALLATION AND ROUGH-IN DIRECTIONS AND PARTS LIST *A.I.S.A. Uniform EDP Code Numbers - Group No. 1-50

FOR SINGLE
HOLE MOUNTING
ITEM NUMBERS
With Standard Aerator


Model - 7520 (less connections)


Model - 7521 (with 1/2" MPT connections)

With Swivel Aerator

Model - 7525 (less connections)

Model - 7526 (with 1/2" MPT connections)

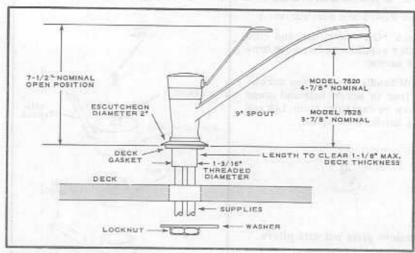

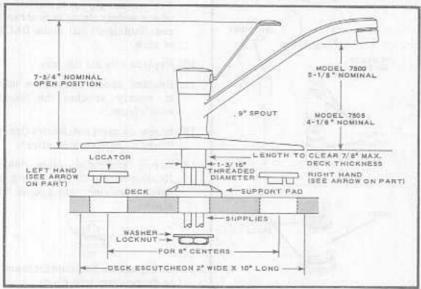

TO FIT 8 & 6 INCH CENTER DRILLINGS

ITEM NUMBERS
With Standard Aerator

Model - 7500 (less connections)

Model - 7501

(with 1/2" MPT connections)

With Swivel Aerator

Model - 7505

(less connections)

 
Model - 7506

(with 1/2" MPT connections)

BEFORE MOUNTING FAUCET ON SINK, FOLLOW THESE STEPS:

- 1. Remove plastic locators from hardware package, and line bottom inside edge of each locator with plumbers putty. Then, place them in the 8 or 6 inch deck drillings, so that straight edges of each locator are parallel with back edge of sink. Be sure that arrow on left locator is pointing left and arrow on right locator is pointing right. Hold locators and tighten screws securely in each to lock locator in place. Now faucet is ready to be put in place. These locators automatically give correct position on sink no wasted time in re-positioning.
- 2. Carefully bend the copper supply tubes on faucet straight down,
- Install the escutcheon and support pad on faucet. Apply plumbers putty around the escutcheon and support pad edges.
- 4. Place faucet on deck over the plastic locators, install washers and locknuts from underneath.

NOTE: TO USE LOCKNUT - Place supply tube in notch in threads so as to be clear the upper nipple on models so equipped.

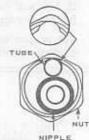



IMPORTANT INSTRUCTIONS ON OTHER SIDE

Manufactured under U.S. Patent Nos. 2,943,792 and RE 23920. Other U.S. and Foreign Patents Pending.

Division of STANDARD SCREW COMPANY

Elyria, Ohio

MF - 102 - 12 - 68

UTHO IN USA

TO FLUSH THE INSTALLATION:

Faucet body and supplies should be flushed under pressure to remove pipe chips or other foreign material that might clog the faucet when in service. To do this, make sure the water supplies are "OFF". Follow the detailed instructions below and dissassemble the faucet. Turn on both hot and cold water supplies slowly and thoroughly flush the installation. Re-assemble faucet as shown in the instructions.

TO DISASSEMBLE:

(Need Pliers and Screwdriver.)

 
- 1. Turn "Off" both hot and cold water supplies and remove handle screw.
- 2. Pull handle down, Place screwdriver in screw hole and press down on cartridge stem. Lift and tilt handle housing off.




- 3. Remove pivot nut with pliers.
- 4. Lift and twist spout off.
- 5. Pry out retainer clip with screwdriver.



6. Grasp cartridge stem with pliers. Lift cartridge out.

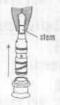

To Flush Supply Lines, Turn On Both Hot and Cold Water Supplies Slowly.

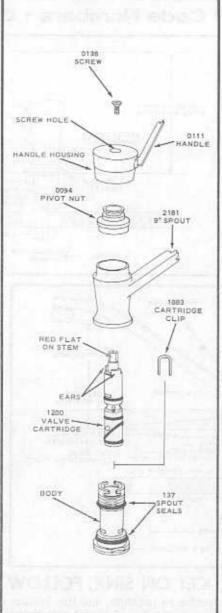

TO REASSEMBLE:

7. With cartridge stem UP, insert and push DOWN cartridge by its ears.



8. Turn cartridge ears to front and back as shown.



- 9. Turn red (notched) flat of cartridge stem toward sink, (Note: For cross piping installations where supply piping is reversed, red ((notched)) flat faces BACK of sink.
- 10. Replace clip all the way.
- 11. Replace spout. Push down until it nearly touches the faucet escutcheon.
- 12. Screw on pivot nut. Do Not Cross Thread. Tighten with pliers.
- 13. Press cartridge stem down. Holding handle UP, hook ring in handle housing into groove on



- 14. Swing handle back and forthuntil it drops down into place.
- 15. Replace handle screw. Tighten securely.

FINAL NOTES:

- A. If handle won't operate properly . . . You have not hooked handle ring into sleeve groove, (See Step 13.)
- B. If hot and cold reversed, red (notched) flat not toward sink . . . Remove handle assembly. Turn red (notched) edge of stem so it faces sink. (See Step 10.)
- C. For proper water flow, aerator must be free of foreign particles. If flow is weak or irregular, unscrew aerator, clean and replace.

PARTS LIST

			84.075C
Item No.	Name	Item No.	Name
137	Upper Spout Seal	0094	Pivot Nut
485	Standard Aerator (7500 and 7520)	0099	Escutcheon (7500 and 7505)
1883	Retainer Clip	0111	Handle Assembly
2177	Escutcheon (7520 and 7525)	0136	Handle Screw
2181	Spout - 9 inch	0172	Hardware Package (7500 and 7505)
2193	Deck Gasket (7520 and 7525)	0173	Hardware Package (7520 and 7525)
3920	Swivel Spray Aerator (7505 and 7525)		Hardware Package (7501 and 7506)
			Hardware Package (7521 and 7526)



