

Pretzel Machine Instructions

1. Fill water pan full of water located at the bottom back left of the machine
2. Load pretzels
 - A. Two to three per rack
 - a. It is important to load the pretzels with the two opening “wraps” on the rack. If you load upside down, the weight will cause pretzel to break in half.
3. Turn both switches on and set temperature dial between 150 and 160 degrees
4. Allow 30-40 minutes for pretzels to warm (60 minutes if they are frozen)
5. Load a bag of salt (comes in each case) into the salting pan
6. When unit is half empty, move all warm pretzels to the top and load frozen on bottom
7. Serve from the top until the bottom is warm, then repeat step 5

CLOSING PROCEDURES

1. Throw away or give away remaining pretzels
2. Turn off both switches
3. Remove water pan and empty
4. Wipe off rack and inside machine
5. Remove and wipe off inside bottom tray