



Active Software & Hardware Systems

Unitech HT630 Data Collector Operation

Step 1

Press Power or Yellow Scan Button



Step 2

Press & Hold Command Button



Step 3

Press 1 or ENT Buttons



Step 4

Press ENT Button (Enter)



Step 5

1 for SKU, Qty, Cost & Retail
2 for SKU & Quantity Only
3 for SKU & Quantity One



Step 6

Press Yellow Button to Scan Barcodes, Then enter Quantity and/or Cost & Price




Step 7

Press F1 to exit



Step 8

Place Data Collector in Docking Station

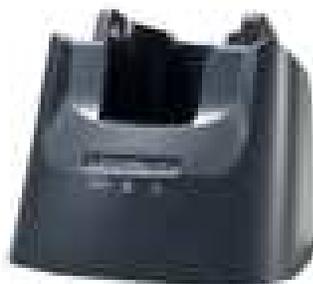




Active Software & Hardware Systems


In the **Management System**, Select any of the following to Receive Data from the Portable Data Collector:

From the POS Screen, Enter IO or click Options and click “IO Import Order – Portable”

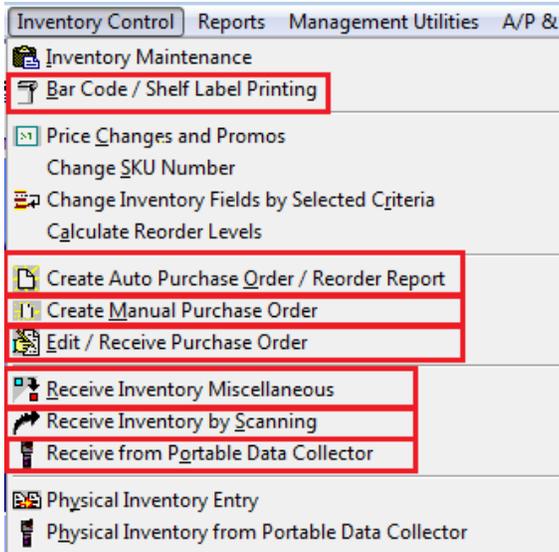

Hot Key	Description
IN	Insert Blank Line
IO	Import Order - Portable
LA	Layaways Save/Recall
LO	Logoff User
OR	Orders Save/Recall
PC	Price Check
PP	Post Payments

Setup in Station Settings Local:

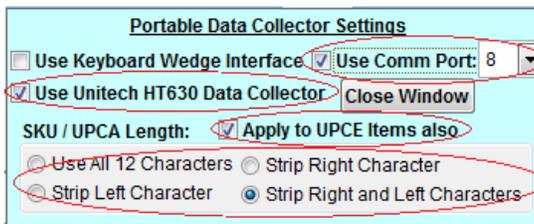

Select the appropriate Communication Port and the number of characters used in the UPC-A code and UPC-E code:
 Use All 12 Characters (All 8 for a UPC-E code)
 Strip Left Character (right 11 for UPC-A and 7 for UPC-E)
 Strip Right Character (left 11 for UPC-A and 7 for UPC-E)
 Strip Right and Left Characters
 (10 center characters of UPC-A & 6 center characters of UPC-E)

Manually Deleting the DATA.TXT file from the Data Collector:

CAUTION: Do NOT delete any file except the “DATA.TXT”. Deleting any other file will require sending the Data Collector in to have it reprogrammed.

Press F2

Then 1 for Yes or 2 for NO





Active Software & Hardware Systems

Editing Data on Data Collector

Press F3 to enter Edit Mode



Press F1 for the Previous Record
Press F2 for the Next Record



Press Left and Right Arrows to scroll through the fields



(Record 1, Field 1 Displayed: R1,F1)

<u>Field</u>	<u>Field Definition</u>	<u>Mode</u>
F1	SKU	Inventory Price
F2	Quantity	Inventory Price
F3	Cost	Inventory Price
F4	Price	Inventory Price
F5	SKU	Inventory QTY
F6	Quantity	Inventory QTY
F7	SKU	Inventory QTY 1
F8	Quantity	Inventory QTY 1

When the Field to Edit is selected, Press ENT to Edit



Use the Arrow keys and enter the Corrected Data.
Press ENT when done.
Press ENT again to Accept Modified Changes or ESC to Cancel.

Press ESC to Exit, Then ENT, ENT



Press
ESC
Then:
ENT
ENT





Active Software & Hardware Systems

Initial Setup

Initial Program Load:

After first programming a new data collector, open PTComm

Click: Icon in upper left or Transfers | Connect Portable

Click: Auto Detect Baud Rate

Click: OK


Click: Second Icon from left or Transfers | Connect Portable

Click: Change Baud Rate (should be 38400)

Click: Set

Installation at Customer Location:

- 1) Set the baud rate in the Device Manager for the port to 38400
- 2) In the Management System | Station Settings Local on the Hardware Tab,
Click the “Portable Data Collector Settings” button

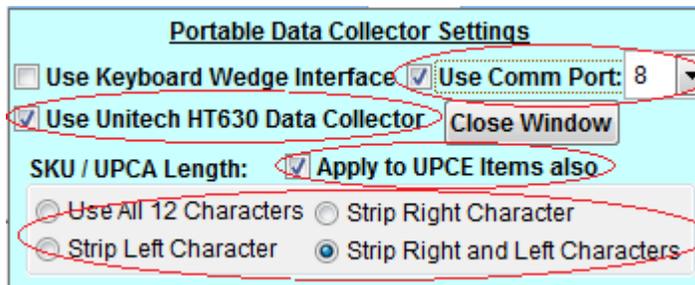

Click: “Use Unitech HT630 Data Collector”

Click: “Use Comm Port” and set the Port Number to the Port found in Step 1 above.

Select the Number of characters to use for a UPC-A Barcodes.

Click “Apply to UPC-E Items also” to apply the same character stripping logic to UPC-E barcodes.