



Set-up Motion Record in SmartPSS

Open SmartPSS

Select Device Config

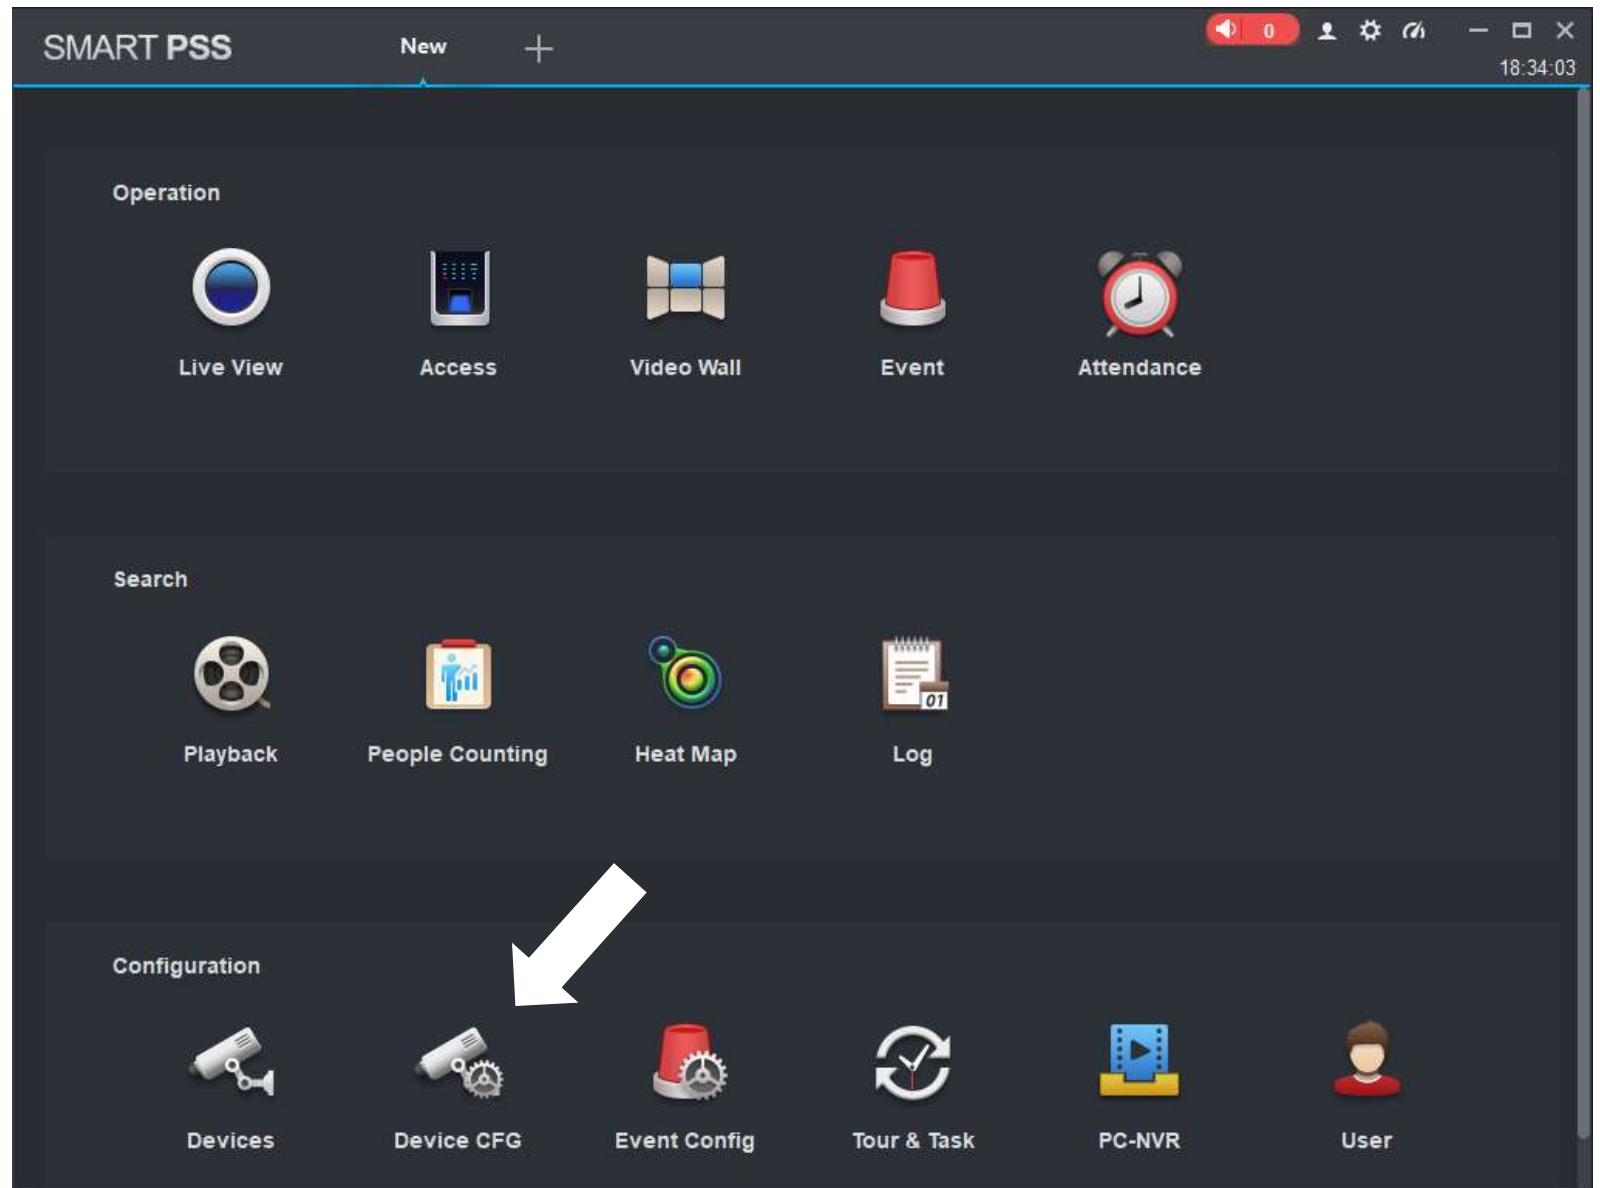


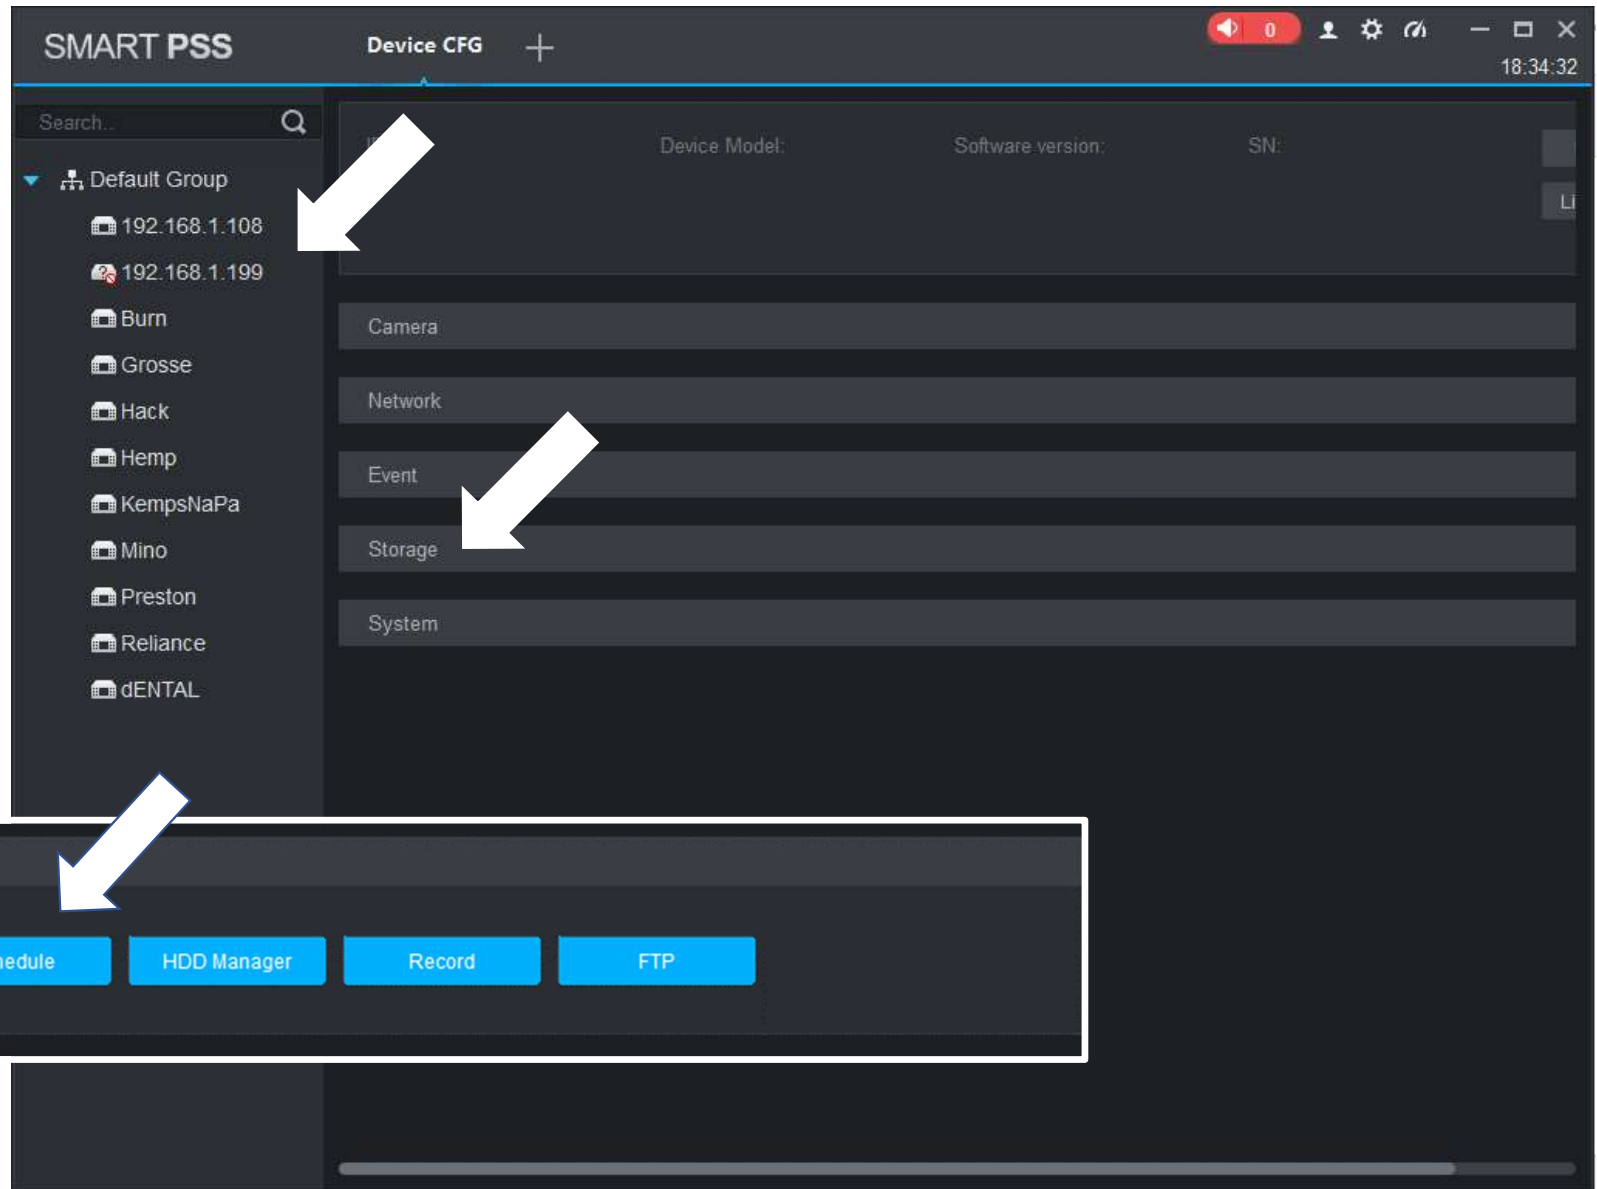

Select Cam System

Select Storage to Set
Motion
Record Schedule

Select Schedule

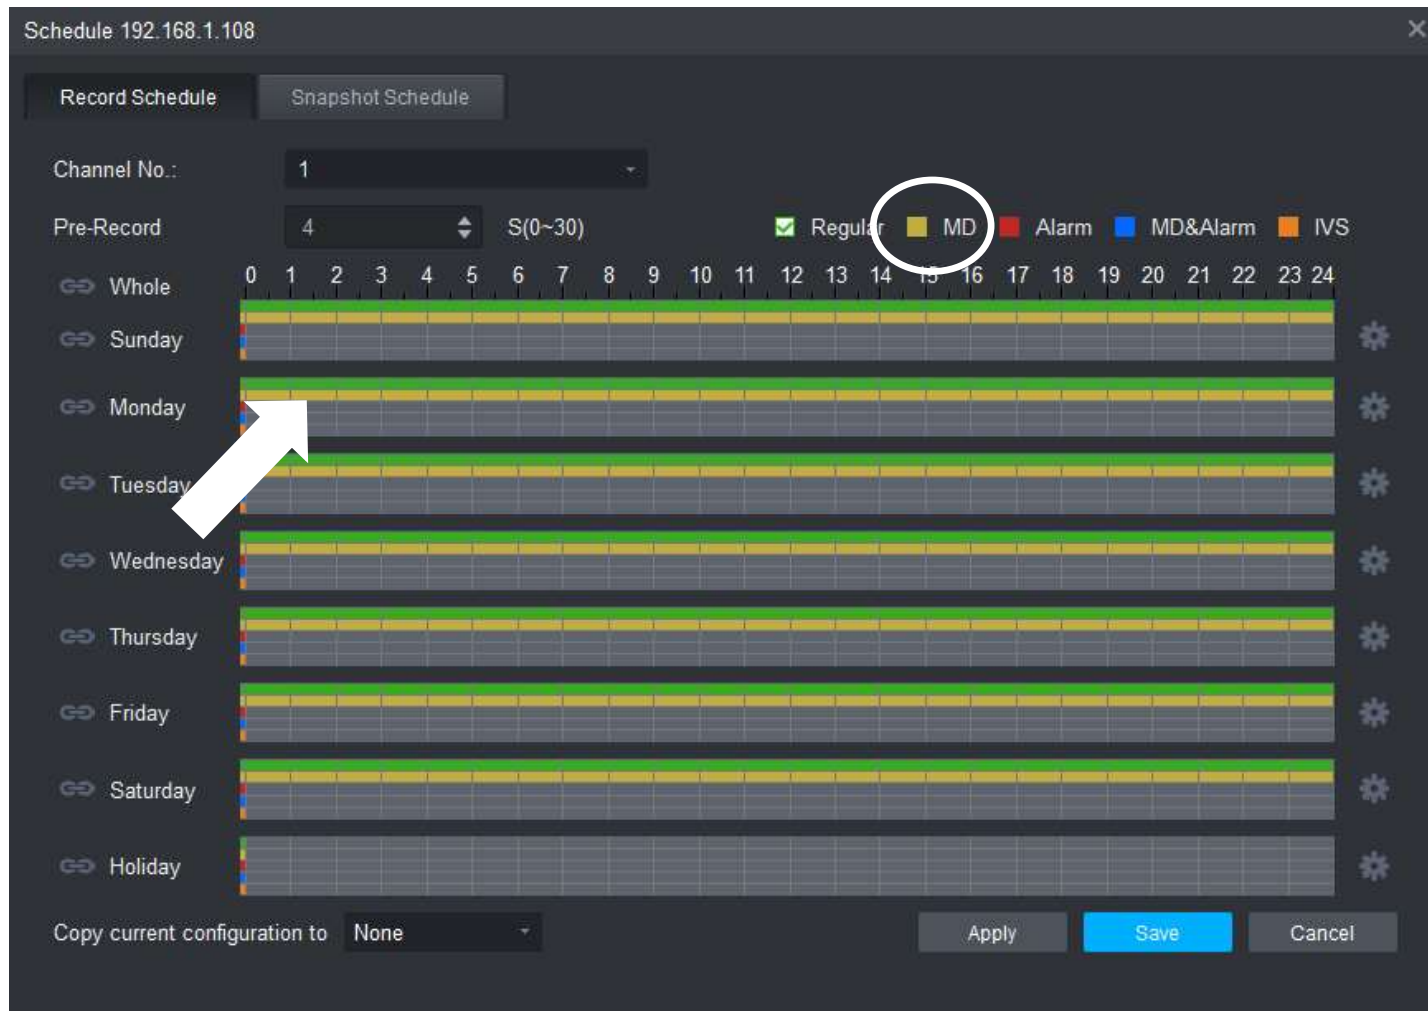

Click box to the left of MD

Drag/highlight time frames you want motion to record – it will highlight in yellow

Choose Apply then move to next camera by selecting Channel No.

Click Save when finished

SMART PSS

Device CFG +

18:34:54

Search...

▼ Default Group

192.168.1.108

192.168.1.199

Burn

Grosse

Hack

Hemp

KempsNaPa

Mino

Preston

Reliance

dENTAL

IP: 192.168.1.108

Device Model: N41B1P2

Software version: V4.001.0000003.0
Build:2020-07-27

SN: 6E08C72PCA6F3E2

Upgrade

Link to WEB

Camera

Network

Event

Storage

System

Return to Device CFG then select Event

Choose Video Detect

Event

Video Detect

Audio Detection

Abnormality

Alarm Audio

Video Detect 192.168.1.108

Motion Detect Video Loss Camera Masking

Channel No.: 1

☒ Enable

Arm/Disarm Period Set

Sensitivity 3

Anti-dither 5 Second(0-600)

Zone Set

☒ Record Channel 1 2 3 4

Delay Time 10 Second(10-300) ☐ Upload To Cloud

☒ Alarm Output

Delay Time 10 Second(0-300)

☐ PTZ Link Set

☐ Tour 1 2 3 4

☐ Snapshot 1 2 3 4

Copy current configuration to None

Apply Save Cancel

Select Channel No. (Cam)


Check Enable to turn on Video Detect

To set the Activity Zone(s) select Zone - Set


The default will have all boxes highlighted in Red. Any box with Red (or a color) is looking for motion

You can set 4 zones(regions) and set the sensitivity for each Region

Configure the areas(regions) and Choose Save

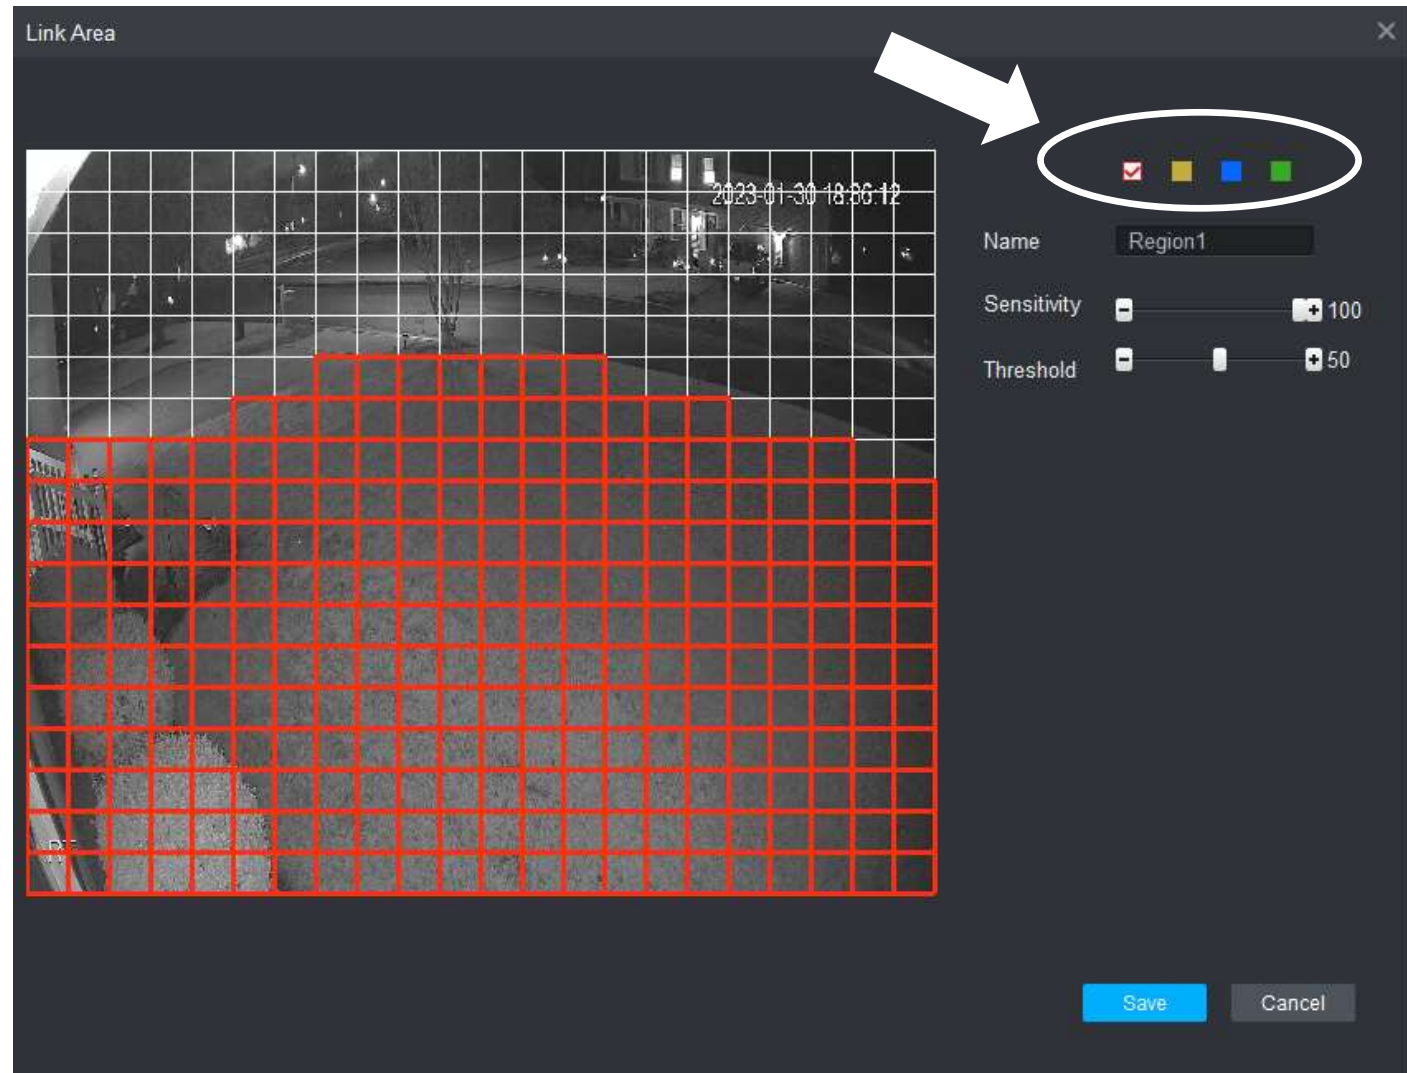

Once you have configured the motion settings you can go to Playback to view recorded motion

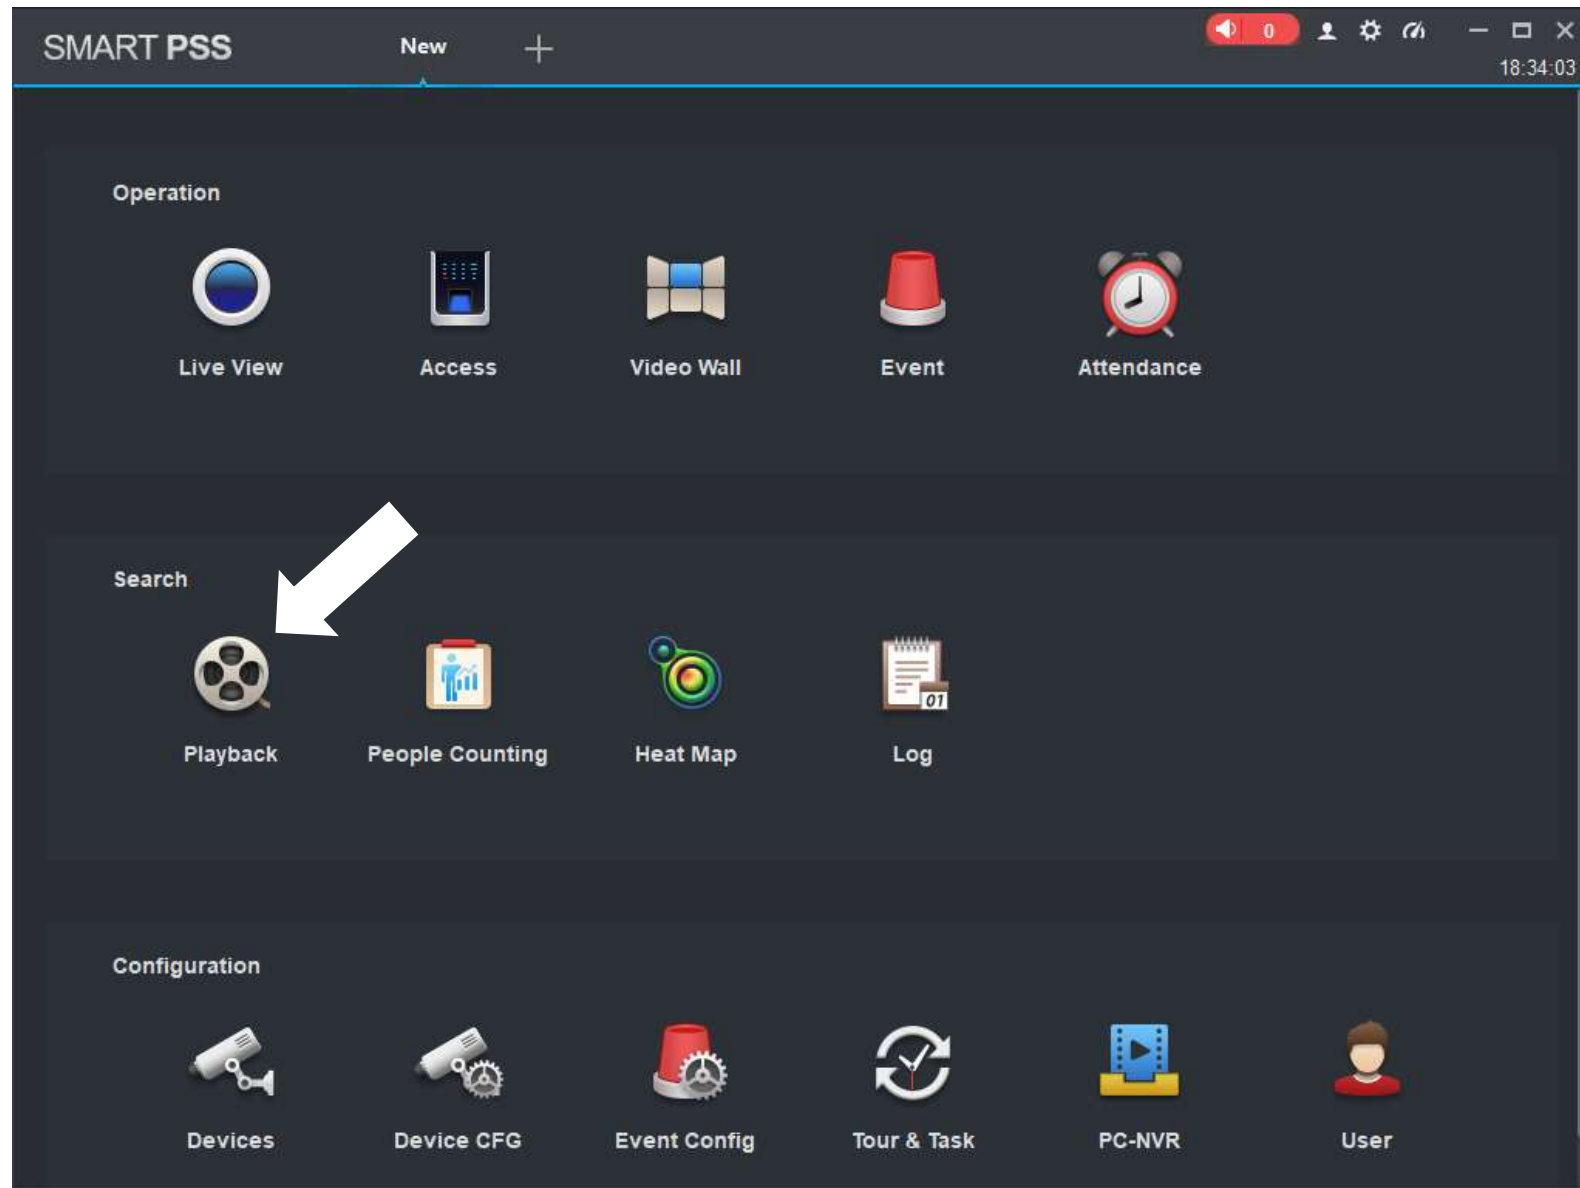


When you do a Playback you can view continuous playback, motion activity, or both. This is done by selecting Record Type.

Once you choose Search the slide bar will highlight corresponding to your selection







This pic shows continuous record and motion on the slide bar. The Green in continuous and the Yellow is motion

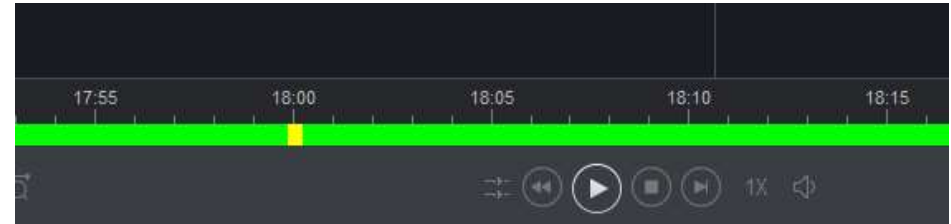


This pic show motion activity where the yellow marks are located



 
To activate the notifications on the phone you will need to go to DMSS on the phone. Start at the home screen.

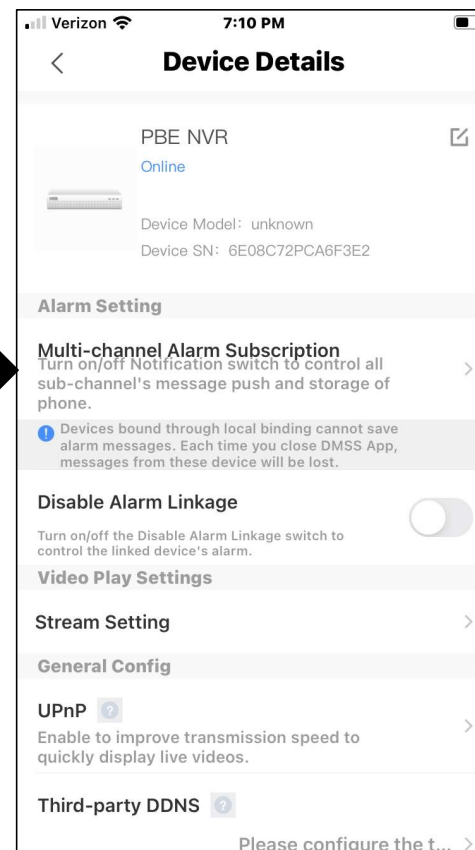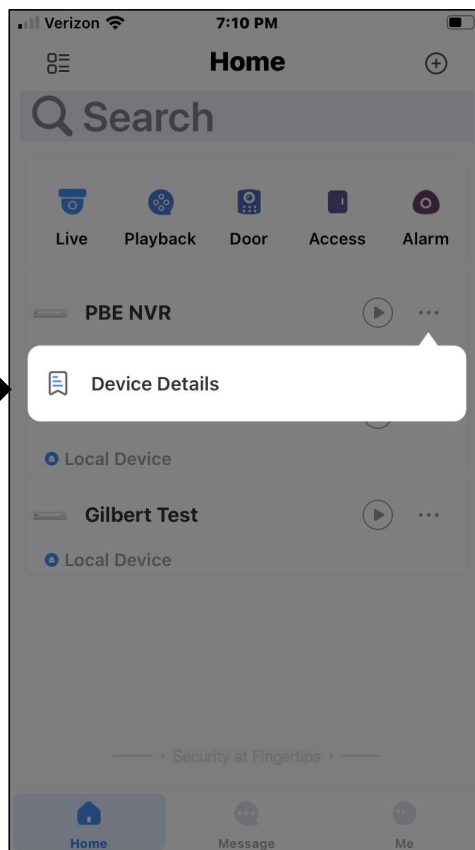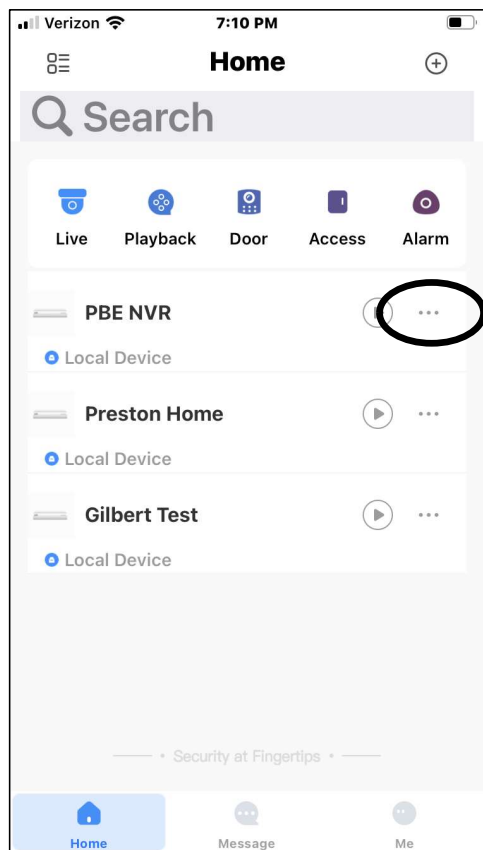


1 -Turn on Notifications

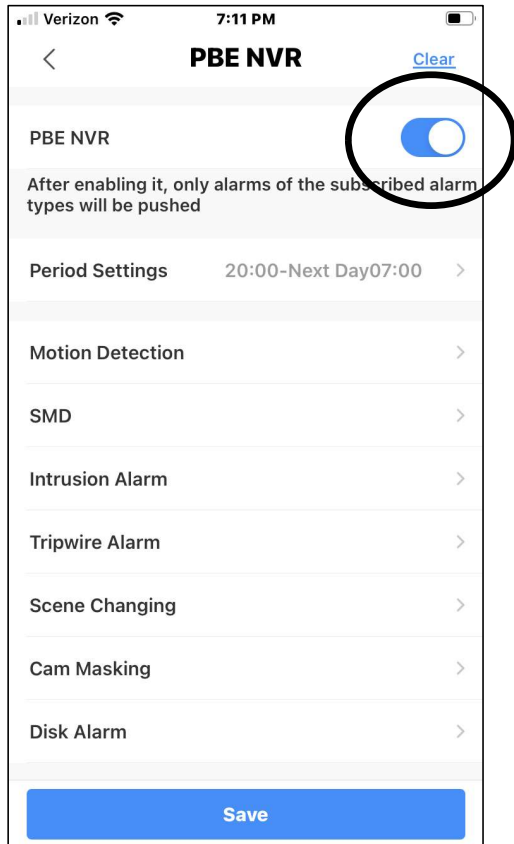

2 - Select Motion Detection

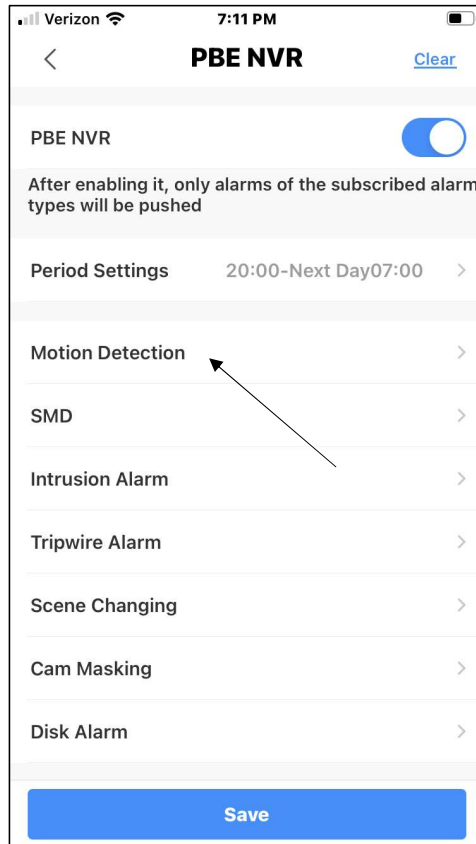


3 – Choose Cam(s) to send Notification

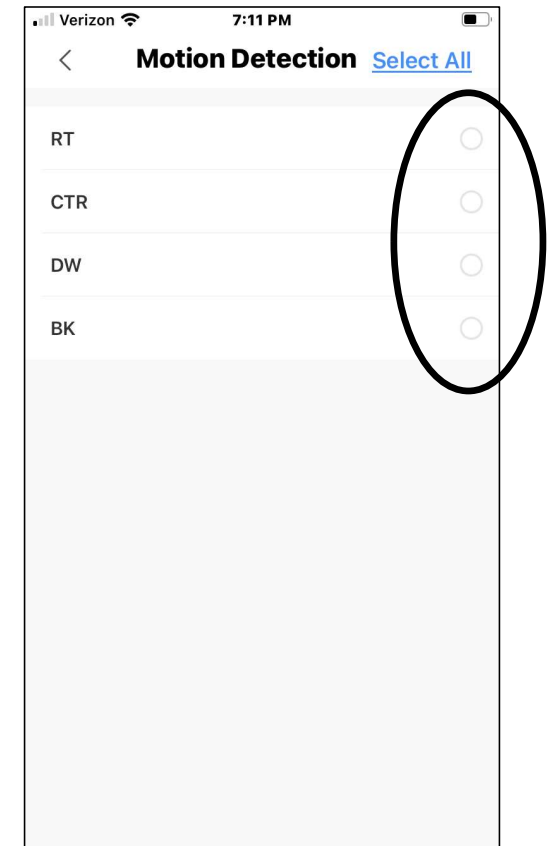

4 - Back up and Choose Save



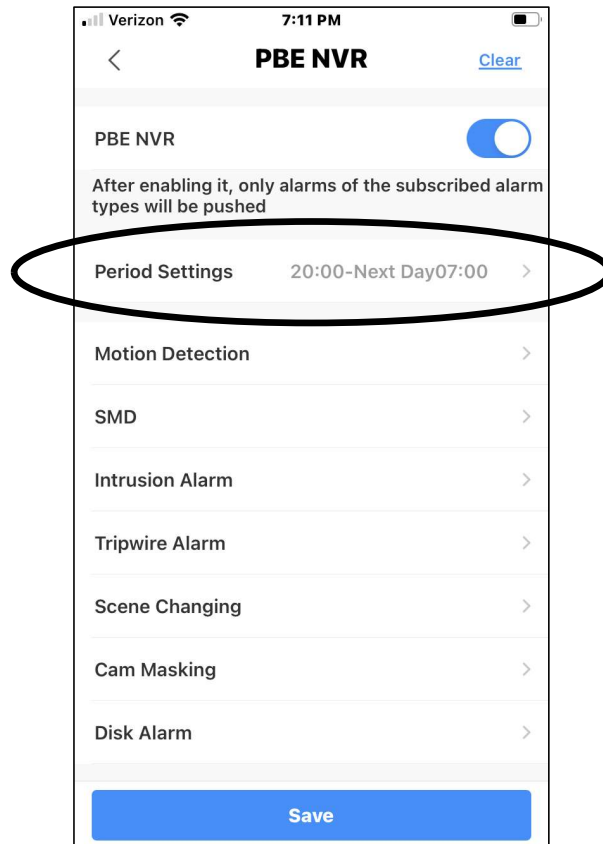

5 – Set time notifications will be active

6 - Save and exit