## **OUICK PROGRAMMING GUIDE FOR TILT WIREFREE™ RTS MOTOR**



#### Modulis Only - UP

Press momentarily on the UP igwedge button to tilt blind slats upward. Press the igwedge (STOP) button to stop the movement of the slats.



### Modulis Only - DOWN

Press momentarily on the (DOWN) button to tilt blind slats downward. Press the (STOP) button to stop the movement of the slats.



#### Modulis Only: Using the Scroll Wheel

For precise slat positioning scroll the wheel of the Modulis transmitter to move the blind slats up or down. The slats will move in relation to the motion of the wheel on the transmitter.

### Activate the Preferred "MY" Position

Press momentarily on the (STOP) button. The slats will start moving and stop at the pre-programmed (my) (STOP) "Preferred" slat position.

# **Resetting all Pre-Programmed Limit Settings & Channels**



**To Delete ALL Transmitter Channels:** Using a paperclip, press and hold the PROGRAM BUTTON located on the motor head casing until blind jogs 2 times then release.

**To Delete all Previous Settings:** Using a paperclip, press and hold the PROGRAM BUTTON, located on the top of the motor casing until window covering jogs 3 times, then release button. All transmitters and limits will be erased. (Motor is now reset to **FACTORY MODE**). Motor limits will need to be reestablished. **Please return to PROGRAMMING MODE to initiate programming process.**