

Index of Photos and Illustrations

- Air cleaner 2-24,25(2C13,14); 3-34-39(3C25-32);
4-31-35(4C29-33); 4-39-41(4F2-5);
5-21-24(5C8-14); 6-20,21(6C11-13);
7-16,17(7C15-17); 8-20(8C7); 8-24(8C13);
8-27-29(8C17-20); 8-32(8F1); 9-15(9C6); J-25; J-53
- decals 2-25(2C14); 3-38,39(3C31,32); 4-34,35(4C32,33);
5-22-24(5C11-14); 6-21(6C13); 7-16(7C16);
8-28,29(8C19,20); 8-33(8F2); 9-15(9C6)
- Air conditioning 2-48-53(2K5-11); 3-56-63(3K8-22);
4-55-59(4K4-9); 5-53-66(5K9-29);
6-44-51(6K19-30); 7-30-41(7K9-25);
8-50-57(8K13-27); 9-26-30(9K6-13);
B-16,17,19,21-23; F-6,7,10; J-69-71,77,78; K-4,5
- Alternator 2-44(2J5,6); 3-52(3J4,5); 4-52,53(4J3,4);
5-42-47(5J1-7); 6-31(6J1); 6-34(6K6); 7-26(7J1);
8-41(8J1); 9-23(9J1); 9-27(9K7); B-11; K-2,3
- Automatic transmission tubes 6-31(6K1); 7-26(7K1)
- Bearings
camshaft 2-16(2B13)
connecting rod 2-8(2A16); 3-11(3A10); 6-7(6A4);
9-6(9A5)
crankshaft 2-7(2A14); 5-11(5A8); 9-5(9A3)
- Block 2-4-7(2A2-12); 3-7,8(3A3-6); 4-6,7(4A2-4);
5-9,10(5A3-6); 6-7(6A3); 7-4(7A2); 8-4-6(8A2-4);
9-4(9A1); E-3; J-11,14
- Camshaft 2-16,17(2B13,14); 3-20(3B8); 7-7(7B4); G-1,3
- bearings 2-16(2B13)
sprocket 2-17(2B14); 3-20(3B9,10); 4-12(4B8);
5-15(5B5); 6-13(6B7); 8-16,17(8B7,8); 8-32(8E4);
9-12(9B7,8)
- thrust plate 2-17(2B14); 3-20(3B9); 4-12(4B8);
5-15(5B5); 8-6(8A4); 8-16,17(8B7,8); 8-32(8E4);
9-12(9B8)
- Carburetor 2-20-22(2C4-8); 3-25-30(3C8-17);
4-16-24(4C6-18); 5-18-20(5C3-6); 6-16-18(6C2-7);
7-9-15(7C3-14); 8-18-20(8C2-8);
8-22-26(8C11-15); 9-13-15(9C2-4); C-2,9,15;
J-22,24,25,27,30-33,35-39,41
- choke tube 2-24(2C12); 2-27(2D3); 3-34,35(3C25,26);
3-43(3D3); 4-30(4C28); 6-19,20(6C9,10);
7-15(7C14); 9-15(9C6)
- spacer 2-22(2C9); 3-25(3C7); 3-31,32(3C18-22);
4-25(4C19)
- throttle linkage 2-23(2C10,11); 3-33(3C23,24);
4-25-29(4C20-27); 5-18(5C3); 5-21(5C7);
6-18,19(6C7,8); 7-15(7C13); 8-21,22(8C9,10);
8-26(8C16); 9-15(9C5); J-24,28,29
- Choke tube 2-24(2C12); 2-27(2D3); 3-34,35(3C25,26),
3-43(3D3); 4-30(4C28); 6-19,20(6C9,10);
7-15(7C14); 9-15(9C6)
- Coil 2-40(2H7,8); 4-48(4H4); 5-41(5H5); 6-30(6H1);
7-23(7H1); 7-25(7H5); 8-39(8H4); 9-23(9H2)
- Connecting rods 2-8(2A15); 3-10,11(3A9,10); 6-7(6A4);
8-7(8A7); 9-6(9A5); J-9
- bearings 2-8(2A16); 3-11(3A10); 6-7(6A4); 9-6(9A5)
- Crankshaft 2-7(2A13); 3-8,9(3A6-8); 8-7(8A7); 9-5(9A3)
- bearings 2-7(2A14); 5-11(5A8); 9-5(9A3)
- counterweight 3-21(3B11,12)
- damper 2-10,11(2A20-23); 3-13,14(3A15,16); 4-8(4A8);
5-12(5A11,12); 8-9,10(8A9-11); 8-34(8G1);
9-7(9A7); E-5
- flywheel/flex-plate bolts 2-7(2A13); 3-9(3A8); 4-8(4A9)
- pulley 5-12(5A12); 5-52(5K8); 5-54(5K10); 6-33(6K4);
7-27(7K4); 7-28(7K6); 8-9(8A10); 9-7(9A8); B-9;
J-13
- rear seal 9-5(9A4); J-14
- sprocket 2-17(2B14); 3-21(3B11); 5-15(5B5)
- Cylinder heads 2-12-16(2B1-12); 3-15-19(3B1-7);
4-9-12(4B1-7); 5-13,14(5B1-3); 6-8-12(6B1-6);
7-6(7B1,2); 8-11-14(8B1-4); 9-8,9(9B1,2); H-4-7;
J-15
- gaskets 2-13(2B6); 3-16(3B4); 8-15(8B5); 9-9(9B3)
with thermactor 6-9-11(6B2,3); 6-27(6F2); 7-6(7B1,2);
8-11-14(8B1-4)
- Decals
air cleaner 2-25(2C14); 3-38,39(3C31,32); 4-32(4C30),
4-34,35(4C32,33); 5-22-24(5C11-14); 6-21(6C13);
7-16(7C16); 8-28,29(8C19,20); 8-33(8F2);
9-15(9C6)
valve covers 3-45(3F3); 4-43(4F9); 8-33(8F2);
9-20(9F3)
- Dipstick 2-30,31(2E4,5); 4-53(4J4); 5-29(5E4); 6-25(6E2);
7-20,21(7E2); 8-32(8E3); 9-19(9E3)
- Dipstick tube 2-30(2E4); 2-35(2G1); 2-43(2J4); 3-46(3G1);
4-52-53(4J3,4); 5-29(5E4); 6-25(6E2); 8-31(8E2);
9-19(9E3)
- Distributor 2-38,39(2H1-5); 3-48,49(3H1,2);
4-47,48(4H1,2); 5-38-40(5H1-4); 7-23-25(7H1-4);
8-38(8H1); 9-22(9H1); D-5-7
- cap 2-39(2H5); 7-24(7H2)
- vacuum advance housing 2-38,39(2H1,3); 3-49(3H2);
4-47(4H1); 5-39,40(5H3,4); 7-24(7H3); 8-38(8H1);
9-22(9H1)
- vacuum advance line/ports 2-39(2H6); 4-48(4H3);
5-39(5H3); 7-10(7C5); 7-14(7C12); 7-24,25(7H3,4)
- vacuum control valve 7-38(7K22); 8-29(8C21);
8-37(8G5); 8-38,39(8H2,3); 9-28(9K10);
D-9,10; J-63
- Eccentric 2-17(2B14); 5-14(5B4)

Index guide example: 7-28-30(7K5-9). Photos related to 1967 power steering are found in Chapter 7 on pages 28 through 30. Photo captions are 7K5 through 7K9.

A - Engine Core
F - Ventilation

B - Valve Train
G - Cooling

C - Induction
H - Ignition

D - Exhaust
J - Generator/Alternator

E - Lubrication
K - Accessories