

## Code List – Lista de Códigos

<b>TV</b>		Daewoo.....	0001
Abex.....	0401, 4021	.....	0221, 0251, 0591, 0721, 0831
Acer.....	3291, 4001	.....	0971, 1011, 1081, 1221, 1231
Acme.....	0471	.....	1251, 1431, 1501, 1521, 1551
ADA.....	0461	.....	1561, 1941, 2181, 4321, 4681
ADC.....	1431, 1661	Daytron.....	0001, 1221
Admiral.....	0371, 0681, 1441, 1661, 4991	Dell.....	0981
Advent.....	3261, 0581	.....	1401, 2041, 3441, 3601, 3811
.....	0631, 0871, 2131, 2891, 4931	Diamond Vision.....	1211
Adventura.....	0151	.....	1611, 2001, 4771, 4811
Aiko.....	1011, 4321	Digimate.....	4301
Aiwa.....	0411	Digistar.....	0381, 0581, 0871, 1061
.....	0651, 0931, 1411, 4731, 4801	.....	2451, 2471, 3811, 3881, 3901
Akai.....	3215	Dimensia.....	1421, 1691, 3421
.....	3111, 0331, 0351, 0781, 1901	Dish Network.....	5491
.....	4141, 4151, 4461, 5141, 5171	Disney.....	0371, 1101
Alleron.....	1711	Distar.....	3231
Amark.....	1441	Dukane.....	1271, 1981
Ames.....	1275	Dumont.....	0001, 1771, 1781
Amtron.....	2191	Durabrand.....	0371, 0861
AMW.....	0645, 0825	.....	0921, 1381, 2271, 2291, 5121
ANABA.....	1375	Dynasty.....	1941
Anam National.....	0271	Dynex.....	5311, 3141, 3161, 0371, 2891
.....	1941, 2151, 2191, 2331, 3431	Electroband.....	0001, 1901
AOC.....	0001, 0011, 0251, 0391	Electrohome.....	0001, 1221, 1921, 2151, 3431
.....	0611, 0891, 1221, 4221, 4261	Elektra.....	1661
Apex.....	0045, 0191, 0245	Element.....	5361, 5411, 2401, 4111
.....	0375, 0425, 0431, 0671, 1025	Elite Video.....	0901
.....	1105, 1891, 2911, 4841, 5111	Emerson.....	5341, 2761, 5221, 5231, 0001
Archer.....	1441	.....	0021, 0031, 0041, 0271, 0281
Aspect.....	1271	.....	0291, 0371, 0441, 0451, 0691
Audiovox.....	2191, 2451, 4031, 4051, 4521	.....	0701, 0731, 0741, 0851, 0931
Aurora.....	3061	.....	1221, 1251, 1261, 1371, 1381
Axion.....	0881	.....	1451, 1461, 1551, 1611, 1631
Bang&Olufsen.....	1591	.....	1681, 1701, 1711, 1931, 1941
Belcor.....	0001	.....	2171, 2191, 2361, 3451, 4701
Bell&Howell.....	1261, 1421, 1661, 1691, 3421	.....	4731, 4751, 4761, 4831, 4911
BenQ.....	1741, 1761, 2221, 3871	Envision.....	5401
Bluesky.....	3511, 3921	.....	0001, 0071, 1221, 3751, 4261
Bradford.....	2191	ESA.....	1381
Broksonic.....	0211, 0371, 0851, 1631, 4951	Fisher.....	1161, 1261
Brokwood.....	0001	.....	1531, 1581, 1911, 3481, 5001
Candle.....	0001, 0151, 0961, 1221	Fluid.....	2401, 2421, 2431
Capehart.....	0391, 4221	Fujitsu.....	0901, 1711, 4241, 4341
CCE.....	3721	Funai.....	0701, 0931, 1381
Celebrity.....	1901	.....	1711, 1941, 2191, 4731, 4761
Celera.....	0191	Futuretec.....	1941, 2191
Centrios.....	1361	Gateway.....	0501
Centurion.....	1221	GE.....	0001, 0041, 0051, 0141
Cetomer.....	0001, 1631, 2901, 2961	.....	0261, 0361, 0791, 0811, 1221
Cetronic.....	1941	.....	1421, 1691, 1921, 1951, 2111
Changhong.....	0191, 1891, 4841	.....	2151, 3421, 3431, 4011, 4921
Chimei.....	3071	Gibraltar.....	0001, 1771, 1781
Cineral.....	3511, 4321	Gold Star.....	0001, 0251, 0611, 0761, 0931
Citizen.....	0001, 0351	.....	1181, 1221, 1501, 1911, 4731
.....	0371, 0961, 1011, 1221, 1311	GPX.....	4701
.....	1381, 1661, 1941, 2191, 4321	Gradiente.....	0001, 2291, 3661, 3951, 3961
Clairtone.....	0011	Grundy.....	1711, 2191
Classic.....	0191, 1891, 1941, 4841	Guestvision.....	1861
CLP.....	0061	Gvision.....	4871
CLP Classic.....	0001, 0041, 0161	Haier.....	0671
COBY.....	3351, 2511, 2521	.....	0861, 0921, 1741, 3831, 4851
.....	2531, 2541, 2551, 5091, 5191	Hallmark.....	0001, 1221
Color voice.....	1431	Hannspree.....	5451, 5461, 5291
Coloryme.....	0001, 1221, 1431	Harvard.....	2191
Concerto.....	0001, 1221	Hauppauge.....	3791
Concierge.....	1771, 1781	Hello Kitty.....	5391
Contec.....	0011, 1911, 1941, 2191	HP.....	3491, 4881
Cornea.....	1471	Hisense.....	5331, 4671, 0671
Craig.....	1941, 2191	.....	2081, 2211, 3671, 4381, 4391
Crosley.....	1961	Hitachi.....	3341
Crown.....	1941, 2191	.....	0001, 0841, 0931, 1041, 1221
CTX.....	1441	.....	1271, 1341, 1371, 1481, 1661
Curtis Mathes.....	5351	.....	1721, 1751, 1801, 1911, 1981
.....	5371, 0001, 0261, 0351, 1191	.....	2051, 3621, 4121, 4331, 4731
.....	1221, 1261, 1311, 1421, 1551	Hyundai.....	4651
.....	1661, 1691, 3421, 4011, 4941	ILO.....	3215
CXC.....	1941, 2191	.....	1141, 1381, 1971, 2391, 2481
Cybervision.....	3511	.....	3691, 4231, 5031, 5141, 5171

IMA.....2191  
 Infinity.....1171, 1961, 4791  
 InFocus.....3421  
 Initial.....2481, 4231, 4821, 5031, 5041  
 Insignia.....0371, 0581, 0701, 0871  
 .....0921, 1241, 1381, 2241, 2271  
 .....2891, 2921, 3761, 3841, 4371  
 .....4721, 4761, 5051, 5061, 5181  
 Integra.....1841  
 Inteq.....1771, 1781  
 ISymphony.....3041  
 Joneil.....0151  
 JBL.....1961  
 JC Penney.....0001, 0051, 0251, 0261  
 .....0351, 0791, 0811, 0961, 1221  
 .....1311, 1421, 1451, 1691, 1911  
 .....1921, 1951, 3421, 3451, 4011  
 JCB.....1901  
 Jensen.....0001, 1221, 2271  
 JVC.....5281, 0311, 0481, 0771, 0901  
 .....0941, 1281, 1481, 1801, 1911  
 .....2381, 2751, 4121, 4201, 5071  
 Kawasaki.....4741  
 Kawasho.....0001, 1221, 1901  
 Kaypani.....0391, 4221  
 KEC.....2191, 1941  
 Kenwood.....0001, 1221  
 KLH.....0191  
 Kloss Novabeam.....0151, 1021  
 Kogi.....4871  
 Konka.....5441, 0471, 0521  
 .....0751, 1241, 1671, 2121, 2191  
 .....2241, 2371, 4621, 4901, 4971  
 KTV.....0011, 1491, 1681, 1941, 2191  
 Kurazai.....1661  
 KWorld.....2931  
 Lasonic.....1211, 1611, 4811  
 Legend.....0581  
 LG.....5501, 5511  
 .....3001, 3021, 3091, 3221, 3281  
 .....3311, 5271, 0001, 0131, 0251  
 .....0611, 0761, 0931, 1181, 1221  
 .....1471, 1501, 1911, 3811, 4731  
 Liquidvideo.....0881, 1111  
 Lodgenet.....1421  
 .....1661, 1691, 2091, 3421, 4091  
 Loewe.....1871, 1961  
 Logik.....1421, 1661, 1691, 3421  
 Luce.....0301  
 Luxman.....0001, 1221  
 Lxi.....0001, 0261, 0811  
 .....0931, 1221, 1261, 1311, 1421  
 .....1691, 1961, 3421, 4011, 4731  
 Magnasonic.....1711  
 Magnavox.....0001  
 .....0321, 0681, 0701, 0961, 1021  
 .....1171, 1221, 1801, 1961, 2321  
 .....4191, 4641, 4761, 4791, 4991  
 Majestic.....1421, 1661, 1691, 3421  
 Manhattan.....5381  
 Marantz.....0001, 1221, 1841, 1961  
 Maxent.....3361, 0501  
 Medion.....1101, 1141, 2351  
 Megatron.....0001, 1221, 1271  
 Mei.....0011  
 Memorex.....0001, 0211, 0371, 1161, 1221  
 .....1261, 1421, 1631, 1661, 1691  
 .....1711, 2401, 3421, 4251, 5001  
 MGA.....0001, 0251, 1221  
 .....1581, 1711, 1801, 1911, 1921  
 Midland.....0051, 0261  
 .....0811, 1691, 1771, 1781, 4011  
 Mintek.....4231  
 Minutz.....1951  
 Misakai.....1381  
 Mitsubishi.....3271, 0001, 0251, 1221, 1581  
 .....1711, 1801, 1811, 1921, 2701  
 Monivision.....0491  
 Montgomery Ward.....1421, 1661, 1691, 3421

Mateva.....1261, 3661  
 Motorola.....1441, 2151, 3431  
 MTC.....0001  
 .....0011, 0251, 0351, 1221, 1311  
 Multitech.....2191  
 Multivision.....0081  
 Myron&Davis.....2101  
 NAD.....0001, 0401, 1221, 1311, 4021  
 NEC.....0001, 0251, 0341, 1221, 1431  
 .....1801, 1841, 2151, 3431, 4401  
 Net TV.....0121, 0501  
 Nexstech.....0871, 1201  
 Nikei.....1941  
 Nikko.....0001, 1011, 1221, 4321  
 Niko.....3581  
 Norcent.....0511, 0671, 2181  
 NTC.....1011, 4321  
 Olevia.....3081, 2431  
 .....2771, 2781, 2791, 5151, 5161  
 Oncommand.....1861, 3991  
 Onking.....1941  
 Onkyo.....3101  
 Onwa.....1941, 2191  
 Optimus.....0201, 0401, 1571  
 .....1881, 3551, 4021, 4691, 5201  
 Optoma.....3121, 2441  
 Optonica.....0341, 1441  
 Orion.....0281, 0371, 1771, 1781  
 Panasonic National.....5481, 3381, 3401  
 .....0051, 0201, 0951, 1091, 1491  
 .....1571, 1651, 1831, 1881, 1961  
 .....2151, 2711, 2801, 3431, 3551  
 .....3771, 4691, 4781, 4861, 5201  
 Philco.....0001, 0251, 0321, 0961  
 .....1021, 1221, 1671, 1801, 1961  
 .....2151, 2321, 2941, 3431, 3931  
 Philips.....3031, 3131, 3151  
 .....3171, 3371, 3391, 0181, 0001  
 .....0161, 0321, 0421, 0541, 0661  
 .....0701, 0791, 0911, 0961, 1021  
 .....1151, 1171, 1381, 1391, 1601  
 .....1741, 1801, 1961, 2151, 2321  
 .....3431, 3541, 3591, 3861, 3911  
 .....3971, 3981, 4191, 4761, 4791  
 Philips Magnavox.....0181, 0681, 0911, 1171  
 .....1961, 2321, 3591, 4791, 4991  
 Pilot.....0001  
 Pioneer.....0001, 0401, 1221, 1371  
 .....1511, 1841, 1981, 4021, 4661  
 PIVA.....2411, 5021  
 Planar.....4251  
 Polaroid.....0191  
 .....0581, 1241, 2081, 2271, 2311  
 .....2401, 2451, 3741, 4631, 5131  
 Portland.....0001  
 .....0251, 1011, 1081, 1221, 1551  
 Precision.....0621  
 Price Club.....0351  
 Prima.....3011  
 .....0381, 0581, 0631, 0871, 2451  
 Princeton Graphics.....1301, 1441  
 Prism.....0051  
 Proscan.....0261, 0811, 1421  
 .....1691, 2061, 2301, 3421, 4011  
 Proton.....0001, 0391, 0641, 1221  
 .....1911, 2231, 4211, 4221, 4271  
 Prottron.....3731, 4301  
 Proview.....2401, 2421, 2431  
 Pulsar.....0001, 1771, 1781  
 Pyle.....3331  
 Quasar.....0051, 0201, 1091  
 .....1491, 1571, 1831, 1881, 1961  
 .....2151, 3431, 3551, 4691, 5201  
 Radio Shack.....0001, 0141, 0341, 0931  
 .....1001, 1221, 1261, 1421, 1571  
 .....1691, 1701, 1911, 1941, 2111  
 .....2191, 3421, 3551, 4731, 4921  
 RCA.....0001, 0051, 0091  
 .....0141, 0251, 0261, 0361, 0551

.....0811, 0891, 1001, 1131, 1221  
 .....1331, 1371, 1421, 1521, 1691  
 .....1851, 1921, 2011, 2061, 2111  
 .....2151, 2251, 2301, 2851, 2951  
 .....3421, 3431, 3571, 4011, 4921  
 Realistic.....0001, 0141  
 .....0341, 0931, 1001, 1221, 1261  
 .....1421, 1571, 1691, 1701, 1911  
 .....1941, 2191, 3421, 3551, 4731  
 Rhapsody.....0011  
 Runco.....1771, 1781, 1841  
 Sampo.....0001, 0121  
 .....0391, 0501, 1221, 1911, 4221  
 Samsung.....5471, 5521, 3301, 3321  
 .....2741, 2961, 0331, 0001, 0101  
 .....0251, 0261, 0351, 0531, 0571  
 .....0711, 0781, 1191, 1221, 1311  
 .....1501, 1911, 2071, 2141, 2721  
 .....3471, 3561, 4011, 4941, 4961  
 Samsux.....1221  
 Samtron.....0351  
 Sansui.....5551, 0211, 0371, 1631  
 Santeca.....0171  
 Sanyo.....2981, 2991, 3051  
 .....5251, 2871, 5241, 5261, 0001  
 .....0801, 1051, 1161, 1261, 1531  
 .....1581, 1911, 2881, 3481, 5001  
 Sceptre.....3521, 4071, 5111  
 Scotch.....0001, 1221  
 Scott.....3215, 0001, 0021, 0281  
 .....1221, 1711, 1941, 2191, 5141  
 Sears.....0001, 0211, 0261  
 .....0351, 0701, 0811, 1221, 1261  
 .....1291, 1311, 1381, 1421, 1531  
 .....1581, 1691, 1711, 1911, 1961  
 .....2021, 3421, 3481, 4011, 4761  
 Selectron.....2471, 2491, 2501  
 Semp.....3611  
 Sharp.....5421, 3181, 3191, 3201  
 .....2731, 0001, 0341, 0461, 0681  
 .....0691, 1221, 1291, 1441, 2031  
 .....2201, 2261, 3461, 4751, 4991  
 Shogun.....0001  
 Signature.....1421, 1661, 1691, 2171, 3421  
 Signet.....2811, 2821, 2861  
 Simpson.....0961  
 Sonic.....0011  
 Sony.....5321  
 .....1071, 1641, 1731, 1901, 2161  
 .....2741, 3531, 3891, 4101, 4981  
 Soundesign.....0001  
 .....0961, 1221, 1711, 1941, 2191  
 Sova.....3631, 4431  
 Soyo.....4611, 5101  
 Spectra.....1611  
 Spectravision.....2341  
 Squareview.....1381  
 SSS.....0001, 1941, 2191  
 Star Sight.....0061  
 Starlite.....2191  
 Superscan.....0701, 1291, 2021, 4761  
 Supersonic.....0241, 4701  
 Supra.....0001, 1991  
 Supremacy.....0151  
 Supreme.....1901  
 SVA.....0671, 2101  
 Sylvania.....0001, 0321  
 .....0371, 0701, 0931, 0961, 1021  
 .....1221, 1381, 1801, 1821, 1961  
 .....2321, 2761, 3701, 4731, 4761  
 Symphonic.....0021, 0701  
 .....0931, 1381, 2191, 4731, 4761  
 Syntax.....2431, 5151, 5161  
 Tandy.....1441  
 Tatung.....1141, 1741, 2151, 3431  
 TCL.....2851, 0091, 1421  
 .....1691, 1851, 2011, 2061, 2111  
 .....2301, 3421, 3431, 3571, 4921  
 Technics.....0051

Techwood.....0001, 0051, 1221  
 Teknika.....0001, 0151, 0251  
 .....0351, 0961, 1011, 1221, 1311  
 .....1421, 1571, 1661, 1691, 1711  
 .....1911, 1941, 2191, 3421, 3551  
 Telecaption.....0821  
 Telerent.....1421, 1661, 1691, 3421  
 Tera.....0001, 0641  
 Tevion.....1141  
 TMK.....0001, 1221  
 Toshiba.....5531, 3211, 1311  
 .....0211, 0231, 0341, 0351, 0821  
 .....1121, 1191, 1261, 1351, 1541  
 .....1571, 1621, 1801, 1841, 1911  
 .....2691, 3551, 4891, 4941, 5081  
 Trutech.....2461, 3821, 4551  
 Universal.....0791, 1951  
 Venturer.....3781  
 Victor.....1481, 4121  
 Videocon.....4061  
 Vidtech.....0001, 0251, 1221  
 View Sonic.....5301  
 .....0501, 1981, 3751, 3801, 4281  
 Viking.....0151  
 Viore.....5431, 2831, 2841, 3681  
 Visteon.....3411  
 Vizio.....5561, 5571, 5581, 5591  
 .....5601, 5611, 5621, 5631, 5641  
 .....5651, 5661, 5671, 5681, 5691  
 .....5701, 5711, 2901, 1471, 1741  
 .....2021, 3651, 3741, 3851, 4081  
 Wards.....0001, 0021  
 .....0251, 0321, 0341, 0791, 0961  
 .....1021, 1221, 1321, 1421, 1661  
 .....1691, 1711, 1951, 1961, 3421  
 Westinghouse.....3241, 3251  
 .....0111, 1901, 2281, 3711, 3851  
 White-Westinghouse.....0601, 0931, 1081  
 .....1501, 1521, 1551, 3641, 4731  
 Yamaha.....0001, 0251, 1221, 1571, 3551  
 Zenith.....5281, 5271, 0001  
 .....0061, 0131, 0371, 0681, 0691  
 .....0931, 0941, 0991, 1011, 1031  
 .....1081, 1171, 1181, 1191, 1221  
 .....1251, 1271, 1471, 1631, 1661  
 .....1751, 1771, 1781, 1791, 2171  
 .....2291, 3501, 4201, 4321, 4731  
 .....4751, 4791, 4941, 4991, 5211

**TV/VCR COMBOS**

Admiral.....0302, 1682  
 Aiwa.....0312, 0432, 0752  
 Akai.....0032, 1592  
 Broksonic.....(0851 & 0462)  
 .....(0851 & 0892), 0942, 1631  
 Curtis mathes.....0652, 1522  
 Daewoo.....(1081 & 0762)  
 .....(1251 & 0082), 1092  
 Diamond vision.....(2001 & 0422)  
 Durabrand.....(2291 & 0182)  
 Electrohome.....0032, 1592  
 Emerson.....(0851 & 0462), (0851 & 0892)  
 .....(1251 & 0082), 0032, 0192  
 .....0232, 0312, 0332, 0432, 0942  
 .....1092, 1172, 1432, 1592, 1631  
 Fisher.....0602, 1712  
 Funai.....0312, 0432  
 GE.....1152, 1482  
 Goldstar.....0312, 0432, 1181  
 Gradiente.....(2291 & 0182)  
 Hitachi.....0312, 0432  
 Infinity.....0622  
 JVC.....0452, 4201  
 LG.....0312, 0432, 1181  
 LXI.....0312, 0432  
 Magnavox.....0302, 0412, 0622, 1682  
 Memorex.....0602, 0942, 1631, 1712  
 Mitsubishi.....0032, 1592

Optimus..... 1722, 0122, 1062, 1762  
 Panasonic..... 1722, 0122, 1062, 1762  
 Philips..... 0412, 0622  
 Philips Magnavox..... 0302, 0622, 1682  
 Quasar..... 1722, 0122, 1062  
 Radio Shack..... 0312, 0432, 1152, 1482  
 RCA..... (1691 & 0242), 1152, 1482  
 Realistic..... 0312, 0432  
 Samsung..... 0652, 1522, 1535, 2141  
 Sansui..... 0942, 1631  
 Sanyo..... 0602, 1712  
 Sharp..... 1682, 0302, 0332  
 Sony..... 0972, 1292, 1652  
 Sylvania..... 0312, 0432  
 Symphonic..... 0312, 0432  
 Toshiba..... 0652, 0902, 1402, 1522  
 White westinghouse..... (1081 & 0762)  
 ..... 0312, 0432  
 Zenith..... (1081 & 0762)  
 ..... (1251 & 0082), (2291 & 0182)  
 ..... 0302, 0312, 0332, 0432  
 ..... 0452, 0622, 0652, 0942, 1092  
 ..... 1181, 1522, 1631, 1682, 4201

**TV/DVD COMBOS**

Advent..... 1515  
 Akai..... (3215 & 3285), 4461  
 Apex..... (0191 & 1245)  
 Audiovox..... (4031 & 4481)  
 ..... (4051 & 1135), 4521  
 Axion..... (0881 & 1335)  
 Brooksonic..... 0015, 0211  
 Coby..... 3475  
 Changhong..... (0191 & 1245)  
 Classic..... (0191 & 1245)  
 Daewoo..... (1561 & 0065)  
 Diamond Vision..... (1611 & 0855)  
 ..... (2001 & 0422), 0455  
 Durabrand..... (2291 & 3885), 0205  
 Emerson..... 0412, 0445  
 Funai..... 0412, 0445  
 GPX..... 0135  
 Haier..... 0315, 1257  
 Ilo..... (3215 & 3285), 1945  
 Initial..... 0994, 1945, 2735  
 Insignia..... (1241 & 0285), (2891 & 3335)  
 ..... 0412, 0445, 2805, 2815, 3305  
 JVC..... 1685, 3015  
 Kawasaki..... 0325  
 Konka..... 1425, 1605  
 Lasonic..... (1611 & 0855)  
 Liquidvideo..... (0881 & 1335)  
 Magnavox..... 0412, 0445  
 Maxent..... 3361  
 Memorex..... 0015, 0211  
 Nextech..... 1201, 2005  
 Panasonic..... 0552, 0595, 1195, 1346, 3401  
 Philips..... 3371  
 ..... (1381 & 0702), 0412, 0445, 0795  
 Piva..... 1805  
 Samsung..... 1535  
 Sansui..... 0015, 0211  
 Sears..... 0015, 0211  
 Sharp..... (1291 & 3115)  
 Sova..... (3631 & 4431)  
 Supersonic..... 0135  
 Sylvania..... (1381 & 0702), 0412, 0445  
 Symphonic..... 0412, 0445  
 Toshiba..... 0015, 0115, 0211, 3075  
 Trutech..... 4551  
 Westinghouse..... (3711 & 2865)

**SAT/CBL**

ABC..... 0004, 0074, 0134  
 ..... 0464, 0594, 0784, 0794, 1034  
 ADB..... 1933  
 Adelphia..... 1404

..... 2023, 0514, 0574, 0744, 1523  
 ADTH..... 1393  
 Akai..... 1323, 1303  
 Allegro..... 0054, 0114  
 Americast..... 1594, 0254  
 Amino..... 2063  
 Amplica..... 0103  
 Antronix..... 0264, 0334  
 Archer..... 0264, 0334, 0404, 0474, 1044  
 Arris Gateway..... 1274  
 Astro..... 1273  
 AT&T..... 1963  
 ..... 2093, 0844, 1272, 0514, 0674  
 Bell..... 1963, 5491, 2073, 0173  
 ..... 2083, 2103, 0433, 0903, 0984  
 Bell Expressvu..... 0073  
 ..... 0173, 0343, 0433, 0903  
 Bell South..... 0254  
 Bendbroadband..... 1244  
 Bright House..... 1394, 0694  
 Buckeye..... 1233  
 Cable One..... 1384  
 Cabletenna..... 0264  
 Cableview..... 0264  
 Cablevision..... 1434  
 ..... 1404, 0514, 0654, 0694, 1523  
 Cebride..... 1374  
 Century..... 0474, 1723  
 Cetomer..... 0723, 1153  
 Channel Master..... 0283, 0393, 0483  
 Chapparral..... 0573, 0653  
 Charter..... 1304, 1404, 0824  
 ..... 1523, 0514, 0664, 0684, 0714  
 Charter Communications..... 1274  
 Charter Digital..... 1264  
 Cheyenne..... 0653  
 Cisco..... 1444  
 ..... 1444, 1464, 1474, 1484, 1494  
 Citizen..... 0474  
 Clearmax..... 1024  
 Cogeco..... 1294, 0514  
 Color Voice..... 0534, 0604  
 Comcast..... 1544, 1554  
 ..... 1283, 0824, 1404, 0514, 0684  
 Comtronics..... 0014, 0084  
 Contec..... 0144, 1054  
 Coolsat..... 1733, 1913  
 Cox..... 0514, 0824  
 ..... 1324, 1334, 1364, 1404, 1444  
 ..... 1454, 1464, 1474, 1484, 1494  
 Cox Digital Cable..... 1404, 0514, 0734  
 Digital Music Express..... 0044  
 Digital Stream..... 1203, 1194  
 Digiwav..... 1953, 1923  
 Director..... 0514  
 DirecTV..... 1504, 1514, 0203, 0213, 0233  
 ..... 0303, 0333, 0353, 0443, 0523  
 ..... 0553, 0623, 0703, 0793, 0803  
 ..... 0853, 0873, 0983, 0993, 1073  
 ..... 1083, 1093, 1103, 1113, 1123  
 ..... 1133, 1143, 1153, 1163, 1173  
 ..... 1183, 1193, 1353, 1443, 1513  
 ..... 1533, 1773, 1783, 1793, 1893  
 Dish Network..... 2073  
 ..... 2083, 1613, 0073, 0173, 0343  
 ..... 0403, 0433, 0493, 0603, 0783  
 ..... 0903, 1003, 1013, 1023, 1033  
 ..... 1043, 1053, 1063, 1503, 1683  
 Dishpro..... 0073  
 ..... 0403, 0493, 0603, 1503, 1683  
 Drake..... 0023, 0293, 0733  
 Dreambox..... 2113, 2123, 1553  
 DX Antenna..... 0383, 0753  
 Eastern..... 0214  
 Echosphere..... 0433  
 Echostar..... 0903  
 ..... 0073, 0173, 0343, 0403, 0433  
 ..... 0493, 0603, 0783, 1503, 1683  
 Emtec..... 4411, 4441

Entone.....	2043, 2053	.....	0474, 0494, 0554, 1064, 1084
Everquest.....	0014	.....	1094, 1104, 0203, 0303, 0443
Expressvu.....	0073, 0173, 0343, 0433, 0903	.....	0523, 0533, 0623, 0703, 0783
Fortec Star.....	0083	.....	1093, 1103, 1153, 1633, 1753
.....	0183, 0263, 0373, 0463, 0473	Philips Magnavox.....	0203
Fujitsu.....	0673, 0763	.....	0533, 0783, 0064, 0104
Garrard.....	0474	Pinnacle.....	1493, 1823, 1833
GC Electronics.....	0334	Pioneer.....	1404, 0532, 0985, 2855
GE.....	0384, 0874, 0333	.....	1853, 0024, 0274, 0614, 0924
.....	0543, 0643, 0723, 0793, 0803	Polaroid.....	4561
.....	0873, 1073, 1083, 1373, 1383	Primestar.....	1253, 0323, 0633, 1563, 1573
Gemini.....	0123, 0204, 0344	Prosat.....	0813, 1333
General Instrument(GI).....	0013	Proscan.....	0333, 0643, 0723
.....	0004, 0093, 0163	.....	0803, 0873, 1073, 1083, 1383
.....	0193, 0323, 0453, 0633, 0833	Pulsar.....	0154
.....	0893, 0953, 0963, 1573, 1583	Quasar.....	0154
.....	1603, 0044, 0074, 0314, 0374	Radio Shack.....	0064, 0104, 0114, 0964
.....	0464, 0514, 0594, 0634, 0784	RCA.....	0244, 0394
.....	0794, 0814, 0884, 0894, 1034	.....	0474, 1014, 1083, 0333, 0363
Geosatpro.....	2003	.....	0543, 0643, 0723, 0793, 0803
Globecast.....	0003, 1004	.....	0873, 1073, 1373, 1383, 1873
Go Video.....	1883	RCN.....	0514, 0824
Gold Star.....	0924	Realistic.....	0334, 0273, 0843, 1643
Hamlin.....	0414, 0464, 0484, 0544, 0784	Regal.....	0544
Hitachi.....	0594, 0303	Regency.....	0214
.....	0443, 0523, 0623, 1103, 1153	Rembrandt.....	0594
HNS.....	1153	ReplayTV.....	1272
Hughes.....	0593, 1343	Rogers.....	1344, 0174, 1523
Hughes Network.....	0303	Runco.....	0154
.....	0443, 0523, 0563, 0593	Samsonic.....	1433
.....	0703, 1093, 1103, 1153, 1343	Samsung.....	4451, 1213
Humax.....	1505	.....	0043, 0233, 0853, 1113, 1123
Illico.....	1354, 1404, 1523	.....	1143, 1763, 0014, 0024, 0924
ILO.....	1035	Scientific Atlanta.....	1324
Insight.....	1284, 1314	.....	1334, 1364, 1404, 1414, 1444
Jasco.....	0474	.....	1454, 1464, 1474, 1484, 1494
Jerrold.....	0004, 0074, 0194	.....	0124, 0134, 0164, 0234, 0294
.....	0314, 0324, 0444, 0464, 0514	.....	0574, 0714, 0804, 0834, 0864
.....	0594, 0784, 0794, 0814, 1034	Seiki.....	1263
JVC.....	1145, 0433, 0783	Sharp.....	1853
Kenwood.....	0413	Shaw.....	1524, 0514
Knology.....	1424, 1344, 1284, 1564	Sierra I II III.....	0653
LG.....	2925, 0303, 1103, 1153	Signal.....	0014
Liteon.....	1035	Signature.....	0594
Luxor.....	0503, 1653	Sky Network.....	0053, 0133, 1363, 1593, 1673
Macom.....	0613	.....	1743, 1753, 1773, 1783, 1793
Magnavox.....	0203, 0533, 0783, 0094, 1064	SL Marx.....	0014
Mediacom.....	1284, 1584	Sonic Blue.....	1272
Medion.....	1035	Sony.....	1162, 1302, 2865, 2985, 3055
Memorex.....	0154	.....	0113, 0353, 0553, 0773, 1893
Microyal.....	1423	Sprucer.....	0394, 1014
Mitsubishi.....	1534, 0303, 0443	Standard.....	0364
.....	0523, 0623, 1093, 1103, 1153	Star Sight.....	0244, 0863
Motorola.....	0453, 1573	Star Trak.....	0423, 0184
.....	1593, 1603, 1863, 0004, 0074	Starchoice.....	0163
.....	0194, 0314, 0374, 0514, 0594	.....	0323, 0633, 1563, 1573, 1583
.....	0634, 0684, 0794, 0814, 0824	Starcom.....	0314, 0464, 0784
.....	0844, 0884, 0894, 0914, 1034	Stargate.....	0014
Movie Time.....	0224, 1074	STS.....	0383, 0583, 0663
Moxi.....	1274	Super Guide.....	0513
NEOSTAT.....	1413	Sylvania.....	1903
NET.....	1543, 1713	Tandy.....	0434, 0974
Norstat.....	0683	Televue.....	0014
Novaplex.....	0834, 0854	Telsat.....	1723
Nowtv.....	1473	Telus.....	1943
NSC.....	0224, 1074	Texscan.....	0364
OAK.....	0144, 0354, 1054	Thomson.....	0803, 1753
Omegasat.....	1983	Time Warner.....	1254, 1424, 1404
Onkyo.....	1243	.....	0514, 0694, 0724, 0824, 1523
Orasat.....	1973	Tivax.....	1293
Orion.....	1523	Tivo.....	0092, 0252, 0353, 0982, 1052
Pace.....	1363	.....	1162, 1492, 1502, 1505, 1542
.....	0053, 0133, 1593, 1673, 0904	.....	1745, 1223, 0704, 0754, 0764
Panasonic.....	0545, 1272, 0304, 0394, 0954	Tocom.....	0004
.....	1014, 0213, 0223, 0243, 1353	.....	0444, 0504, 0634, 0934, 1034
Pansat.....	1993, 0033, 0883, 1403	Toshiba.....	1735, 1745
Paragon.....	0154, 0284	.....	3325, 0154, 0063, 0143, 0303
Philips.....	0092, 0252, 1052, 1163, 1492	.....	0443, 0523, 0623, 0713, 0743
.....	1502, 1542, 0094, 0344, 0424	.....	0973, 1093, 1103, 1133, 1153



TV86.....	0224, 1074
TV A.....	1703
Ultimate TV.....	0333, 0553, 0873
Uniden.....	0693, 0823, 0863
Unika.....	0264, 0334, 0474
United.....	1663
United Cable.....	0464, 0784
Universal.....	0054, 0264, 0334
.....	0404, 0474, 0564, 0944, 1044
Verizon.....	2033, 1404, 0514
.....	1283, 0174, 0684, 0824, 1523
Video Cipher ii.....	0023
Video Tech.....	0454
Videotron.....	1404, 1574, 1523
Videoway.....	0034
Viewsat.....	1803
Viewstar.....	0084, 0094
.....	0224, 0434, 0974, 1064, 1074
Visionetics.....	1483
Visiontec.....	1693
Voorn.....	2971
V-Tech.....	1813
Web TV.....	0113, 0783
Zenith.....	0114
.....	0154, 0474, 0524, 0584, 0624
.....	0644, 0023, 0123, 0153, 0253
.....	0293, 0313, 0733, 1173, 1593
Zenith Network.....	0254
Zinwell.....	2013

#### HDTV Set Top Boxes

Apex.....	2911
Charter.....	0174, 1523
Directv Models.....	0703
.....	0983, 1443, 1513, 1533
GE HDSTB.....	0874
Go Video Hdt100.....	2631
Hitachi 61hdx98b.....	1103, 2661
Hughes Hird E8.....	0303
.....	1103, 1153, 2591, 2651, 2661
Hughes Htl HD.....	0303
.....	1103, 1153, 2591, 2651, 2661
Insignia.....	2921
KWorld SA290QE.....	2931
LG HTL HD.....	0303
.....	1103, 1153, 2591, 2651, 2661
LG LSS 3200a.....	0303
.....	1103, 1153, 2591, 2651, 2661
Mitsubishi SRHD 400.....	1103, 2661
Mitsubishi SRHD 500.....	1103, 2661
Mitsubishi SR HD5.....	1103, 2661
Motorola HDT100.....	2601
Motorola HRT100.....	2601
Philco TB100HH9.....	2941
Philips DSHD800R.....	1103, 2661
Pioneer SH-D505.....	2561
Proscan PSHD105.....	0803, 2581
RCA DTA800B1.....	2951
RCA DTC-100.....	0803, 2581
RCA DTC-210.....	0803, 2581
RCA HD65W20.....	2611
RCA PSHD105.....	0803, 2581
Samsung SIR-T165.....	1143, 2671
Samsung SIR-T351.....	1143, 2671
Samsung SIR-TS160.....	1123, 2621
Samsung SIR-TS360.....	1123, 2621
Sony SATHD100.....	2681
Sony SATHD200.....	2681
Sony SATHD300.....	2681
Sylvania 6900DTD.....	2641, 2941
Toshiba DST3100.....	0303, 1153, 2591, 2651
Toshiba DW65x91.....	0303, 1153, 2591, 2651
Toshiba DST3000.....	0303, 1153, 2591
Venturer.....	1164
Zenith DTV1080.....	1173, 2571
Zenith HDSTAT420.....	1173, 2571
Zenith HDSTAT520.....	1173, 2571

#### DTV

Access HD.....	1234
Airlink101.....	1174
Alpha Digital.....	1234
Amtc.....	1234
Apex.....	1114
Artec.....	1224
Cadence.....	1214
Channel Master.....	1204
Coship.....	1214
Digitalstream.....	1194
Dish Network.....	0073
Echostar.....	0073
GE.....	0874
Goodmind.....	0874
Gridlink.....	1144
iNet Access.....	1234
Insignia.....	1184
Kingbox.....	1224
Lasonic.....	1144
Magnavox.....	2941
Microgem.....	1154
Philco.....	2941
RCA.....	1083
Sansonic.....	1144
Skardin.....	1174
Sunkey.....	1134
Tivax.....	1234
Venturer.....	1164
Winegard.....	1164
Zenith.....	1184
Zentech.....	1174
Zinwell.....	1124

#### STREAMING MEDIA

Apple.....	5541, 4295
Asus.....	1684
Dlink.....	1614, 1724
HP.....	1624
lomega.....	1744
LG.....	1714
Magnavox.....	1704
Netgear.....	1604, 4475
Niveus.....	1634
Philips.....	1654
Popcorn Hour.....	1664
RCA.....	1694
Roku.....	4395, 4355
Seagate.....	1674
Sling Media.....	1644
Vudu.....	1734
WD.....	4345, 4265
X-Box.....	4245, 4255

#### DVD

Acesonic.....	3135
Advent.....	1515
Afreedy.....	0575
Aiwa.....	0035, 0195, 0235, 3285, 3565
Allegro.....	3725, 3885
Ames.....	1275
AMW.....	0645, 0825
Anaba.....	1375
Apex.....	0045, 0245
.....	0375, 0425, 0615, 0845, 0945
.....	0965, 1025, 1065, 1105, 1235
.....	1245, 1405, 1675, 3825, 3895
Aspire.....	1695
Astar.....	3525
A-Trend.....	1585
Audiovox.....	1335, 3585, 3625
Axion.....	1335
B&K.....	0885
Blaupunkt.....	1105, 3895
Blue Sky.....	0215, 0245, 3155
Blue-Ray.....	2795, 2965, 2995, 3315



..... 3685, 3695, 3705, 3885, 3905  
 Body Sonic.....0575  
 Bose.....4455, 4465, 1475, 3955  
 Boss.....1325  
 Boston Acoustic.....3245  
 Britania.....3675  
 Broksonic.....0015, 0695, 1525, 3495  
 Cavs.....2745  
 Centrios.....0955, 1335, 1365, 1755, 1765  
 .....1785, 1795, 1845, 1875, 1895  
 .....1935, 1975, 2015, 3945, 3965  
 Cetomer.....0075  
 Changhong.....1245  
 Cine Vision.....0205, 3885  
 Citech.....2065  
 Citizen.....2065  
 Classic.....1245, 1275, 1965  
 COBY.....3835, 0085, 0245, 0475  
 .....0485, 0505, 0675, 0835, 2085  
 .....2095, 2105, 2115, 2125, 2155  
 .....2655, 2885, 3145, 3265, 3475  
 Concept.....1105, 3895  
 Conia.....0245  
 Contel.....2915  
 Criterion.....0785  
 Curtis International.....0835, 1005, 2885  
 Curtis Mathes.....4185  
 Cyber Home.....4155, 0175, 1015, 1585, 2045  
 Cyber Vision.....3595  
 Cytron.....0435, 0725  
 Daewoo.....0065, 0345, 1115, 1285, 1385  
 Denon.....1075, 1265, 3315  
 Denzel.....0765  
 Desay.....0865  
 Diamond Vision.....0465, 0855, 1485, 3755  
 Digitrex.....0245  
 Digix.....0125  
 Disney.....0795, 3815  
 Drive.....3535  
 Dual.....0005  
 .....0435, 0515, 0605, 0765, 3035  
 Durabrand.....0205, 0435, 0955, 2685, 2935  
 .....3515, 3525, 3885, 3925, 3945  
 DVD 2000.....1415  
 Dynex.....4235, 2455, 2255  
 Eigervision.....3615  
 Element.....4305  
 Elta.....0055, 0235  
 Emerson.....0205, 0445, 0795, 0975  
 .....1185, 3745, 3815, 3855, 3885  
 Eso.....0515  
 Escient.....2845  
 Fahrenheit.....1205  
 Fisher.....0405, 2645  
 Funai.....0445, 0795, 3745, 3815, 3855  
 GE.....0915, 1105, 3895  
 Gold Star.....0205, 3885  
 Go Video.....0075, 0255  
 .....0415, 0565, 0665, 1275  
 .....1315, 1385, 1495, 3735, 3765  
 GPX.....0135, 0495  
 Gradiente.....0215, 3635, 3645  
 Greenhill.....1105, 3895  
 Haaz.....1295, 1465  
 Haier.....0315, 4015  
 Harman/Kardon.....0585  
 HD-DVD.....2795, 2835, 2965  
 .....3685, 3695, 3705, 3885, 3905  
 Helios.....2275  
 Hello Kitty.....4195  
 Hitachi.....0025, 0545  
 .....0565, 0765, 0925, 1245, 3765  
 Hiteker.....0245  
 Humax.....1505  
 ILO.....1035, 1945, 3285  
 Infinity.....0575  
 Initial.....1105, 1945, 2735, 3895, 3935  
 Insignia.....4205  
 .....2365, 0975, 0205, 0285, 0445

.....0725, 1105, 1335, 1945, 2195  
 .....2805, 2815, 2915, 3305, 3335  
 .....3745, 3785, 3815, 3885, 3895  
 Integra.....1435  
 IRT.....2885  
 ISymphony.....2525  
 JBL.....0585  
 JVC.....2385, 2535  
 .....0155, 0395, 0755, 1145, 1685  
 .....2025, 2945, 3015, 3795, 3805  
 Jwin.....0275, 1065, 1655, 3275  
 Kawasaki.....0325, 0955, 3945  
 Kenwood.....0935, 1075  
 Kiss.....0765  
 KLH.....0375, 0465, 1105, 3895  
 Konka.....0285, 1085, 1255, 1425, 1605  
 Koss.....0215, 0725  
 KXD.....0085, 2885  
 Lasonic.....0855, 1295, 2825  
 Lennox.....0235, 1345, 3515, 3525  
 LG.....4285, 2335  
 .....2555, 2565, 2635, 0205, 0635  
 .....1565, 2925, 3785, 3885, 3915  
 Linn.....1635, 2955  
 Liquid Video.....1335  
 Liteon.....0805, 1035, 1495, 1575, 1905  
 Magnavox.....2425, 4105, 0975  
 .....0105, 0295, 0445, 0735, 0745  
 .....1045, 1055, 1225, 1395, 2945  
 .....3025, 3715, 3745, 3795, 3815  
 Marantz.....4105, 0205, 0735, 0745  
 .....1395, 1615, 2945, 3795, 3885  
 Maxent.....1665, 1685, 3015  
 Medion.....0435  
 .....0455, 1035, 1325, 1665, 3755  
 Memorex.....2375  
 .....0435, 1925, 2755, 3125, 3495  
 Meridian.....0735, 3795  
 Microsoft.....0915, 3255  
 Microvision.....1325  
 Mintek.....1105, 3895  
 Mitsubishi.....2585, 1415, 3895  
 Mustek.....1275  
 Myron&Davis.....1555  
 NAD.....0205, 1625, 3295, 3885  
 Nakamichi.....1445  
 NEC.....3885  
 Nesa.....1105, 1555, 3895  
 Nexstech.....0125, 0145, 0335, 0515, 0725  
 .....0955, 1025, 1545, 1755, 1765  
 .....1785, 1815, 1835, 2005, 2055  
 .....2915, 3505, 3825, 3945, 3965  
 Norcent.....0305, 0485, 0655, 0835, 1575  
 Onkyo.....2355  
 .....2505, 0355, 1435, 3795, 3985  
 Optimus.....0025, 1245, 2975  
 Orion.....0015, 3495  
 Oritron.....0215, 1935  
 Pacific.....0435  
 Panasonic.....4175  
 .....2395, 2595, 2605, 0165, 0385  
 .....0545, 0595, 1075, 1195, 1215  
 .....2965, 3105, 3775, 3975, 4005  
 Philco.....3605  
 Philips.....2415  
 .....2615, 2625, 4105, 0745, 0105  
 .....0265, 0445, 0735, 0795, 1045  
 .....1055, 1225, 1395, 1615, 2665  
 .....2705, 2765, 2775, 2945, 3165  
 .....3705, 3715, 3745, 3795, 3815  
 Philips Magnavox.....4105, 0735, 0745  
 .....1055, 1225, 1615, 2945, 3795  
 Pioneer.....0025, 0525, 0705, 0875, 0985  
 .....1245, 1595, 1775, 2675, 2695  
 .....2855, 2895, 2975, 3695, 3905  
 Piva.....1805  
 Polaroid.....0185  
 .....0685, 1025, 1485, 3665, 3825  
 Polk Audio.....4105

..... 0735, 0745, 1395, 2945, 3795  
 Portland..... 0235, 1545  
 Power Acoustik..... 3575  
 Proline..... 0215  
 Proscan..... 0915, 1135  
 Prosonic..... 0485  
 Protron..... 0305  
 Pyle..... 2515, 1155  
 Radio Shack..... 0955  
 ..... 0995, 1165, 1645, 2905, 3945  
 RCA..... 2465, 0215  
 ..... 0915, 0955, 1105, 1135, 1165  
 ..... 1645, 2755, 2905, 3895, 3945  
 Regent..... 1345, 3925  
 Reoc..... 1295  
 RIO..... 0205, 3885  
 RJ Technology..... 1825, 2715  
 Rosen..... 1175, 3035  
 Rotel..... 0395  
 Saba..... 0995  
 Sampo..... 0575  
 Samsung..... 4125, 2285, 2325, 2345  
 ..... 2485, 4095, 0075, 0255, 0565  
 ..... 1305, 1535, 1725, 2185, 2725  
 ..... 2995, 3085, 3555, 3765, 3865  
 Sansui..... 0015, 0695, 3495  
 Sanyo..... 2495, 0095, 0405, 2205, 2215  
 ..... 2225, 2235, 2245, 2645, 3945  
 Sears..... 0015, 0445, 3495, 3745  
 Seg..... 0765  
 Selectron..... 1855, 1885, 1915  
 ..... 1955, 1995, 2035, 2075, 2875  
 Semp..... 0725  
 Sensory Science..... 1495  
 Sharp..... 4115  
 ..... 4315, 4325, 4335, 2315, 2445  
 ..... 0555, 0625, 0815, 2795, 3115  
 Sherwood..... 4225, 0225  
 Shinco..... 1105, 3895  
 Shinsonic..... 1105, 3895  
 Sonic Blue..... 0665  
 Sony..... 4165  
 ..... 4275, 2305, 0365, 0535, 0715  
 ..... 0725, 0895, 0905, 2165, 2865  
 ..... 2985, 3055, 3685, 3825, 3995  
 Soundstorm..... 1155, 1325  
 Sova..... 3545  
 Spectroni..... 2575  
 Sungale..... 0675, 1715  
 Superscan..... 0445, 3745  
 Supersonic..... 0135  
 SV2000..... 0445, 3745  
 SVA..... 0245, 0815  
 Sylvania..... 4215, 2405, 0445  
 ..... 0795, 3745, 3815, 3855, 3875  
 Symphonic..... 0445  
 ..... 0795, 0975, 3745, 3815, 3855  
 Tascam..... 0395  
 TCL..... 2435  
 Teac..... 0025, 0955, 1245, 3885, 3945  
 Technics..... 1075  
 Techwood..... 1625, 1985, 2945, 3845  
 Terapin..... 1705  
 Tevion..... 0435, 0605  
 ..... 0725, 0785, 1125, 1295, 1465  
 Theta Digital..... 0025, 1245  
 Tivo..... 0985, 1505  
 Toshiba..... 4145, 2295, 2475  
 ..... 2545, 0015, 0115, 0735, 1735  
 ..... 1745, 2135, 2145, 2175, 2835  
 ..... 3065, 3075, 3325, 3495, 3795  
 Tredex..... 1355  
 Trutech..... 1385, 2045, 3655  
 United..... 0955, 3945  
 Venturer..... 0955, 3065, 3945  
 Vizio..... 4135, 4405  
 ..... 4415, 4425, 4435, 4445, 2265  
 Westinghouse..... 2865  
 Wharfedale..... 0575, 1455

White Westinghouse..... 0795, 3815  
 X-Box..... 4245, 4255, 0915  
 Xenius..... 0725  
 Yamaha..... 4105, 0745, 1055, 1075  
 ..... 1095, 1225, 2785, 2945, 3005  
 Yamakawa..... 0765, 0775, 1865  
 Zenith..... 0205, 0635, 3785, 3795, 3885

#### Blue-Ray-DVD

Denon..... 4035  
 Dynex..... 4235  
 HP..... 4085  
 Insignia..... 4205, 0975, 2635  
 JVC..... 2385  
 LG..... 4285, 2635, 2335  
 Magnavox..... 2425  
 Memorex..... 2375  
 Onkyo..... 2355  
 Oppo..... 4365, 4375, 4385, 4045  
 Panasonic..... 4175, 2395  
 Philips..... 2415  
 Pioneer..... 4055  
 Samsung..... 4125, 2325, 2345, 4095  
 Sharp..... 4115, 2315  
 Sherwood..... 4225, 4065  
 Sony..... 4165, 4275, 2305  
 Sylvania..... 4215, 2405  
 TCL..... 2435  
 Toshiba..... 2295  
 Vizio..... 4135, 4025  
 Yamaha..... 4075

#### DVD-R

Apex..... 0845  
 Aspire..... 1695  
 Astar..... 2885  
 Broksonic..... 0695  
 Centrios..... 1365, 1935, 1975  
 Coby..... 2885  
 Cyberhome..... 1015  
 Emerson..... 1612  
 Funai..... 0412  
 Go-Video..... 1275, 1315, 1495  
 Hitachi..... 0545, 0925  
 Humax..... 1505  
 Ilo..... 1035  
 Insignia..... 0562  
 JVC..... 1145, 2025  
 KXD..... 2885  
 LG..... 0562  
 Liteon..... 0805, 1035, 1495  
 Magnavox..... 1055, 1225, 3025  
 Medion..... 1035, 1665  
 Memorex..... 1925, 3125  
 Mustek..... 1275  
 Oritron..... 1935  
 Panasonic..... 0545  
 Philips..... 1055, 1225, 2705, 3165  
 Philips-Magnavox..... 1055, 1225  
 Pioneer..... 0985, 2695, 2855  
 Polaroid..... 0185  
 RCA..... 0915  
 Samsung..... 1305, 4451  
 Sanyo..... 0095  
 Selectron..... 1955  
 Sharp..... 0625  
 Sony..... 2865, 2985, 3055  
 Sylvania..... 1612, 1672  
 Symphonic..... 1612  
 Toshiba..... 0682, 1735, 3325  
 Trutech..... 2045  
 Yamaha..... 1055, 1225  
 Zenith..... 0562  
 DVD/VCR COMBOS  
 Allegro..... (3885 & 0182)  
 Apex..... 0852, 1025  
 Broksonic..... 0015, 0211, 0695



Cinevision.....(0205 & 0182)  
 Daewoo.....1385  
 Diamond Vision.....0422, 0455  
 Durabrand.....(0205 & 0182)  
 Emerson.....(0702 & 0312)  
 .....0412, 0432, 0445, 0795  
 Fisher.....(0405 & 0472)  
 Funai.....(0702 & 0312)  
 .....0412, 0432, 0445, 0795  
 Go-Video.....0255  
 .....0402, 0415, 0542, 0565, 1385  
 Hitachi.....(0925 & 0432)  
 Insignia.....(0205 & 0182), 0562  
 JVC.....0692, 0755, 1145, 2025  
 LG.....0562, 0635  
 Liteon.....1905  
 Magnavox.....(0105 & 1642)  
 .....0342, 0412, 0445, 1045  
 Medion.....0422, 0455  
 Nexxtech.....(0486 & 0492)  
 .....0852, 0955, 1025, 2055  
 Panasonic.....0552, 0595  
 Philips.....(0105 & 1642)  
 .....0342, 0412, 0445, 1045, 1372  
 Pioneer.....1775, 2695  
 Polaroid.....0852, 1025  
 RCA.....(0915 & 0162)  
 Rio.....(0205 & 0182)  
 Samsung.....0255, 1662, 1725  
 Sansui.....0015, 0211, 0695  
 Sanyo.....(0405 & 0472)  
 Sears.....0015, 0211  
 Sony.....0832  
 Sylvia.....(0702 & 0312)  
 .....(0702 & 1392), 0312, 0412  
 .....0432, 0445, 0795, 1612, 1672  
 Symphonic.....(0702 & 0312)  
 .....(1612 & 1392), 0312  
 .....0412, 0432, 0445, 0795, 0975  
 Techwood.....1602, 1985  
 Toshiba.....0115, 0682, 0735, 3075  
 Trutech.....1385  
 White Westinghouse.....(0795 & 0432)  
 Zenith.....(0205 & 0182)

**VCR**

Accele.....0102  
 Admiral.....0302, 1682  
 Adventura.....0992  
 Aiko.....0082, 1092  
 Aiwa.....0182, 0312, 0432, 0752, 0992  
 Akai.....0312  
 .....1362, 0032, 0432, 0502, 0582  
 .....0712, 0872, 0982, 1212, 1592  
 Allegro.....0182  
 .....0452, 0792, 1182, 1732, 4201  
 American High.....1112  
 Apex.....0852  
 Asha.....0102  
 AT & T.....1272  
 Audio Dynamics.....0012, 0392, 0522, 0532  
 Audiovox.....0182  
 Beaumark.....0102  
 Bell & Howell.....0602, 1712  
 Broksonic.....0132, 0211  
 .....0322, 0442, 0462, 0572, 0695  
 .....0772, 0892, 0942, 1562, 1631  
 Calix.....0182  
 Candle.....0012  
 .....0022, 0102, 0182, 0882, 1082  
 Cannon.....0162, 0802, 1112  
 Canon.....0162, 1112, 1552  
 Capehart.....0792  
 Carver.....0482  
 CCE.....0082, 0362, 0372, 1092  
 Cine Vision.....0182, 1732  
 Citizen.....0012, 0022, 0082  
 .....0102, 0182, 0882, 1082, 1092

Colortyme.....0012  
 Colt.....0362, 0372  
 Craig.....0102, 0182, 0362, 0372, 0592  
 Curtis Mathes.....0012, 0082  
 .....0102, 0162, 0312, 0432, 0482  
 .....0652, 0732, 1112, 1472, 1522  
 Cybernex.....0102  
 Daewoo.....0022, 0082, 0762, 0882, 0892  
 .....0992, 1082, 1092, 1385, 1472  
 DBX.....0012, 0392  
 Denon.....0222  
 Diamond Vision.....0422  
 Dimensia.....0162  
 Durabrand.....0182, 1732  
 Dynatech.....0312, 0432, 0992  
 Electrohome.....0032, 0182, 1592  
 Electrophonic.....0182  
 Emerson.....0032, 0082, 0102, 0182, 0192  
 .....0232, 0312, 0322, 0332, 0412  
 .....0432, 0442, 0462, 0602, 0702  
 .....0732, 0742, 0752, 0772, 0882  
 .....0892, 0912, 0922, 0942, 0952  
 .....0982, 0992, 1012, 1032, 1092  
 .....1102, 1112, 1172, 1192, 1422  
 .....1432, 1562, 1592, 1631, 1712  
 Fisher.....0012  
 .....0042, 0052, 0472, 0482, 0592  
 .....0602, 1202, 1442, 1712, 2645  
 Fuji.....0712, 1112  
 Funai.....0312, 0412, 0432, 0702, 0992  
 Garrard.....0992  
 GE.....0102, 0162, 0242, 0612  
 .....1022, 1112, 1152, 1482, 1702  
 Gold Star.....0012, 0182  
 .....0312, 0432, 0792, 1181, 1632  
 Go Video.....0102, 0255, 0272, 0292, 0402  
 .....0542, 0662, 1385, 1532, 1692  
 Gradiente.....0182, 0992  
 Harley-Davidson.....0992  
 Harman/Kardon.....0012, 0032, 1592  
 Harwood.....0362, 0372  
 Headquarter.....0432  
 .....0512, 0602, 1142, 1212, 1712  
 HL-Q.....0592  
 Hitachi.....0312  
 .....0512, 0812, 0925, 1142, 1212  
 Infinity.....0622  
 Insignia.....0182, 0562, 1732  
 Instant Replay.....0312, 0432, 1112  
 Inteq.....0182  
 JC Penney.....0012, 0102, 0162, 0182  
 .....0392, 0522, 0532, 0602, 0812  
 .....1112, 1142, 1212, 1242, 1712  
 JCL.....1112  
 Jensen.....0812, 1212  
 JVC.....0012  
 .....0392, 0452, 0522, 0532, 0602  
 .....0692, 1212, 1712, 2025, 4201  
 Kenwood.....0012, 0392  
 .....0522, 0532, 0602, 1212, 1712  
 KLH.....0362, 0372  
 Kodak.....0182, 1112  
 LG.....0312, 0432, 0562, 0792, 1181  
 Liteon.....1905  
 Lloyd.....0312, 0432, 0992  
 Logik.....0362, 0372  
 LXI.....0182, 0312, 0432  
 Magnavox.....0105  
 .....0142, 0162, 0172, 0302, 0312  
 .....0342, 0412, 0432, 0482, 0622  
 .....0792, 0862, 1112, 1642, 1682  
 Magnin.....0102  
 Marantz.....0012  
 .....0392, 0482, 0522, 0532, 0602  
 .....0772, 0802, 1112, 1552, 1712  
 Marta.....0182  
 Matsushita.....1112  
 Medion.....0422  
 MEI.....1112

Memorex.....0052, 0102  
 .....0182, 0302, 0312, 0432, 0482  
 .....0502, 0592, 0602, 0792, 0942  
 .....0992, 1112, 1631, 1682, 1712  
 MGA.....0032, 0922, 1592  
 MGN Technology.....0102  
 Midland.....0612  
 Minolta.....0812, 1142  
 Mitsubishi.....0032, 0202, 0392, 0522  
 .....0532, 0632, 0812, 0922, 1592  
 Montgomery Ward.....1162, 0302, 0932  
 Motorola.....1742, 0302, 1112, 1682  
 MTC.....0102, 0312, 0432, 0992  
 Multitech.....0102, 0312  
 .....0362, 0372, 0432, 0612, 0992  
 NEC.....0012  
 .....0392, 0522, 0532, 0602, 0732  
 .....0772, 1012, 1122, 1212, 1712  
 Nexxtech.....0486, 0492, 0842, 0852, 2055  
 Nikko.....0182  
 Noblex.....0102  
 Olympus.....1112  
 Onkyo.....1382  
 Optimus.....0102, 0122, 0182, 0302, 0722  
 .....1042, 1062, 1262, 1682, 1722  
 Optonica.....0102, 0932  
 Orion.....0322, 0942, 1562, 1631  
 Panasonic(National).....0122, 0162, 0552, 1062  
 .....1112, 1262, 1272, 1642, 1722  
 Pentax.....0012, 0812, 1142  
 Philco.....0162, 0172, 0482, 1112  
 Philips.....1352, 1372, 0092, 0105  
 .....0252, 0342, 0412, 0482, 0622  
 .....0672, 1052, 1112, 1282, 1642  
 Philips Magnavox.....0302, 0482, 0622, 1682  
 Pilot.....0182  
 Pioneer.....0222, 0392  
 .....0522, 0532, 0812, 1242, 2695  
 Polaroid.....0852  
 Portland.....0022, 1082  
 Proscan.....0162, 0642  
 Protec.....0362, 0372  
 Pulsar.....0792  
 Quarter.....0602, 1712  
 Quartz.....0602, 1712  
 Quasar.....0122, 0162  
 .....1062, 1112, 1262, 1642, 1722  
 Radio Shack.....0032, 0042  
 .....0102, 0162, 0182, 0302, 0312  
 .....0432, 0502, 0592, 0602, 0722  
 .....0932, 0992, 1042, 1112, 1152  
 .....1262, 1482, 1592, 1682, 1712  
 Radix.....0182  
 Randex.....0182  
 RCA.....0062, 0102, 0162  
 .....0182, 0212, 0242, 0352, 0582  
 .....0612, 0642, 0782, 0812, 0915  
 .....1022, 1112, 1132, 1142, 1152  
 .....1222, 1452, 1482, 1572, 1702  
 Realistic.....0032, 0042, 0102, 0162  
 .....0182, 0302, 0312, 0432, 0502  
 .....0592, 0602, 0932, 0992, 1042  
 .....1112, 1262, 1592, 1682, 1712  
 ReplayTV.....1272  
 Ricoh.....1252  
 Rio.....0182, 0282, 1732  
 Runco.....0792  
 Samsung.....0102  
 .....0255, 0292, 0502, 0652, 0812  
 .....0872, 0882, 1522, 1535, 1662  
 Samtron.....1692  
 Sanky.....0302, 0792, 1682  
 Sansui.....0132, 0211  
 .....0322, 0392, 0522, 0532, 0572  
 .....0695, 0942, 1212, 1562, 1631  
 Sanyo.....0052, 0102  
 .....0472, 0592, 0602, 1072, 1322  
 .....1332, 1342, 1442, 1712, 2645  
 Scott.....0442, 0462, 0882

.....0892, 0922, 1032, 1192, 1422  
 Sears.....0042, 0132, 0182, 0211, 0412  
 .....0482, 0592, 0602, 0812, 1112  
 .....1142, 1202, 1242, 1262, 1712  
 Sharp.....0032  
 .....0302, 0312, 0332, 0432, 0932  
 .....0962, 1042, 1082, 1592, 1682  
 Shintom.....0362, 0372  
 .....0522, 0712, 0812, 1252, 1512  
 Shogun.....0102  
 Signature.....0312, 0432  
 Singer.....0362, 0372, 1112  
 Sonic Blue.....1272  
 Sony.....0072, 0112, 0262, 0382  
 .....0712, 0822, 0832, 0972, 1006  
 .....1162, 1232, 1252, 1582, 1652  
 STS.....0812, 1112, 1142  
 Superscan.....0412  
 Sylvania.....0162, 0312  
 .....0412, 0432, 0482, 0702, 0922  
 .....0992, 1112, 1392, 1612, 1672  
 Symphonic.....0312, 0412  
 .....0432, 0702, 0992, 1392, 1612  
 Tandy.....0312, 0432, 0602, 1712  
 Tashiko.....0182  
 Tatung.....1212  
 Teac.....0312, 0432, 0992, 1212  
 Technics.....1112  
 Techwood.....1602  
 Teknika.....0182  
 .....0232, 0312, 0432, 0992, 1112  
 Tivo.....1052, 1162  
 TMK.....0102, 0732, 1012  
 Toshiba.....0042  
 .....0152, 0482, 0652, 0682, 0812  
 .....0882, 0902, 0922, 1002, 1032  
 .....1312, 1402, 1412, 1522, 3075  
 Totevision.....0102, 0182  
 Trutech.....1385  
 Unitech.....0102  
 Vector Research.....0012  
 .....0392, 0522, 0532, 0882  
 Victor.....0392, 0522, 0532  
 Video Concepts.....0012, 0032  
 .....0392, 0522, 0532, 0882, 1592  
 Videosonic.....0102  
 Wards.....0032, 0102, 0162, 0182, 0302  
 .....0312, 0362, 0372, 0432, 0592  
 .....0812, 0882, 0932, 0992, 1032  
 .....1112, 1142, 1462, 1592, 1682  
 White Westinghouse.....0312, 0432, 0702, 0762  
 XR-1000.....0362, 0372, 0992, 1112  
 Yamaha.....0012, 0392, 0522, 0532, 1212  
 Zenith.....0082, 0182, 0302, 0312  
 .....0332, 0392, 0432, 0452, 0512  
 .....0522, 0532, 0622, 0652, 0662  
 .....0712, 0762, 0792, 0942, 1072  
 .....1092, 1181, 1182, 1252, 1522  
 .....1532, 1631, 1682, 1732, 4201

#### LASER DISC

Denon.....0222  
 Pioneer.....0222  
 Proscan.....0642  
 RCA.....0642  
 Sanyo.....1072  
 Sony.....1006, 1232  
 Zenith.....1072, 1232

#### CD

ADC.....0517, 1277  
 Adcom.....0027, 0777  
 Aiwa.....0357, 0966, 0987, 1007  
 Akai.....0167, 0377, 0757  
 Audio Technica.....0117  
 California Audio Labs.....0257  
 Captronic.....0527, 1623

Carver .....0197, 0207, 0317, 0417  
 Casio .....0397  
 Centrios .....1097  
 Citizen .....0277  
 Coby .....1287  
 Curtis Mathes .....0397  
 Denon .....0637  
 Emerson .....0777, 1017  
 Fisher .....0127, 0217  
 .....0317, 0327, 0457, 1137, 1157  
 Genexxa .....0427, 0577, 1017  
 Goldstar .....0687  
 Harmon Kardon .....0647, 0797  
 Hitachi .....0427  
 Inkel .....0787  
 Insignia .....1526  
 JC Penny .....0397, 0657  
 JVC .....0897, 1056, 1107  
 Kenwood .....0137, 0367, 0467, 0497  
 .....0537, 1016, 1027, 1147, 1167  
 Krell .....0207  
 Kyocera .....0517, 1277  
 Luxman .....0227, 0337, 0477, 0587  
 LXI .....0397  
 Magnavox .....0207, 0737, 0837  
 Marantz .....0207, 0437, 0547, 0947  
 MCS .....0397, 0657  
 MGA .....0797  
 Mission .....0207  
 Mitsubishi .....0797, 0907  
 NAD .....0766, 0827, 1026, 1087  
 Nakamichi .....0007, 0877, 1037  
 NEC .....0657  
 Nexxtech .....0097, 0487, 0536  
 .....0576, 0607, 0617, 0666, 0727  
 .....0856, 0887, 0916, 0967, 1217  
 Nikko .....0117, 0217, 1017  
 NSM .....0207  
 Onkyo .....0147  
 .....0237, 0816, 0867, 0937, 1177  
 Optimus .....0057, 0317  
 .....0347, 0387, 0417, 0427, 0447  
 .....0537, 0557, 0667, 0776, 0857  
 Panasonic .....0257  
 .....0696, 0707, 0747, 0997, 1077  
 Philips .....0197, 0207, 0837  
 Pioneer .....0057, 0307, 0407, 0427  
 .....0577, 0717, 0807, 0917, 1227  
 Proton .....0207  
 Quasar .....0257  
 Radio Shack .....0107, 0247, 0267  
 .....0307, 0417, 0507, 0717, 1227  
 RCA .....0087, 0107  
 .....0187, 0307, 0317, 0717, 0777  
 .....1047, 1067, 1117, 1207, 1227  
 Realistic .....0317, 0347, 0427, 0527  
 .....0547, 0557, 0777, 1017, 1623  
 Rotel .....0207  
 SAE .....0207  
 Samsung .....0847, 1396  
 Sansui .....0017, 0047, 0207, 1067  
 Sanyo .....0157, 0177  
 .....0317, 0457, 0957, 1127, 1197  
 Scott .....0777, 1017  
 Sears .....0397, 0537, 0547  
 Sharp .....0537, 0547  
 Sherwood .....0247  
 .....0447, 0547, 0606, 0627, 0787  
 Shure .....0657  
 Sony .....0077, 0357, 0737, 0977  
 STS .....0517, 1277  
 Sylvania .....0207  
 Symphonic .....0567  
 Teac .....0217, 0297, 0547, 0557  
 .....0567, 0646, 0677, 0817, 1187  
 Technics .....0257, 0696, 0747, 0997, 1077  
 Theta Digital .....0837  
 Toshiba .....0766, 0827  
 Victor .....0897

Yamaha .....0037, 0117, 0287, 0927, 1057  
 Zenith .....0067, 0217, 0516  
 .....0597, 0656, 0697, 0716, 0767

#### AUDIO

Aiwa .....0586  
 .....0726, 0846, 0966, 1296, 1386  
 Apex .....0425  
 Apple Ipod .....0186  
 Bose .....0886, 1237, 1606  
 Carver .....0197  
 Centrios .....1116, 1217, 1546, 1552, 1566  
 Citizen .....0277  
 Criterion .....0785  
 Delphi .....0376  
 Denon .....0316, 0976, 1046, 1136  
 Duraband .....1476  
 Fisher .....0026, 0826  
 Gold Star .....0216  
 Harman/Kardon .....0016, 0436  
 Insignia .....0725  
 Ipod .....0066  
 JVC .....0566, 0676, 1056  
 JWL .....1126  
 Kenwood .....0246, 0426, 0497  
 .....0616, 0956, 1016, 1416, 1596  
 Koda .....1552  
 Koss .....0215  
 Magnavox .....0026, 0206, 0226, 0295, 1266  
 Marantz .....0036, 0437  
 Mitsubishi .....0366  
 NAD .....0496, 0766, 1026  
 Nelson .....1217  
 NEO .....0076  
 Nexxtech .....0487, 0536, 0576, 0666  
 .....0725, 0856, 0916, 1116, 1217  
 Norcent .....0835  
 Onkyo .....1186, 1246, 1256  
 .....0116, 0816, 0936, 0996, 1376  
 Optimus .....0006, 0317, 0386, 0387, 0506  
 .....0776, 0896, 1036, 1446, 1486  
 Panasonic .....1206, 1236, 0056  
 .....0126, 0686, 0746, 0796, 0876  
 .....1066, 1096, 1346, 1436, 1466  
 Philips .....1196, 0026, 0036  
 .....0197, 0265, 1066, 1266, 1576  
 Pioneer .....0266, 0356  
 .....0407, 0476, 0776, 0896, 1106  
 .....1406, 1446, 1496, 1506, 2675  
 Radio Shack .....0006  
 .....0166, 0176, 0236, 0247, 0266  
 .....0356, 0476, 0507, 0626, 1036  
 .....1316, 1406, 1446, 1486, 1506  
 RCA .....0146, 0176, 0196, 0266, 0276  
 .....0326, 0356, 0476, 0486, 0626  
 .....0736, 0786, 0866, 0906, 0986  
 .....1165, 1207, 1276, 1286, 1306  
 .....1316, 1326, 1336, 1406, 1506  
 Realistic .....0946  
 Regent .....1476  
 Rio .....3885, 0286  
 Saba .....0995  
 Samsung .....0075  
 Sanyo .....0157, 1156, 1166, 1176  
 Scott .....0396  
 Sharp .....1616  
 .....1626, 1216, 0556, 0756, 1267  
 Sherwood .....0236, 0247, 0466, 0606  
 Sirius .....1247, 1267  
 Skyfi .....0076  
 Sony .....1226, 0046  
 .....0106, 0136, 0256, 0296, 0406  
 .....0416, 0526, 0546, 0636, 1006  
 .....1076, 1086, 1426, 1456, 1586  
 TAO .....0076  
 Teac .....0156, 0297, 0306, 0346, 0646  
 Technics .....0056, 0126, 0686  
 .....0696, 0796, 1066, 1096, 1436

Tevion.....	0785
Venturer.....	0086
Vizio.....	1636, 1646
Wonder.....	1566
XM Radio.....	0076, 0376
Yamaha.....	0076, 0287
.....	0336, 0446, 0456, 0596, 0706
.....	0806, 0836, 0926, 1146, 1536
Zenith.....	3885
.....	0026, 0067, 0096, 0216, 0217
.....	0286, 0506, 0516, 0656, 0716

#### TV/VCR/DVD COMBO

Broksonic.....	1525
Diamond Vision.....	(2001 & 0422), 0455
Magnavox.....	0445, 0412
Panasonic.....	0595, 0552
Philips.....	0445, 0412
Samsung.....	1535
Sears.....	0445, 0412
Superscan.....	0445, 0412
Sylvania.....	0445, 0412
Toshiba.....	0115, 3075

#### HOME AUTOMATION

GE Homeminder.....	0008
Lutron.....	1516
X10 Home Automation.....	0018
X10 NEC.....	0028
Vizio.....	0068

#### MEDIA CENTER PC

MCE.....	3255
Microsoft.....	3255
Vista.....	3255

#### HTIB

##### (HOME THEATER IN A BOX)

Aiwa.....	(0586 & 0035)
Amw.....	0825
Apex.....	0425
Bose.....	4455, 0886, 1475
Boston Acoustic.....	3245
Centrios.....	0486, 0955, 1116, 1785, 1845
Classic.....	1965
Criterion.....	0785
Durabrand.....	3885, 0205
.....	0486, 0955, 1476, 2685, 2935
Dynex.....	0038
Emerson.....	1185
Insignia.....	0725
JVC.....	0155
KLH.....	0465
Koss.....	0215
Lenoxx.....	1345
LG.....	4285, 1463, 1565
Magnavox.....	(0105 & 1266), (2945 & 1266)
.....	0206, 0295, 0745, 1045
Myron & Davis.....	1555
NESA.....	1555
Nexxtech.....	0486, 0725, 0955, 1116, 1785
Norcent.....	0835
Onkyo.....	0048, 0058, 0355, 1376
Panasonic.....	0165, 1466
Philips.....	(0105 & 1266)
.....	(2665 & 1266), (2945 & 1576)
.....	0206, 0265, 1045, 2765
Pioneer.....	(2675 & 1496), 0525, 0875, 2895
Radio Shack.....	(0003 & 1316)
.....	0085, 0275, 0486
.....	0626, 0955, 0995, 1165, 1645
RCA.....	(0003 & 1316)
.....	0486, 0626, 0955, 1165, 1645
Regent.....	1345, 1476
Rio.....	(0205 & 0286)
Saba.....	0995
Samsung.....	0075, 1535, 2725
Selectron.....	1885, 2075
Sony.....	0365, 1426
Techwood.....	1602, 1985
Tevion.....	0785
Zenith.....	(0205 & 0286)