



1. Remove top lid from cooler
2. Locate RED or WHITE button on float housing
3. With paper towel, push in button to release float
4. Replace top lid onto dispenser
5. Check for proper operation