

How To Open a S&G Digital Lock

Type the default passcode of 123456 then hit # (this will open lock)

To Change Passcode Combination on Lock

Open Safe door

Type 22#

Type 123456 # or original combo being used now

Type new password and hit #

Retype new password and hit #

With safe door open try your new combination and hit #

This should unlock bolt

Combination Change Completed