




## Chapter 3. Operation Instruction

### 3.1.4 Electronic Combination Lock

Please operate the lock or change the password **only after fully understanding this instruction**

#### OPENING THE LOCK

- 1) Enter valid six (6) digit code at a time. (Factory default password : 123456)
- 2) The lock will signal a valid code entry with a double signal.
- 3) Within four (4) seconds, turn handle counterclockwise to the open position.
- 4) Pull door open.

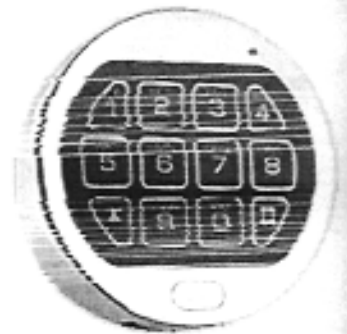

#### LOW BATTERY WARNING

- Repeated audio and visual signal (LED flashing and repeated beeping) during opening indicates battery low.

#### AUDIO AND VISUAL SIGNAL

- Double signal (LED flashes and unit beeps) indicates entry is valid or accepted.
- Triple signal indicates invalid or not accepted.

#### WRONG TRY PENALTY

- Entry of four (4) consecutive invalid codes starts a 5-minute delay period.
  - LED flashed red at five (5) second intervals.
- At the end of the delay period, two more consecutive invalid codes will restart an additional 5-minute delay period.

#### CHANGING YOUR PASSWORD

- 1) Enter "zero" six times.
- 2) Enter your existing six (6) digit code one time.
- 3) Enter your NEW six (6) digit code two times.
- 4) If a mistake is made wait thirty (30) seconds and repeat steps 1. - 3.
- 5) Test lock operation several times before closing the door.
  - Valid Code Entry - Double signal after valid six (6) digit code is entered.
  - Invalid Code Entry - Triple signal and old code is still valid.



**WARNING : ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN**

### LOW WARNING

Repeated beeping during an opening indicates that the battery is low and needs immediate replacement.

Use one (1) 9-Volt Alkaline Battery. LA GARD recommends the use of Duracell™ or Eveready™ Alkaline batteries.

If the battery is depleted and will not allow lock to open, simply follow instructions below.

### REPLACE YOUR BATTERY

*Some manufacturers use a small screw to secure the battery compartment*

*to the keypad housing. If your model has this screw, it must be removed first before following the steps listed below.*

Remove the black plastic battery compartment cover (located at the bottom of the keypad) by gently pulling downward on its handle.

Remove the battery and its attached leads to drop down and out of the battery compartment. If it does not drop, gently pull on the battery until it does.

The battery connector is easily removed by unsnapping it from the two terminals on the top of the battery. Never Pull on the Battery Leads

Insert a new 9-Volt Alkaline battery to the battery clip.

Push the battery and the leads completely up into the battery compartment.

Secure the battery cover by placing one side of the cover in position and then push the other side into position with your finger.