



How to: Operate your Zip Dee Automatic Awning Manually

To Open

1. Unroll awning using the Motor Only switch (middle switch)
 - a. If Switch does not work
 - i. Disconnect (+) and (-) wires to motor (two terminals located just below the motor only switch)
 - ii. Touch motor wires to battery contacts
 - iii. If nothing happens switch the wires on the contacts
 - Unroll for a few seconds
 - You can pull the awning away from the coach by either pulling the arms away from the coach manually or by turning on the #7 air valve (Turn valve back off once the awning has pushed away from the coach)
 - Unroll with wires on the batteries until the motor stops running
2. Turn on air valves #4F and #4R
 - This will lift the arms into the extended position
 - The arms will lock into place once fully extended
3. Once arms are locked into place, turn air valves #4F and #4R back to the off position

Enjoy Your Awning!

To Close

1. Turn on air valves #4F and #4R
2. Turn on air valve #8
 - This opens the lock assembly
3. Turn off air valves #4F and #4R
 - The arms will drop slowly
4. Turn off air valve #8
5. Use the motor wires on the batteries to roll up awning until the motor stops running

