



NOTE:
D23, D25, D28
IF NOT LIT AT ZERO COMMAND
INDICATES PHASE LOSS OR SHORTED SCR
AS COMMAND INCREASES
D23, D25, D28 DIM

T-16A R1		
FIRING BOARD		
SCALE	NONE	DRAWN BY
DATE	12/12/12	JM
Model	Serial	
BELLWOOD, ILL.	U.S.A.	DRAWING #
		T-16A R1