# INSTALLATION, OPERATION, AND SERVICE



**INSTRUCTION MANUAL** 



Assembly Instructions For 880 and 720

STEP 1. Center bowl on top of base; align bowl and base overflow passage way holes.

STEP 2. Slip rear "V" Band in place; slip front band in place (with SWIRL-O-MATIC logo to front). Tighten screws evenly.

STEP 3. Assemble vacuum breaker to bowl. CAU-TION: Do not overtighten this assembly, snug in place until plastic parts bottom on china bowl.

STEP 4. Attach 880 Series upper plumbing line. This completes assem-

STEP 4a. Install 720 Series 90° flare tubing fitting. NOTE: Drop soft copper washer inside 90° fitting at assembly to seal. This completes assem-

STEP #3 STEP #2 STEP # STEP #4a %" COPPER TUBE LENGTH TO SUIT I not supplier 34" QUICK OPENING VALVE. RECOMMEND %" COPPER HOOK UP LINE


720

MANUAL SERIES

STEP 4. 720 Series comes complete with an in-theline quick opening on-off manually operated water valve.

**AUTOMATIC SERIES** 

CODE APPROVED

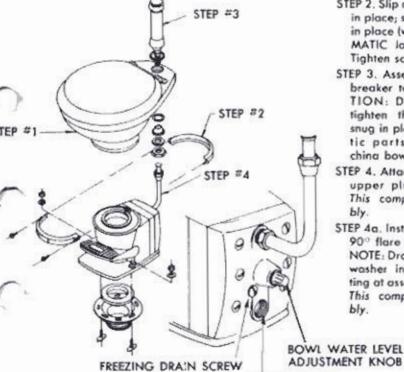


%-18 PIPE THREAD

RECOMMEND 1/2" COPPER HOOK UP LINE

SIM-1

## INSTALLATION INSTRUCTIONS Series 880 and 720

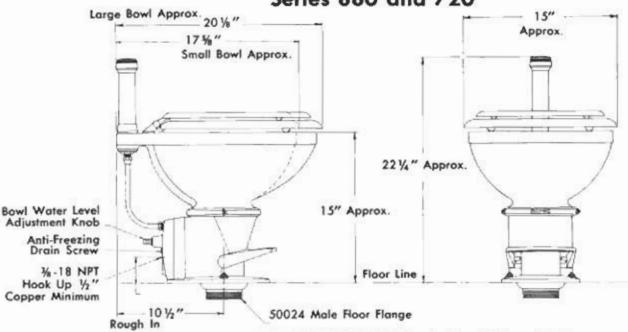

#### INSTALLATION INSTRUCTIONS Series 880 and 720

Proper installation means long trouble free service. By carefully following these instructions, good installation is accomplished.

CAUTION: Do not use pipe compound or sealing material to seal water connections. Compound particles can enter the valve mechanism, causing clogging and improper operation.

- 1. Screw floor flange into holding tank or plumbing until lip of flange is tight to floor surface.
- 2. Insert the two brass studs into flange lip, opposite each other.
- Place assembled toilet, making sure that floor flange gasket is in place squarely on the floor flange. Using the two flat washers provided, place the two cap nuts on studs and tighten evenly.
- Connect inlet water line to inlet opening. Start fitting threads carefully to avoid cross threading. 1 ½ turns by wrench, after hand tightening, will seal this connection.
- 5. Check thoroughly for water leaks.


#### RECOMMENDED TANK INSTALLATION

#### TYPICAL INSTALLATION SHOWING BY-PASS ADAPTER US



When modernizing a trailer which has an existing toilet compartment your main concern should be proper termination selection (valve and coupling) to achieve easy installation and access for hook-up.

If you are adding a complete toilet compartment or placing the toilet and tank under a bunk, your main concern should focus on accessibility to the toilet and proper tank venting.

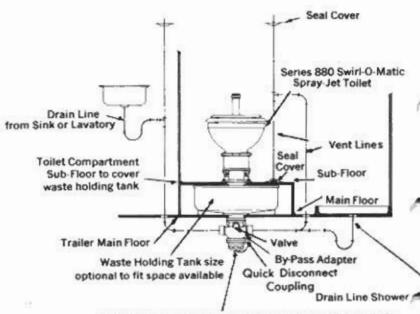

SANIWARE B TERMINATION WITH BY-PASS ADAPTER

The word By-Pass means that any waste water from sinks, showers, tubs, or lavatories will by pass the waste holding tank, but all drain outlets including the toilet waste will terminate at one location on the trailer to form a single common outlet for all fixtures for easy drain line hook-up.

### **OPERATION INSTRUCTIONS**

#### OPERATION INSTRUCTIONS MODEL 880

The No. 880 Code Model requires only one manual operation per flush:

- STEP ON PEDAL and release slowly. Toilet flushes and bowl refills automatically with approx. 3 quarts of water.
- If additional flush water is desired, hold pedal in full down position. This will hold refill valve open and allow additional flush water to pass.
- To empty bowl for traveling, step on pedal lightly until stopper is half open.
   Bowl will empty but pedal motion will not open water control valve.
- 4. When traveling with water tank full and pressurized, keep shut-off valve between toilet and tank in "off" position.
- To prevent freezing, loosen drain screw on rear of base above inlet fitting, depress pedal & drain.
- 6. To adjust bowl water level, rotate knob at rear of base.





#### OPERATION INSTRUCTIONS MODEL 720

The No. 720 Standard Model requires 3 separate manual operations per flush:

- 1. TURN ON WATER.
- 2. STEP ON PEDAL to flush. Release pedal slowly.
- TURN OFF WATER after approximately 3 quarts of refill water has run
  into bowl. IMPORTANT: To prevent sewer gases or holding tank odors
  from re-entering trailer, always keep adequate water (3 quarts) in bowl
  between uses except when traveling.
- 4. To empty bowl for traveling, step on pedal and drain water from bowl.

#### SERVICE INSTRUCTIONS Models 880 and 720

The Nos. 720 and 880 require no special maintenance except regular cleaning and disinfecting.

CLEANING OVERFLOW PASSAGEWAY... Both models are equipped with built-in bowl overflow passageway. If bowl overflows and holding tank is not full this indicates a block in overflow passageway. It may be cleaned as follows:

Insert a small piece of flexible wire through overflow hole and agitate until passageway is clear.


MAINTAINING BOWL SEAL WATER... Water must be maintained in bowl at all times to prevent sewer gases, or holding tank adars from re-entering the tailet compartment. After several years usage, it may become necessary to replace worn parts with either Kit "A" or "B" as required. See replacement parts list, Page 4.

CLEANING AND DISINFECTING SPRAY-JET . . . Mix ½ cup of any household bleach with 1 gallon of water. Then wipe all tailet components thoroughly.

CAUTION: Do not fill toilet with full strength bleach or cleaner and leave to soak. This will damage rubber stopper and stopper seat. FAILURE TO HEED THIS CAUTION VOIDS WARRANTY.

#### OWNER INSTRUCTIONS FOR MINOR REPAIR

- Leakage at top of vacuum breaker. Remove rubber cap and be sure that spring guide is in place and poppet is
  free to rise and fall on the guide when toilet is flushed. Sometimes a particle may lodge under the poppet causing
  a temporary leakage until is it disladged. If rubber seal has failed, a new poppet and seal should be installed
  as shown on the instruction sheet.
- Bowl water leaking out: First, be sure that the rubber stopper is clean, with no heavy scum or paper build-up.
  Rotate stopper slightly, then close stopper quickly with a snap action several times (with the toilet lid closed to
  avoid splashing), and any slight leak should seal. A light application of a silicone grease to the rubber seal will
  help it to seal well, and this also avoids contamination build-up.

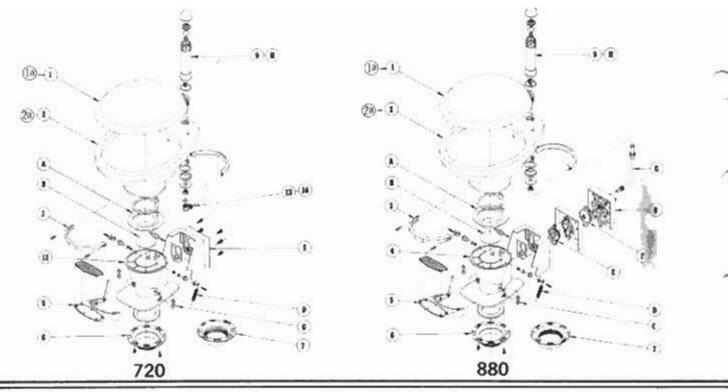

#### REPLACEMENT PARTS

- (1) STANDARD SEAT 52970 - WHITE - \$8.75 52971 - YELLOW - \$9.25 52972 - COBAL - \$9.25
- (1a) SMALL SEAT 59990 - WHITE - \$8.50
- (2) STANDARD BOWL 52990 - WHITE -\$29.95 52991 - YELLOW -\$36.75 52992 - CORAL - \$36.75
- (2a) SMALL BOWL 52980 WHITE \$27.25
- (3) Y-BAND ASSEMBLY 91020 - WHITE - \$2.85 91021 - YELLOW - \$2.85 91022 - CORAL - \$2.85
- (4) BASE ASSEMBLY COMPLETE 91880 - WHITE - \$61.50 91881 - YELLOW - \$63.50 91882 - CORAL - \$63.50
- (5) PEDAL ASSEMBLY
  - 91030 WHITE \$7.00 91031 YELLOW \$7.00 91037 CORAL \$7.00
- (6) FLOOR FLANGE MALE 50024 - \$2.25
- (7) FLOOR FLANGE FEMALE 50020 - \$2.25
- (8) DIAPHRAGM VALVE ASSEMBLY 91010 - WHITE - \$25.75 91011 - YELLOW - \$26.75 91012 - CORAL - \$26.75
- (12) BASE ASSEMBLY COMPLETE 91720 - WHITE - \$39.00 91721 - YELLOW - \$39.00 91722 - CORAL - \$39.00
- (13) 90 MALE CONNECTOR 1/4 FLARE 50072 - \$1.00
- (14) 90 MALE CONNECTOR 1/2 FLARE 50069 - \$1.00

#### REPAIR KITS

- (A) STOPPER SEAT AND GASKET 98550 - WHITE - \$3.00 (1) 20407 (1) 20408 (1) 20409 (2) 20439 98551 - YELLOW - \$3.50 (1) 22006 (1) 20408 (1) 20409 (2) 20439 98552 - COMAL - \$3.60 (1) 22007 (1) 20408 (1) 20409 (2) 20439
- (B) STOPPER & LINKAGE KIT
  - 985.37 \$13.50 III 10061 II: 20410 III: 20408 I2I: 20063 I2: 20067 I2: 20060 I2: 10066 I2: 40141 I2: 40095 II: 20405 III: 10063 II: 30032

- (C) FLOOR MOUNTING KIT 98538 - \$1.55 (1) 90028 (1) 20005 (1) 20005 (1) 20465
- (D) BUSHING & SPRING KIT 98539 - \$5.60 (2) 20053 | 2) 20057 | (2) 20060 | (2) 10066 (2) 40141 | (2) 40095 | (1) 30032 (E) CHAMBER DIAPHRAGM KIT
- - 98536 \$3.10 (1:20442 (1:30028 (1:20012 (1:20400
- (F) DIAPHRAGM VALVE KIT
  - 98535 \$4.85 (1):20403 (1):30033 (1):30034 (1):80096 (1):30030 (1):20423 (1):20404 (1):20400

- (G) PLUMBING LINE KIT 98534 - \$3.10 (1) 50052 (2) 20439
- (H) VACUUM BREAKER KIT 98579 - \$2.40 (I) 20420 (I) 20421 | II| 20419 | II| 20416 |2) 20418 | |2| 20439
- (S) OVER FLOW COVER REPAIR KIT VER FLOW COVER REPAIR 98560 - WHITE - \$2.70 (1) 12020 (1) 20071 (1) 20400 98561 - YELLOW - \$2.70 (1) 12021 (1) 20071 (1) 20400 98562 - CORAL - \$2.70 (1) 12022 (1) 20071 (1) 20400

#### MODERNIZATION KITS

- (V) SERIES 600-500 & 300 BASE ASSEMBLY NO LONGER AVAILABLE ORDER
  - =80 Base WHITE \$64.75 =81 Base VELLOW \$65.50 =82 Base CORAL \$65.50
- (W) SERIES 440-400 & 100 BASE ASSEMBLY NO LONGER AVAILABLE ORDER
  - = 70 Base WHITE \$40.50 = 71 Base VELLOW \$40.50 = 72 Base CORAL \$40.50

STANDARD BOWL KIT

- (X) SERIES 600-500-440-400-300 & 100 ORDER NO LONGER AVAILABLE

  - O LONGER AVAILABLE ORDER =90 WHITE \$65.25 =91 YELLOW \$61.85 =92 CORAL \$61.85 £17 INCLUDES: (1) Bowl (1) Seat (1) Vacuum Breaker Assy. (1) Plumbing Line & Fitting
- (Y) SMALL BOWL
- #50 WHITE ONLY \$44.50 KIT (NCLUDES: (1) Bowl (3) Yacuum Breaker (2) Plumbing Line & Fitting

for major service and replacement kit information

see your

LOCAL TRAILER SUPPLY STORE

OR AUTHORIZED SANIWARE SERVICE STATION

1400 Brustol Elkhardt

**ADAMS 2-4395** 

MISSION-WEST MANUFACTURING COMPANY DIVISION



