

## CHANGE GAS TYPE PHOENIX ROASTERS


YOU CAN CHANGE BETWEEN LPG (PROPANE) AND NATURAL GAS ON A PHOENIX MODEL WITH TWO PARTS REPLACED:

1. INJECTOR ORIFICE TUBE
2. GAS GAUGE (OPTIONAL- YOU CAN KEEP THE 6KPA LPG GAS GAUGE IN ROASTER IF YOU CHOOSE)

### ORO 2.5 BURNERS



### ORO INJECTOR ORIFICE TUBE

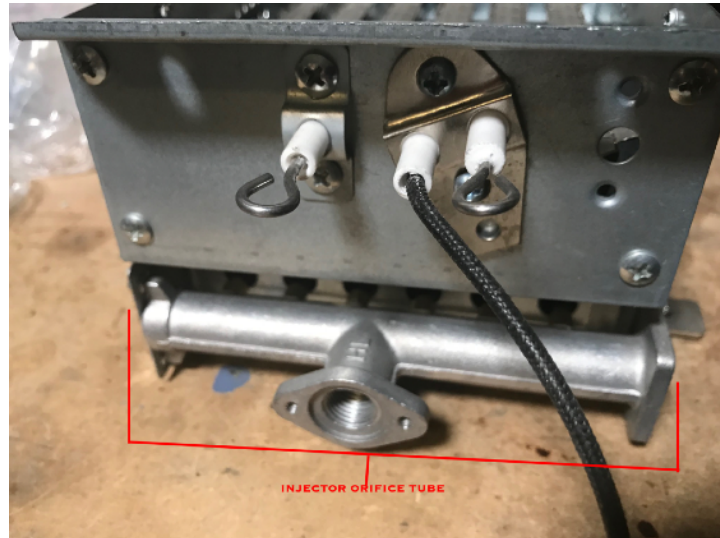

### FIRST REMOVE GAS-LINE FROM TUBE

REMOVE THE TWO PHILLIPS SCREWS HOLDING INJECTOR TUBE TO BURNER



REPLACE WITH NEW INJECTOR ORIFICE TUBE. REATTACH SCREWS. CONNECT GAS LINE USING YELLOW GAS TAPE AND/OR PIPE JOINT COMPOUND TO PREVENT GAS LEAKS

