

Table of Contents

Volume I

Chapter 1 – How To Use This Book

Chapter 2 – 1962 221/260 V8

A – Engine Core	2-4
B – Valve Train	2-12
C – Induction	2-18
D – Exhaust	2-26
E – Lubrication	2-28
F – Ventilation	2-32
G – Cooling	2-35
H – Ignition	2-38
J – Generator/Alternator	2-42
K – Accessories	2-45

Chapter 3 – 1963 221/260/289 V8

A – Engine Core	3-6
B – Valve Train	3-15
C – Induction	3-22
D – Exhaust	3-41
E – Lubrication	3-44
F – Ventilation	3-45
G – Cooling	3-46
H – Ignition	3-48
J – Generator/Alternator	3-50
K – Accessories	3-53

Chapter 4 – 1964 260/289 V8

A – Engine Core	4-6
B – Valve Train	4-9
C – Induction	4-13
D – Exhaust	4-36
E – Lubrication	4-38
F – Ventilation	4-39
G – Cooling	4-43
H – Ignition	4-47
J – Generator/Alternator	4-50
K – Accessories	4-54

Chapter 5 – 1965 289 V8

A – Engine Core	5-8
B – Valve Train	5-13
C – Induction	5-16

D – Exhaust	5-27
E – Lubrication	5-28
F – Ventilation	5-29
G – Cooling	5-32
H – Ignition	5-38
J – Alternator	5-42
K – Accessories	5-48

Chapter 6 – 1966 289 V8

A – Engine Core	6-6
B – Valve Train	6-8
C – Induction	6-15
D – Exhaust	6-23
E – Lubrication	6-25
F – Ventilation	6-26
G – Cooling	6-29
H – Ignition	6-30
J – Alternator	6-31
K – Accessories	6-31

Chapter 7 – 1967 289 V8

A – Engine Core	7-4
B – Valve Train	7-6
C – Induction	7-8
D – Exhaust	7-18
E – Lubrication	7-20
F – Ventilation	7-22
G – Cooling	7-22
H – Ignition	7-23
J – Alternator	7-26
K – Accessories	7-26

Chapter 8 – 1968 289/302 V8

A – Engine Core	8-4
B – Valve Train	8-11
C – Induction	8-18
D – Exhaust	8-30
E – Lubrication	8-31
F – Ventilation	8-32
G – Cooling	8-34
H – Ignition	8-38
J – Alternator	8-41
K – Accessories	8-41

Chapter 9 – 1969 302 V8

A – Engine Core	9-4
B – Valve Train	9-8
C – Induction	9-13
D – Exhaust	9-17
E – Lubrication	9-18
F – Ventilation	9-20
G – Cooling	9-21
H – Ignition	9-22
J – Alternator	9-23
K – Accessories	9-24