

DVR Manuals and Software Are Loaded On the Enclosed Turbo Wash DVR Flash Drive

*****DVR Default ID is “admin” and the password is blank*****

● Monitor resolution

- For the best picture display, a DVR's local monitor output has a default resolution of 1920x1080 pixels. If your attached monitor does not support 1080p resolution, and you cannot see any picture, please change the DVR's resolution to the lowest as following.
- The lowest resolution (1280x720) Hot Keys: Use your 'Remote Controller' (It comes with a DVR) or Front Panel
- Press followings “800600”
- The resolution should be changed to 1280x720

Proper DVR Shutdown: (Failing to properly shutting down DVR could damage Hard Drive or DVR)

Enter Menu > Setup> System> Shutdown

The screenshot shows the DVR's web interface. At the top, there is a navigation bar with icons and labels for 'Display', 'Record', 'Device', 'Network', and 'System'. The 'System' menu is currently selected, indicated by a blue highlight and a gear icon. On the left side of the 'System' menu, there is a vertical list of sub-menus: 'Date/Time', 'User Authority', 'Storage', 'S.M.A.R.T.', 'System log', and 'Configuration'. The 'Date/Time' sub-menu is currently active, showing a configuration page with various settings. In the bottom-left corner of the 'Date/Time' configuration page, there is a button labeled 'SHUTDOWN' which is highlighted with a red rectangular box. Below the 'SHUTDOWN' button are two more buttons: 'OK' and 'CANCEL'. At the bottom right of the configuration page, there are two buttons: 'Apply' and 'Default'.

Menu Item	Value
Timezone	[Dropdown]
Daylight Saving Time	<input type="checkbox"/>
Date	2013/11/29
Time	22:48:29
NTP Server	time.nist.gov
NTP Check	1 Day
Sync	[Button]