


# CRV-A SERIES

REV. 4-2000

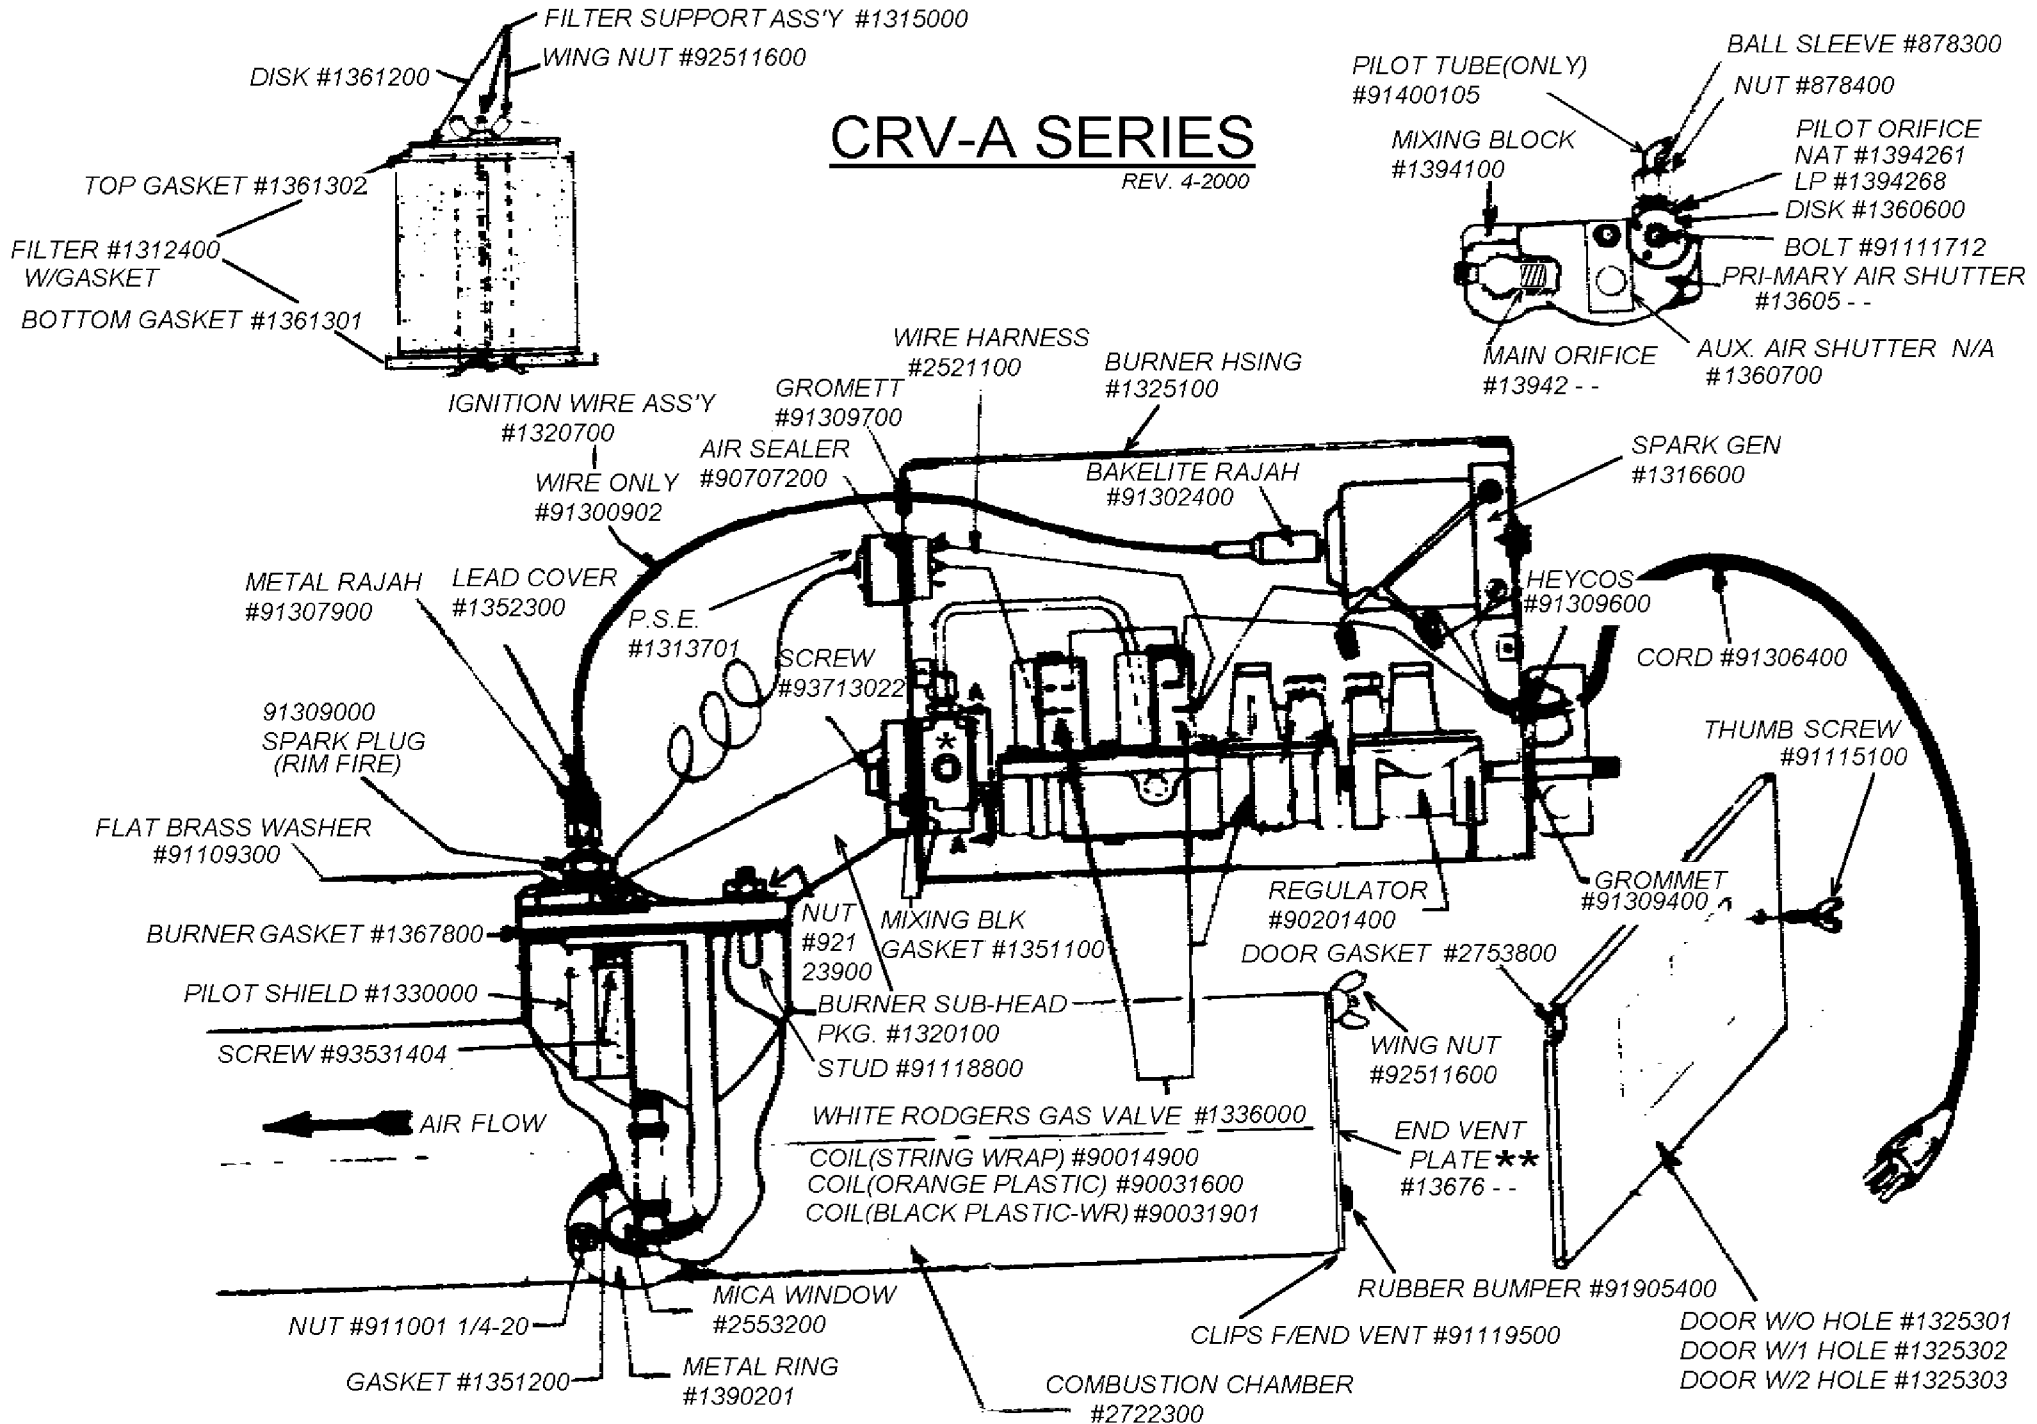

\*\* VACUUM READING AT END VENT BETWEEN 2-3".....WITH SYSTEM HOT 2 1/2" IS IDEAL SETTING

\* VACUUM READING AT 3/8" PLUG SHOULD READ .2 TENTHS (NEGATIVE) WITH BURNER FIRING