

Wellhead Complete Manual

Section 1. Casing Head

Table of Contents

1. Functions:	5
2. Casing Bowl Design.....	5
3. Casing Connection Types.....	6
3.1 Slip-on weld (SOW) without internal O-ring	6
3.2 Slip-on weld (SOW) with internal O-ring.....	7
3.3 Casing Threaded Bottom connection	7
3.4 Slip-On-Lock Style 1.....	7
3.5 Slip-On-Lock Style 2.....	8
3.6 Slip On Lock Style 3	8
3.7 Slip On Lock Style 4	9
4. Outlet Types	9
4.1 Line Pipe Side Outlets (LPSO's)	10
4.2 Studded Side Outlets (SSO's)	10
4.3 Externally Flanged Outlets (EFSO's)	10
5. Test And Auxiliary Equipment	10
5.1 Base Plate (See details in separate section):	10
5.2 Test Plugs	11
5.3 Casing Head Bowl Protectors: EG Wear Bushing	12
5.4 Casing Head Bowl Protector: BP-ET style wear bushings	13
5.5 Running Tool	13
6. Engineering Design	14
7. API 6A Requirement	14
8. Hydrostatic Testing.....	14
Appendix A – Critical Dimensions.....	15
1. Bowl Protector: C-22-EG	15
2. Bowl Protector: C-29-ET and TC.....	16
3. BOP Test Plug Dimensions	17
4. Bowl Protector R&R Tool Dimensions	18

5. Pin/Box Sub Dimensions	19
6. Casing Head Dimensions.....	20
Appendix B - Purchasing Guidelines	21
Appendix C - Casing Head Housings Checklist.....	22
1. Prior To Departing for Location	22
2. While On Location.....	22
3. Prior to Departing From Location	23
Appendix D - General Installation Guidelines	24
Appendix E - Regulation requirement [ref].....	28
Appendix F - Industry Recommended Practice (IRP) [ref]	29
References	30

List of Figures

Figure 1. Casing Head structure	1
Figure 2. Casing head, Base Plate, and Lockdown Screw.....	4
Figure 3. Slip-On-Weld with or without O-ring, and Test Port	6
Figure 4. Casing Connection: Threaded	7
Figure 5. Casing Connection: Slip-On-Lock Style 1.....	8
Figure 6. Casing Connection: Slip-On-Lock Style 2.....	8
Figure 7. Casing Connection: Slip-On-Lock Style 3.....	9
Figure 8. Casing Connection: Slip-On-Lock Style 4.....	9
Figure 9. Base Plate.....	10
Figure 10. Basic BOP Test Plug.....	11
Figure 11. Combination BOP Test Plug and Bowl Protector Running Tool.....	11
Figure 12. BOP Test Plug Landing in the Casing Head.....	11
Figure 13. EG Wear Bushing Prepare to be installed in Casing Head	12
Figure 14. Section View: EG Wear Bushing and Locked in Casing Head by L-Packing	13
Figure 15. ET Style Bowl Protector and Locked in Casing Head by Lock Down Screws	13
Figure 16. J-Type Tool for Running and Retrieving Wear Bushing.....	14
Figure 17. EG Bowl Protector Critical Dimensions Drawing.....	15
Figure 18. ET Bowl Protector Critical Dimensions Drawing	16
Figure 19. BOP Test Plug Critical Dimensions Drawing	17
Figure 20. Bowl Protector R&R Tool Critical Dimensions Drawing	18
Figure 21. Pin/Box Sub Critical Dimensions Drawing.....	19
Figure 22. Casing Head Critical Dimensions Drawing	20
Figure 23. Casing Head Housing Checking List.....	22
Figure 24. Installation of Casing Housing.....	24