



**WINGS AEROSPACE, LLC**  
**P-3 REPAIR CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
1052	5930-00-948-3854	SWITCH, PRESSURE
1519	6625-00-079-7396	AMMETER
17216	6615-00-931-6593	CONTROL, DIRECTIONAL
17237	6615-00-931-6588	CONTROL, DIRECTIONAL
18066	1630-00-821-4686	SHUTTLE
60030	4820-01-191-4184	CYLINDER, MLG UPLOCK RELEASE
70304		BRAKE VALVE
77321	5996-00-976-1429	AMPLIFIER,ELECTRONIC CONTROL
78085	5996-00-976-1429	AMPLIFIER,ELECTRONIC CONTROL
90005	5930-00-115-0027	SWITCH, PRESSURE
90006	5930-00-813-6331	SWITCH, PRESSURE
90030	5930-00-858-0500	SWITCH, PRESSURE
104840	5826-00-117-4629	INDICATOR, BEARING
105010	6610-00-116-4020	INDICATOR
105010	6610-00-116-4020	INDICATOR, FLIGHT DIRECTOR
106462		VALVE
122260	6605-01-112-5126	INDICATOR, HORIZONTAL SITUATION
177913		ACTUATOR
179307	2915-00-616-5726	ACTUATOR
199512	6615-00-888-9956	INDICATOR, THREE AXIS TRIM
214033	4820-00-887-4280	VALVE, PRESSURE REGULATOR
219815	4820-00-858-0502	VALVE, PRESSURE RELIEF
415509	4320-01-044-0522	MOTORPUMP, HYD
415509	4320-01-044-0522	PUMP, HYDRAULIC, ELECTRIC DRIVEN
472529	6620-01-063-9054	INDICATOR, TORQUEMETER
538088	6610-00-991-0770	INDICATOR, AIRSPEED
553543	SPINNER,PROP	1610-00-887-0119
553899	2995-00-807-3613	STARTER
582399	2995-00-757-3476	STARTER
607618	4320-00-887-1898	MOTORPUMP ASSY, A/C HYD
607618	4320-00-887-1898	PUMP, HYDRAULIC, ELECTRIC DRIVEN
607713	3020-00-832-2153	PUMP, HYDRAULIC
624318	6685-00-887-1970	TRANSMITTER, PRESSURE
627055	6625-00-079-7396	AMMETER
631944	6605-00-966-9501	INDICATOR, POSITION
631945	6605-00-966-9502	CONTROL, INDICATOR
656300	6680-00-974-0041	ACCELEROMETER, ELECTRICAL
658060	1650-00-858-0501	ACCUMULATOR, EMERGENCY BRAKE
668223	1650-00-767-2241	ACCUMULATOR ASSY, MLG
668275	4820-00-815-3610	VALVE,REGULATING
670764	6680-00-923-8466	GENERATOR,TACHOMETER
1763040	6110-00-888-1180	AMPLIFIER, ELECTRONIC
6404486	2915-00-464-6946	CONTROL
6404524		CONTROL
6404525		CONTROL



**WINGS AEROSPACE, LLC**  
**P-3 REPAIR CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
6719826	4810-00-037-7211	VALVE
6780223		VALVE
6781563		VALVE
6781566		VALVE
6781640	5930-00-642-9386	SWITCH
6782647	5945-00-500-6231	RELAYBOX
6809387		PUMP
6809573		VALVE
6809574	2915-00-877-3277	VALVE ASSEMBLY
6809639		RELAYBOX
6811702		VALVE
6812632		VALVE
6814740		CONTROL
6815100		SPEED CONTROL
6821493		SPEED VALVE
6823840	6620-00-053-2851	INDICATOR, TORQUEMETER
6846396		PUMP
6846567		PUMP
6846935	2840-00-015-8540	HOUSING,ANTIFRICTION
6850818		PUMP & FILTER ASSY
6852536	6620-00-914-2742	INDICATOR, TORQUEMETER
6858628		VALVE
6870215		PUMP
6871121		SPEED CONTROL
6873465		SPEED CONTROL
6888911		SPEED CONTROL
6889811		CONTROL
6889842		SPEED CONTROL
7854687		SPEED CONTROL
8575504		SPEED SENSING CONTROL
8575600		CONTROL
8576000		CONTROL
14200000	4920-00-169-1698	INTERROGATOR TEST SET
22253742	1650-01-334-3030	SERVOVALVE ASSEMBLY
23002366	5945-01-316-3929	RELAYBOX
23006660	2840-01-304-2149	PUMP
23030484	2915-01-296-3813	VALVE,TEMPERATURE D
23037203	2840-00-794-0030	RETAINER ASSY
23711461	1650-00-858-0501	ACCUMULATOR, EMERGENCY BRAKE
0009-0112-1	3010-01-437-8146	ACTUATOR, WING FLAP
0503101-1	1680-00-887-1967	REGULATOR, CABLE TENSION
0503102-1	1680-00-887-1968	REGULATOR, CABLE TENSION
10034602-102	6615-00-575-8765	GYROSCOPE, RATE
10067174-102	5841-01-111-5938	RADAR MODULATOR
100-849-17	6105-00-858-0383	MOTOR,DIRECT CURRENT
100-849-21	1650-00-561-8367	PUMP,HYDRAULIC, ELECTRIC DRIVEN



**WINGS AEROSPACE, LLC**  
**P-3 REPAIR CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
100-849-22	4320-00-887-1906	PUMP, HYDRAULIC
100-849-29	4320-01-567-7353	PUMP, HYDRAULIC, ELECTRIC DRIVEN
100-849-30	6105-00-130-6961	MOTOR, DIRECT CURRENT
100-849-33	4320-01-567-7352	PUMP, HYDRAULIC, ELECTRIC DRIVEN
100-849-35	4320-01-064-5802	PUMP, HYDRAULIC
102210-14-1	1660-01-067-0390	CONTROLLER, CAB PRES
102210-14-2	1660-01-159-9078	CONTROLLER, CAB PRES
102210-14-2A	1660-01-159-9078	CONTROLLER, CAB PRES
102210-16-1	1660-01-311-9984	CONTROLLER, CAB PRES
102210-9	1660-00-887-6728	CONTROLLER VALVE
102210-9 Series 2	1660-00-887-6728	CONTROLLER, CAB PRES
102210-9 Series 4	1660-00-887-6728	CONTROLLER, CAB PRES
102210-9A	1660-00-887-6728	CONTROLLER, CAB PRES
102226-3	1660-00-887-6729	VALVE, OUTFLOW
105010-1	6610-00-116-4020	INDICATOR, FLIGHT DIRECTOR
106040-3	1660-00-625-6195	REGULATOR, VENTURI-TYPE AIR FLOW
106040-4-1	1660-00-084-6707	REGULATOR, VENTURI-TYPE AIR FLOW
106462-1	1660-00-887-1914	VALVE, WING ANTI ICING
106462-3-1	4810-00-884-7571	VALVE, WING ANTI ICING
10700-5	1650-00-822-3351	VALVE, FLOW REGULATING
108342-2	2995-00-996-2333	VALVE, STARTER CTRL
108342-345-1	2995-00-996-2334	VALVE, STARTER CTRL
109206-2		VALVE
109206-3	2995-00-675-3641	VALVE
109206-7	2995-00-777-3690	VALVE
1-1160-10	4820-00-855-8436	VALVE, SHUT-OFF
118719-01	6615-00-587-8868	GYROSCOPE, DISPLACEMENT
119415-4	5895-01-272-8047	RECEIVER TRANSMITTER
1208793-1	6615-00-390-8431	CONTROL, ALTITUDE
123188-1	4820-00-818-7655	VALVE
1232374-3	6615-00-887-9305	ACCELEROMETER, ELECTRICAL
1249500-1	6615-00-887-6770	AMPLIFIER, CONTROL
1254422-1	6615-00-800-2544	ACTUATOR, LINEAR
1267003-1	6610-00-561-9375	TRANSMITTER, POSITION
1267519-1	6610-00-887-9308	TRANSMITTER, POSITION
1282297-1	6615-00-887-6775	INTEGRATOR, COMPUTER
1282297-3	6615-01-021-3613	COMPUTER MECHANISM
1282561-1	6615-00-887-6776	SYNCHRONIZER, ELECTRICAL
1283399-1	6615-00-887-6771	AMPLIFIER, LIMITER
1288938-2	6615-00-887-6720	GYROSCOPE ASSEMBLY
1301129-1	6615-00-887-6777	AMPLIFIER, FILTER ASSY
130R1903-4	4310-00-066-6168	COMPRESSOR PACKAGE ASSY
130R1903-5	4310-00-547-2747	COMPRESSOR PACKAGE ASSY
1311145-1	6615-00-887-6766	AMPLIFIER, RELAY
1316006-1	6615-00-416-8878	CONTROL, ALTITUDE
1316940-1	6615-00-887-6721	GYROSWITCH, RATE OF TURN CONTROL



**WINGS AEROSPACE, LLC**  
**P-3 REPAIR CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
133258-2-1	1660-00-757-7908	X-DUCER, PRESS GAUGE
133258-3-1	6695-01-342-6134	X-DUCER, PRESS GAUGE
133259-3	6620-01-327-0291	TRANSMITTER, PRESSURE
1356-563317	1650-00-887-1974	ACCUMULATOR ASSY, MLG
1356-633002	1650-00-767-2241	ACCUMULATOR ASSY, MLG
1374-598497	4810-00-887-4337	VALVE, RUDDER BOOSTER SHUT-OFF
147B30	6685-00-557-0372	INDICATOR, OUTSIDE AIR TEMP
1482-4	5930-00-801-8007	SWITCH, THERMOSTATIC
1483-4	5930-00-801-8009	SWITCH, THERMOSTATIC
1498302-001	6605-00-880-1396	INDICATOR, INDUCTION
15-0086-7	6220-00-918-3848	FLOODLIGHT, ELECTRICAL
15101-1FA5	6610-00-561-9352	INDICATOR, THREE AXIS TRIM
15103-3BA1	6615-00-888-9956	INDICATOR, THREE AXIS TRIM
15120-4	1630-00-887-4268	BRAKE VALVE
15207-1A2	6610-00-346-1478	ADAPTER, TRIM TAB
15207-1A4	6610-00-346-1479	ADAPTER, TRIM TAB
15208-1A3	6610-00-346-1475	ADAPTER, AMPLIFIER
15483-1D1	6615-00-055-7755	AMPLIFIER, COMPUTER
15483-1E1	6615-00-999-7454	AMPLIFIER, COMPUTER
1549150-1	6130-00-095-6136	POWER SUPPLY
15492-1B1	6615-01-033-9762	AMPLIFIER, AUTOPILOT COMPUTER
15514-1A	6615-00-390-8431	CONTROL, ALTITUDE
15514-1B	6615-00-416-8878	CONTROL, ALTITUDE
15514-3A	6615-00-390-8431	CONTROL, ALTITUDE
155149-801	6220-00-046-2333	PANEL, INDICATING, LIGHT
15647-1A	6615-00-800-2544	ACTUATOR, LINEAR
15720-5	1630-00-887-1916	VALVE, BRAKE
157365-01-01	6605-01-022-9501	CONTROL, INDICATOR
15747-2A	6605-01-195-6800	CONTROLLER, COMPASS
15755-1A	6615-00-887-1926	CONTROLLER, WHEEL
15755-1C	6615-00-987-1805	CONTROLLER, WHEEL
15757-1A	6615-00-888-3686	CONTROLLER, FLIGHT
15758-1A	6615-00-887-6764	CONTROLLER, WHEEL
15758-1C	6615-00-987-1804	CONTROLLER, WHEEL
15787-1A	6615-00-803-2337	CONTROLLER, WHEEL
15788-1A	6615-00-803-2338	CONTROLLER, WHEEL
15839-1A	6615-01-096-9996	CONTROL, YAW AND PITCH RATE
15839-1B	6615-00-887-6720	GYROSCOPE ASSEMBLY
15866-2D	1680-01-479-7143	GYRO, VERTICAL
15868-1A	6615-00-887-6721	RATE OF TURN CONTROL
15885-1A	6615-00-887-6722	GYROSCOPE, VERTICAL
15885-1B	6615-00-986-8995	VERTICAL GYRO
15885-1C	6615-00-182-7698	VERTICAL GYRO
16007-1	6615-00-346-1533	COUPLER, SINGLE CHANNEL
16007-1A	6615-00-346-1533	COUPLER, SINGLE CHANNEL
16007-2A	6615-00-346-1534	COUPLER, SINGLE CHANNEL



**WINGS AEROSPACE, LLC**  
**P-3 REPAIR CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
1616-5	1650-00-887-1917	ACTUATING CYLINDER, MLG DOOD
1616-7	1650-00-887-1917	ACTUATING CYLINDER, MLG DOOD
161980-01-01	6605-01-060-5126	CONTROL, INDICATOR
162B3		INDICATOR
16782-1B	6615-00-906-7385	SERVOMOTOR, AUTOPILOT
16782-1C	6615-00-867-0430	SERVOMOTOR, AUTOPILOT
16906-2A	6615-00-818-8035	PANEL, AUTOPILOT CONTROL
16913-1A	6615-00-887-6723	CONTROLLER, AUTOPILOT
17216-1A	6615-00-931-6593	CONTROL, DIRECTIONAL
1752600-1	6615-00-887-6723	CONTROLLER, AUTOPILOT
1752600-2	6615-00-986-7631	CONTROLLER, AUTOPILOT
1752676-1	6615-00-888-3686	CONTROLLER, FLIGHT
1753670-1	6615-00-887-6764	CONTROLLER, WHEEL
1762000-1	6615-00-887-1926	CONTROLLER, WHEEL
1762158-1	5950-00-887-4355	REACTOR ASSEMBLY
1762331-1	6110-00-887-6767	AMPLIFIER, ELECTRONIC
1763034-1	6615-00-887-6768	REACTOR ASSEMBLY
1766560-1	6615-00-887-6722	GYROSCOPE, VERTICAL
1773441-1	6615-00-887-6769	AMPLIFIER, FILTER ASSY
17860-7	1660-00-887-4285	CONTROL BOX, ELECTRONIC
179250-0003	5865-01-451-2868	COUNTERMEASURES DISPENSER SWITCH
1802529-1	6615-00-986-8995	GYROSCOPE, DISPLACEMENT
1803046-1	6625-00-065-3400	AMPLIFIER ASSEMBLY
1803124-1	6615-00-963-1321	AMPLIFIER, FILTER ASSY
1804425-1	6615-00-987-1804	CONTROLLER, WHEEL
1804430-1	6615-00-987-1805	CONTROLLER, WHEEL
18066(R)		SHUTTLE
18-1118	6620-00-717-1900	GAGE, PRESSURE
18-1118W	6620-00-717-1900	GAGE, PRESSURE
18-1138	6605-00-591-2330	INDICATOR, INDUCTION
1812502-1	5340-01-251-6539	COUPLER, MACH TRIM
1814054-1	6615-00-021-7144	AMPLIFIER, RELAY
1814326-1	6615-00-055-7755	AMPLIFIER, COMPUTER
1814337-1	6615-00-072-4500	AMPLIFIER, FILTER ASSY
1824501-1	6615-00-793-2684	AMPLIFIER, FILTER ASSY
1842368-1	6110-00-868-7170	AMPLIFIER, ELECTRONIC
1851420-1	6615-00-179-2349	SYNCHRONIZER, ELECTRICAL
1860428-1	6615-00-999-7454	AMPLIFIER, COMPUTER
1860553-1	6615-00-918-6483	AMPLIFIER, FILTER ASSY
190772-1		VALVE
190772-2	2915-00-626-3123	VALVE
1916714-1	6615-00-887-6777	AMPLIFIER, FILTER ASSY
19951-2	6615-00-888-9956	INDICATOR, THREE AXIS TRIM
1P414APA125	5895-00-623-2281	INDICATOR ASSY
2001230-1	5855-01-052-6953	CONTROL SERVO, ELECTRICAL
2001240-1	5855-01-053-0674	CONTROL, DETECTING



**WINGS AEROSPACE, LLC**  
**P-3 REPAIR CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
2001257-1	5855-01-052-6994	CONTROL HANDLE
2001343-1	5855-01-052-6943	GYRO ASSY
20204-0101	6680-01-437-8170	TRANSMITTER, LIQUID
20204-0102	6680-01-437-8171	TRANSMITTER, LIQUID
20204-0103	6680-01-437-8174	TRANSMITTER, LIQUID
20204-0104	6680-01-437-8173	TRANSMITTER, LIQUID
20204-0105	6680-01-437-8179	TRANSMITTER, LIQUID
20204-0106	6680-01-437-8176	TRANSMITTER, LIQUID
20205-0101	6680-01-437-8182	TRANSMITTER, LIQUID
20206-0101	6680-01-437-8184	TRANSMITTER, LIQUID
20207-0101	6680-01-437-8181	TRANSMITTER, LIQUID
20208-0101	6680-01-437-8178	TRANSMITTER, LIQUID
20209-0101	6680-01-437-8175	TRANSMITTER, LIQUID
20210-0101	6680-01-437-8177	TRANSMITTER, LIQUID
20211-0101	6680-01-437-8180	TRANSMITTER, LIQUID
20211-0102	6680-01-437-8183	TRANSMITTER, LIQUID
203250-1	1660-00-887-4282	COOLING TURBINES
203250-2	1660-00-887-4283	COOLING TURBINES
204770-1-1	1660-00-909-9594	COOLING TURBINES
204770-2-1	1660-00-909-9595	COOLING TURBINES
204790-1-1	4310-00-909-5591	COMPRESSORS, TURBINE DRIVEN
204790-2-1	4310-01-177-9505	COMPRESSORS, TURBINE DRIVEN
206400-2-1	4310-00-143-9222	COMPRESSOR, ENG DRVN
206400-2-2	4310-00-149-7845	COMPRESSOR, ENG DRVN
206400-3-1	4310-00-567-3136	COMPRESSOR, ENG DRVN
206400-3-1B	4310-01-462-3916	COMPRESSOR, ENG DRVN
206400-6-1	4310-21-879-7180	COMPRESSOR, ENG DRVN
206400-7-1	4310-01-296-0634	COMPRESSOR, ENG DRVN
206400-7-1A	4310-01-296-0634	COMPRESSOR, ENG DRVN
206400-7-2	4310-01-296-0634	COMPRESSOR, ENG DRVN
206449-6	4820-01-144-4063	SURGE BLEED VALVE
206449-7	4820-01-322-7052	SURGE BLEED VALVE
206623-10	4310-01-434-1995	ASSY, COMP PRE-SWIRL
206623-8	4310-01-431-0665	ASSY, COMP PRE-SWIRL
2086151-7	5826-00-887-1934	CONTROL UNIT
2-1109	1630-00-927-1773	BRAKE,MULTIPLE DISK
217-543	6105-00-858-0383	MOTOR,DIRECT CURRENT
2210191-1	4310-01-319-5804	ASSY, COMP DISCONNECT
2215790-2-1	4310-01-477-7389	AIR FLOW MULTIPIER
229A460-1	6110-01-483-0639	PANEL, CONTROL ELECTRICAL
2300-4	4810-00-858-0477	VALVE, PRESSURE REDUCING
236-002	6625-00-079-7396	AMMETER
25101A10C2C1	6620-00-717-1900	INDICATOR
25101A10C2C1	6620-00-717-1900	GAGE, PRESSURE
25122A10B1B1	6620-00-717-1900	GAGE, PRESSURE
2591201-903	6605-01-081-8015	COUPLER, COMPASS



**WINGS AEROSPACE, LLC**  
**P-3 REPAIR CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
26503-C6-MA-1	6605-00-880-1396	INDICATOR, INDUCTION
27500-1	4920-00-799-5023	AUTOPILOT LOAD SENSOR
28B95-15A	6115-00-868-1777	GENERATOR,AC
28B95-15B	6115-00-857-5100	GENERATOR,AC
28B95-15C	6115-00-791-4162	GENERATOR,AC
28B95-15D	6115-00-138-9493	GENERATOR,AC
28B95-15-D	6115-00-138-9493	GENERATOR,AC
28B95-15D-V	6115-01-121-4129	GENERATOR,AC
28B95-65A	6115-01-053-7272	GENERATOR,AC
28B95-65-A	6115-01-053-7272	GENERATOR,AC
2CM9ACF8	6680-00-923-8466	GENERATOR,TACHOMETER
3053570-1-1	1650-00-019-6127	VALVE
3053593-1-1	1650-00-566-0335	VALVE,BOMB-BAY DOOR
309-001-001	6685-00-234-7118	INDICATOR, TEMP, TURBINE INLET
3-1267	1630-00-927-1772	WHEEL, MAIN LANDING GEAR
3-1267-1	1630-01-115-1715	WHEEL, MAIN LANDING GEAR
3-1284	1630-00-075-1976	WHEEL, NOSE LANDING GEAR
31400-1	6615-00-566-0331	AUTOPILOT LOAD SENSOR
3-1864-4-2	1680-00-866-7184	VALVE, NEEDLE CONTROL
32164-009	6680-00-923-8466	GENERATOR,TACHOMETER
330508-2	2915-01-296-3813	VALVE,TEMPERATURE D
34102C2B3-2D1	6620-00-543-2534	INDICATOR, ELECTRICAL TACHOMETER
356564-4		STARTER
36E79-10A	2995-00-868-8838	STARTER,AIR TURBINE
36E79-10QA	2995-01-604-7728	STARTER,AIR TURBINE
36E79-12A	2995-00-933-7254	STARTER,AIR TURBINE
36E79-12B	2995-00-111-3651	STARTER,AIR TURBINE
36E79-12QA	2995-01-124-1891	STARTER,AIR TURBINE
36E79-12QB	2995-01-604-7727	STARTER,AIR TURBINE
36E79-18B	2995-01-452-1844	STARTER,AIR TURBINE
36E79-18QA		STARTER,AIR TURBINE
36E79-18QB	2995-01-452-1844	STARTER,AIR TURBINE
36E79-20QA	2995-01-533-6570	STARTER,AIR TURBINE
36E79-6A	2995-00-053-4505	STARTER,AIR TURBINE
37200-301	1650-00-887-4278	VALVE, WING FLAP HYD CONTROL
372697-10	2920-00-906-6251	APU STARTER
383074-1-1		STARTER, AIR TURBINE
383074-1-2		STARTER
383074-1-5		STARTER, AIR TURBINE
383076-1-1	2995-00-020-6111	STARTER, AIR TURBINE
383076-1-2		STARTER
383076-1-5		STARTER, AIR TURBINE
383350-10-1		STARTER
383350-1-1		STARTER
383350-11-1		STARTER
383350-12-1		STARTER



**WINGS AEROSPACE, LLC**  
**P-3 REPAIR CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
383350-13-1		STARTER
383350-14-1		STARTER
383350-2-1		STARTER
383350-3-1		STARTER
383350-4-1		STARTER
383350-5-1		STARTER
383350-6		STARTER
383350-6-1		STARTER
383350-7		STARTER
383350-7-1		STARTER
383350-8-1		STARTER
383350-9-1		STARTER
383650-1-1	2995-00-045-3347	STARTER, AIR TURBINE
383650-1-2	2995-00-045-3347	STARTER, AIR TURBINE
383650-2	2995-01-462-4613	STARTER, AIR TURBINE
383650-3	2995-01-534-2540	STARTER, AIR TURBINE
383652-1-1	2995-00-111-3653	STARTER, AIR TURBINE
383652-1-2		STARTER, AIR TURBINE
383670-1-1		STARTER
383670-2-1		STARTER
383670-3-1		STARTER
383670-4-1		STARTER
383670-5-1		STARTER
38E45-11A	4810-01-232-3101	VALVE
38E45-1C	2995-00-911-6736	VALVE
38E45-1D	2995-00-911-6736	VALVE
38E45-1E	2995-00-168-2418	VALVE
38E45-4A	4810-00-235-3450	VALVE
38E45-4B	4810-01-058-5300	VALVE
38E45-73-5A		VALVE
38E45-8A	2915-00-103-8603	VALVE
38E73-5A	4810-01-007-8013	VALVE
3906-2DA2	6610-00-663-4119	INDICATOR, TURN AND SLIP
3907-2KA2-4	6610-00-627-4587	INDICATOR, TURN AND SLIP
391057-178	6680-01-043-2240	TRANSMITTER, LIQUID QTY
391057-179	6680-01-043-2241	TRANSMITTER, LIQUID QTY
391057-180	6680-01-043-2239	TRANSMITTER, LIQUID QTY
391057-181	6680-01-042-8205	TRANSMITTER, LIQUID QTY
391057-182	6680-01-042-9866	TRANSMITTER, LIQUID QTY
391057-183	6680-01-044-7174	TRANSMITTER, LIQUID QTY
391057-184	6680-01-042-8203	TRANSMITTER, LIQUID QTY
391057-185	6680-01-042-9867	TRANSMITTER, LIQUID QTY
391057-186	6680-01-042-9864	TRANSMITTER, LIQUID QTY
391057-187	6680-01-042-9865	TRANSMITTER, LIQUID QTY
391057-188	6680-01-043-2238	TRANSMITTER, LIQUID QTY
391057-189	6680-01-042-8204	TRANSMITTER, LIQUID QTY





**WINGS AEROSPACE, LLC**  
**P-3 REPAIR CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
391072-02752	6680-00-806-4335	TRANSMITTER, LIQUID QTY
391072-02753	6680-00-806-4339	TRANSMITTER, LIQUID QTY
391073-01751	6680-00-806-4340	TRANSMITTER, LIQUID QTY
391074-01740	6680-00-806-4341	TRANSMITTER, LIQUID QTY
391074-01748	6680-00-806-4343	TRANSMITTER, LIQUID QTY
391074-02741	6680-00-806-4342	TRANSMITTER, LIQUID QTY
391074-02745	6680-00-806-4362	TRANSMITTER, LIQUID QTY
391074-02746	6680-00-806-4351	TRANSMITTER, LIQUID QTY
391074-02749	6680-00-806-4361	TRANSMITTER, LIQUID QTY
391075-02747	6680-00-806-4367	TRANSMITTER, LIQUID QTY
391075-02754	6680-00-806-4370	TRANSMITTER, LIQUID QTY
391075-04750	6680-00-806-4366	TRANSMITTER, LIQUID QTY
392200-1		STARTER
392200-10-1	6610-99-593-8834	STARTER
392200-11-1	4810-00-106-7401	VALVE, PRESSURE REGULATING
392200-12-1		VALVE, PRESSURE REGULATING
392200-2-1		STARTER
392200-5-1		STARTER
392200-6-1		STARTER
392556-1	1660-00-903-0836	REGULATOR, SHUT-OFF
392556-1-1	1660-00-903-0836	VALVE, FLUID REGULATING
393007-07869	6680-00-815-7282	FUEL QTY INDICATOR
393007-07870	6680-00-815-7285	FUEL QTY INDICATOR
393065-01858	6680-00-815-7284	INDICATOR, LIQUID QTY
39900-303	1620-00-019-6125	VALVE,STEERING NOSE
3K90000-159	6615-00-867-0430	SERVOMOTOR, AUTOPILOT
407031-1	5841-00-717-5233	CONTROL ASSY
41-2036-002	4810-00-627-4825	VALVE
41D110	4810-00-822-3052	VALVE, SHUTOFF MOTOR OPERATED
41D110-1	4810-00-943-5223	VALVE, SHUTOFF MOTOR OPERATED
41D230	2995-00-822-3053	VALVE, SHUTOFF
4217-543000	1650-00-130-6961	MOTOR, DIRECT CURRENT
4217-543-000	6105-00-858-0383	MOTOR,DIRECT CURRENT
43030-1	4810-00-914-9508	VALVE,CROSS
43030-11	4810-00-085-1104	VALVE,CROSS
438023-2	6620-00-053-2850	INDICATOR, TORQUEMETER
45520B21	6220-00-018-3998	LIGHT ASSY
4562-5A7-1	6610-00-561-9375	TRANSMITTER. DUAL POSITION
4564-5A6-1	6610-00-887-9308	TRANSMITTER ASSY. SINGLE POS
464782-1	6605-00-992-8630	COMPASS ADAPTER
4912-1A	6615-00-887-9305	ACCELEROMETER, ELECTRICAL
500702-3613	4140-00-241-0065	FAN ASSEMBLY, VANE AXIAL
501-1032-01	6610-00-787-7652	INDICATOR, STANDBY ATTITUDE
501-1049-51	6610-00-165-5838	INDICATOR, STANDBY ATTITUDE
501-1804-01	6610-01-464-5517	INDICATOR, GYRO HORIZON
510414-3-1	6610-00-887-6725	COMPUTER, TRUE AIRSPEED



**WINGS AEROSPACE, LLC**  
**P-3 REPAIR CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
510414-3-2	6610-00-759-7170	COMPUTER, TRUE AIRSPEED
52730-1	1650-00-887-4271	VALVE, FLAP ASYMMETRY
52730-2	1650-01-245-5935	VALVE, FLAP ASYMMETRY
529278-1	5996-00-999-3891	AMPLIFIER,ELECTRONIC CONTROL
533978-1	6605-00-061-3041	INDICATOR, VARIATION
535320-2	6610-00-887-7041	AMPLIFIER, COMPUTER
538088-0-2	6610-00-991-0770	INDICATOR, AIRSPEED
57710-2		VALVE,REGULATING
57710-4	4820-00-815-3610	VALVE,REGULATING
583R496H01	1270-01-060-1083	WAVEGUIDE DUPLEXER
588532-1	1660-00-075-0576	SENSOR, TEMPERATURE
595483-1	5841-00-115-9291	CONTROL MODULE
602110-5	6680-00-887-6763	ACCELEROMETER, ELECTRICAL
60-2650-1	6130-01-017-5448	POWER SUPPLY, LIGHT
604950-3	6615-00-952-3424	GYROSCOPE, DISPLACEMENT
607220-3	6615-00-887-6735	GYROSCOPE, DISPLACEMENT
607618-1	4320-00-124-1588	MOTORPUMP ASSY, A/C HYD
619243-103	6220-00-918-3848	FLOODLIGHT, ELECTRICAL
619260-1	6220-00-918-3848	FLOODLIGHT, ELECTRICAL
620533-1	6615-00-888-9956	INDICATOR, THREE AXIS TRIM
620536-1	6685-00-887-9302	INDICATOR, RATE OF CLIMB
620865-103	6620-00-928-0216	INDICATOR, TORQUEMETER
620865-105	6620-00-151-5363	INDICATOR, TORQUEMETER
620865-107	6620-00-148-7313	INDICATOR, TORQUEMETER
622273-103	6620-00-738-5996	INDICATOR, TURBINE
622274-1	6220-00-858-0915	INDICATOR, FLAP POSITION
622275-7	6610-00-887-9301	INDICATOR, AIRSPEED
622280-1	6620-00-800-2601	INDICATOR, TACHOMETER
624318-1	6685-00-887-1970	TRANSMITTER, PRESSURE
624332-1	6685-00-887-6814	INDICATOR, FLAP POSITION
624334-1	6685-00-887-6815	INDICATOR, PRESSURE
624395-3	6680-00-319-1722	INDICATOR, QUANTITY
6-256-251	2915-00-822-3059	VALVE, LEVEL SENSING PILOT
626150-1	6685-00-887-9303	INDICATOR, PRESSURE
626151-1	6685-00-887-1971	TRANSMITTER, PRESSURE
626158-1	6685-00-887-6813	INDICATOR, PRESSURE
626159-1	6685-00-887-1972	TRANSMITTER, PRESSURE
626175-1	6685-00-325-1527	INDICATOR, TEMPERATURE
629781-99	6220-00-111-7318	PANEL, INDICATING, LIGHT
6300A50B14A4	6620-00-515-4735	INDICATOR, PRESSURE
6300A50B14B1	6620-00-820-9616	INDICATOR, PRESSURE
6404486J		CONTROL
644647-51	1660-00-887-6729	VALVE,CABIN EXHAUST
644673-101		VALVE,CROSS
644673-105	4810-00-085-1104	VALVE,CROSS
644673-51	4810-00-566-0332	VALVE,CROSS



**WINGS AEROSPACE, LLC**  
**P-3 REPAIR CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
644810-51	2995-00-822-3053	VALVE,HOT AIR
644829-1	5930-00-948-3854	SWITCH, PRESSURE
644845-5	1660-00-887-4344	SENSOR ASSEMBLY
644849-5	1660-00-887-4284	SENSOR ASSEMBLY
65-0092-1	6220-00-967-0001	LIGHT ASSY
650838-2	1660-00-804-3636	KIT CURE
658059-9	1630-00-887-4268	VALVE,BRAKE EMERGENCY
658060-57		ACCUMULATOR, EMERGENCY BRAKE
668163-1	5930-00-115-0027	SWITCH, PRESSURE
668164-1	5930-00-813-6331	SWITCH, PRESSURE
668215-9	5930-00-858-0500	SWITCH, PRESSURE
668223-1	1650-00-887-1974	ACCUMULATOR ASSY, MLG
668223-101	1650-00-767-2241	ACCUMULATOR ASSY, MLG
668225-1	1650-00-887-4271	VALVE, FLAP ASYMMETRY
668225-101	1650-01-245-5935	VALVE, FLAP ASYMMETRY
668242-19	1620-00-019-6125	VALVE,STEERING NOSE
668260-5	1650-00-822-3351	VALVE,FLOW REGULATING
668263-5	4820-00-887-4280	VALVE, PRESSURE REGULATOR
668275-9		VALVE,REGULATING
668276-11	4820-00-858-0502	VALVE, PRESSURE RELIEF
668281-11	1630-00-887-1916	VALVE ,DUAL BRAKE
668293-101	4320-01-567-7353	PUMP,HYDRAULIC, ELECTRIC DRIVEN
668293-103	6105-00-130-6961	MOTOR,DIRECT CURRENT
668293-107	4320-01-567-7352	PUMP,HYDRAULIC, ELECTRIC DRIVEN
668293-109	4320-01-064-5802	PUMP,HYDRAULIC
668293-13		PUMP,HYDRAULIC, ELECTRIC DRIVEN
668293-9	6105-00-858-0383	MOTOR,DIRECT CURRENT
668400-5	1650-00-019-6127	VALVE, LANDING GEAR
668401-1	4810-00-887-4337	VALVE,RUDDER BOOSTER SHUT-OFF
668402-5	1650-00-566-0335	VALVE,LINEAR,DIRECTIONAL CONTROL
668427-1	4320-00-887-1898	PUMP, HYDRAULIC, ELECTRIC DRIVEN
668427-101	4320-01-044-0522	PUMP, HYDRAULIC, ELECTRIC DRIVEN
668443-1	4820-00-855-8436	VALVE,GLOBE
669345-13	1680-00-887-1911	ACTUATOR,OIL COOLER FLAP DOOR
669364-101		ACTUATOR, WINDSHIELD WIPER
669419-1	4810-00-858-0477	VALVE, PRESSURE REDUCING
669424-101	3040-01-337-8854	ACTUATOR, WING FLAP
669424-5	1680-00-887-1910	ACTUATOR, WING FLAP
669424-7	3040-00-566-0336	ACTUATOR, WING FLAP
669425-101		BRAKE, WING FLAP
669425-103	1680-01-253-9642	BRAKE, WING FLAP
669425-105	1680-01-382-5112	BRAKE, WING FLAP
669425-5	1680-00-887-1909	BRAKE, WING FLAP
670735-105	1660-00-903-0836	REGULATOR, SHUT-OFF
670752-105	1680-00-877-6388	ACTUATOR, EXHAUST DOOR
670752-107	1680-01-181-1374	ACTUATOR, EXHAUST DOOR



**WINGS AEROSPACE, LLC**  
**P-3 REPAIR CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
670764-103	6680-00-923-8466	GENERATOR,TACHOMETER
670785-101	6685-00-919-2188	INDICATOR, TEMP, TURBINE INLET
670785-105	6685-01-047-8368	INDICATOR, TEMP, TURBINE INLET
670785-107	6685-01-143-2704	INDICATOR, TEMPERATURE
670785-109	6685-00-234-7118	INDICATOR, TEMP, TURBINE INLET
670785-111	6685-01-176-3649	INDICATOR, TEMP, TURBINE INLET
670835-101	1630-00-927-1773	BRAKE,MULTIPLE DISK
670836-103	1630-01-115-1715	WHEEL, MAIN LANDING GEAR
671353-101	5826-00-117-4629	INDICATOR, BEARING
671361-101	1630-00-075-1976	WHEEL, NOSE LANDING GEAR
671380-101	5845-00-122-1667	CONTROL, INDICATOR
671380-103	5845-00-122-1667	CONTROL, INDICATOR
671394-107	6220-00-003-1524	LIGHT, COCKPIT, AIRCRAFT
671394-109	6220-00-119-5611	LIGHT, COCKPIT, AIRCRAFT
671CPX10-051		ALTIMETER
672253-103	6615-00-524-0245	CONTROL, ALTITUDE
673483-101	6220-01-020-2550	STROBE LIGHT
673483-103	6130-01-017-5448	POWER SUPPLY, LIGHT
673497-101	1650-01-018-4175	FILTER, HYDRAULIC COOLING
673498-101	1650-01-022-8787	FILTER, HYDRAULIC RETURN
673662-101	4810-01-443-6770	VALVE, START CONTROL
681200-1	5895-00-168-3590	AMPLIFIER-POWER SUPPLY
68-13A	4820-00-815-3610	VALVE,REGULATING
681508-1	5945-01-224-0481	SOLENOID ASSY
681509-2	1660-01-004-5583	ASSY, COMP DISCONNECT
6821493R		SPEED VALVE
700200-1	4810-00-485-8062	VALVE, START CONTROL
705922-1	1660-00-943-8035	PANEL, MODULE
705922-3	1660-00-973-8037	PANEL, MODULE
705922-4	1660-01-104-9387	PANEL, MODULE
705981-801	5845-00-129-6521	INDICATOR, BEARING
709570-801	5845-00-179-3212	INDICATOR, BEARING
737079-2	2995-00-225-2567	STARTER
740165-101	6220-00-967-0001	LIGHT ASSY
740620-101	5945-00-167-7460	SENSOR, UNDERVOLTAGE
740620-103	5945-00-165-3815	SENSOR, UNDERVOLTAGE
7509-9A31	6685-00-663-5726	TRANSMITTER, PRESSURE
7509-9A32	6685-00-663-8564	TRANSMITTER, PRESSURE
7581731G1	5855-00-156-8552	SENSOR, LOW LIGHT
7619-10A5-1	6620-00-895-3880	TRANSMITTER, PRESSURE
7639711G2	5855-00-168-8839	LIGHT CONTROL ASSY
773965-1	1610-01-085-0310	CONTROL, REAR COVER, SEAL ASSY.
801471-9	1650-00-804-3608	ACTUATOR ASSEMBLY, MLG
802275-1	1650-00-887-4299	ACTUATING CYLINDER, NLG
802406-1	5995-01-052-7117	GYROSCOPE, RATE
802406-2		RATE INTEGRATING GYRO, LC22A



**WINGS AEROSPACE, LLC**  
**P-3 REPAIR CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
832071-3	1560-00-806-6288	DAMPER ASSEMBLY, CO-PILOTS COLUMN
8AW43AAA221		AMMETER AC
8AW61-LAL3		AC FAULT IND
8DJ44AAS4	6680-00-663-4171	INDICATOR, LIQUID QUANTITY
8DJ50BAB2	6610-00-514-5289	INDICATOR, POSITION
8DJ50CAB1	6610-00-514-5206	INDICATOR, POSITION
8DJ50DAC2	6610-00-603-3578	INDICATOR, POSITION
8DJ50LAB1	6610-00-390-8454	INDICATOR, POSITION
8DJ50RAA2	6610-00-601-0293	INDICATOR, POSITION
8DJ64GAX1	6620-00-021-2239	INDICATOR, FUEL FLOW
8DJ64-GAX1		FUEL FLOW INDICATOR
8DJ81CAA2	6620-00-969-3972	INDICATOR
8DJ81CAN1	6620-00-800-2601	INDICATOR, TACH
8DJ81-CAN1		TACH INDICATOR
8DJ81CAN2	6620-00-543-2534	INDICATOR, TACHOMETER
8DJ81-CAN2		INDICATOR
8TJ25ABK1	6680-00-514-3339	TRANSMITTER, LIQUID
8TJ26AAR3	6680-00-343-9422	TRANSMITTER, LIQUID
8TJ64GAL	6620-00-020-3211	XMIT, FUEL FLOW
8TJ64GAL1	6620-00-020-3211	FUEL FLOW TRANSMITTER
8TJ77GAA1	6130-00-019-8390	FLOWMETER POWER SUPPLY
8TJ88GAH1	6130-00-906-9917	FLOWMETER, FUEL
8TJ88-GAH1		FUEL FLOWMETER
8TJ88GAH3	6130-01-224-4291	FLOWMETER, FUEL
8TJ88GAH4	6130-01-348-1008	FLOWMETER POWER SUPPLY
900853-1	1560-00-821-5110	PANEL, CENTER
901559-113	1650-00-962-1755	BOOSTER ASSEMBLY, AILERON
901561-113	1650-00-962-1558	BOOSTER ASSEMBLY, ELEVATOR
901572-3	1650-00-821-4048	CYLINDER ASSY, AILERON BOOSTER ACTU
901574-3	1650-00-821-4051	CYLINDER ASSY, ELEV BOOSTER ACTU
901711-1	1680-00-887-4392	ACTUATOR ASSY, DEMAGNETIZED
901711-109	1680-00-887-4392	ACTUATOR ASSY, L/H ELEV TRIM TAB
901711-111	1680-00-887-4392	ACTUATOR ASSY, R/H ELEV TRIM TAB
901711-113	1680-00-887-4392	ACTUATOR ASSY, RUDDER TRIM TAB
901711-119	1680-00-966-9485	ACTUATOR ASSY, UNIVERSAL TRIM
901711-121	1680-00-887-4392	ACTUATOR ASSY, L/H AILERON TRIM
901711-123	1680-00-887-4392	ACTUATOR ASSY, R/H AILERON TRIM
901711-3	1680-00-887-4392	ACTUATOR ASSY, DEMAGNETIZED
901711-5	1680-00-887-4392	ACTUATOR ASSY, DEMAGNETIZED
901917-101	1620-00-867-1279	SHOCK STRUT ASSEMBLY
901917-103	1620-01-578-8751	SHOCK STRUT ASSEMBLY
901918-103		SHOCK STRUT, NOSE LANDING GEAR
901918-105	1620-01-103-2907	STRUT, NOSE LANDING GEAR
901918-107		LANDING GEAR ASSEMBLY, NLG
901960-1	1620-00-821-5229	STRUT ASSEMBLY,SIDE
902387-1	1620-00-821-5265	STRUT ASSY, UPPER DRAG



**WINGS AEROSPACE, LLC**  
**P-3 REPAIR CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
902389-1	1620-00-821-5248	STRUT ASSY, UPPER DRAG
902607-1	1650-00-887-4305	CYLINDER ASSEMBLY, UPLOCK, BOMB BAY DOORS
906016-101	1650-00-957-4628	VALVE, SERVO
906016-103	1650-00-063-9549	VALVE, SERVO
906016-103A		VALVE, SERVO
906016-104	1650-00-124-1579	VALVE, SERVO
908914-7	1560-00-806-5595	DAMPER ASSEMBLY, UPPER RUDDER VISCOUS CYLINDER
915640-1		
921874-1	1560-00-806-5594	DAMPER ASSEMBLY, LOWER RUDDER VISCOUS DAMPER ASSEMBLY, HORIZONTAL STABILIZER ELEVATOR
931998-101	1560-00-073-6983	
932579-101		INDICATOR
933137-101	1680-21-894-1917	ACTUATOR ASSY, DEMAGNETIZED
933137-103	1680-21-894-1918	ACTUATOR ASSY, DEMAGNETIZED
933137-105	1680-01-005-4807	ACTUATOR ASSY, DEMAGNETIZED
933137-107	1680-00-760-0654	ACTUATOR ASSY, DEMAGNETIZED
933137-109	1680-21-894-1919	ACTUATOR ASSY, DEMAGNETIZED
933137-111	1680-21-894-1920	ACTUATOR ASSY, DEMAGNETIZED
933192-101	5826-00-945-8062	INDICATOR, RADIO MAGNETIC
938000-101		HYD ASSY, RUDDER
938000-107	1650-00-004-4791	HYD ASSY, RUDDER
938000-109	1650-00-003-8887	HYD ASSY, RUDDER
938000-111	1650-00-148-7564	HYD ASSY, RUDDER
938001-101	1650-00-929-8870	BOOSTER ASSY, RUDDER
938001-103		BOOSTER ASSY, RUDDER
938001-105	1650-00-021-4292	BOOSTER ASSY, RUDDER
938001-109	1650-00-449-1909	BOOSTER ASSY, RUDDER
938001-111	1650-00-148-7563	BOOSTER ASSY, RUDDER
938002-101		HYD ASSY, AILERON
938002-107	1650-00-004-9788	HYD ASSY, AILERON
938002-109	1650-00-004-9789	HYD ASSY, AILERON
938002-111	1650-00-148-7567	HYD ASSY, AILERON
938003-101	1650-00-929-8866	BOOSTER ASSY, AILERON
938003-103		BOOSTER ASSY, AILERON
938003-105	1650-00-021-4294	BOOSTER ASSY, AILERON
938003-109	1650-00-449-1922	BOOSTER ASSY, AILERON
938003-111	1650-00-148-7566	BOOSTER ASSY, AILERON
938004-101		HYD ASSY, ELEVATOR
938004-107	1650-00-004-9757	HYD ASSY, ELEVATOR
938004-109	1650-00-004-9758	HYD ASSY, ELEVATOR
938004-111	1650-00-148-7570	HYD ASSY, ELEVATOR
938005-101	1650-00-929-8871	BOOST ASSY, ELEVATOR
938005-103		BOOST ASSY, ELEVATOR



**WINGS AEROSPACE, LLC**  
**P-3 REPAIR CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
938005-105	1650-00-021-4291	BOOST ASSY, ELEVATOR
938005-111	1650-00-148-7568	BOOST ASSY, ELEVATOR
942607-107	6610-01-346-2795	INDICATOR, RATE OF CLIMB
953183-1	5985-01-187-9140	ELECTRONIC SWITCH CIRCUIT CARD ASSEMBLY
972177-101	6220-01-139-7340	PANEL, INDICATING, LIGHT
979369-103	3040-01-397-6147	ACTUATOR, WIND FLAP
9A1300	6620-01-242-7236	INDICATOR, TORQUEMETER
A13A	6645-00-403-4947	AIRCRAFT CLOCK
A13A2	6645-00-150-6526	AIRCRAFT ELAPSED TIME CLOCK
A26877-10-001	6685-00-887-9302	INDICATOR
A2850-5	6615-00-869-0825	RATE GYRO XMITTER
A33971-10-005	6610-00-887-9301	INDICATOR, AIRSPEED
A9381	6105-00-858-0383	MOTOR,DIRECT CURRENT
A-9381	6105-00-858-0383	MOTOR, DIRECT CURRENT
A9381M1	6105-00-130-6961	MOTOR,DIRECT CURRENT
A9381-M1	6105-00-130-6961	MOTOR,DIRECT CURRENT
A-9381M1	1650-00-130-6961	MOTOR, DIRECT CURRENT
AAU-21/A	6610-00-168-0797	ALTIMETER, ENCODING
AAU21A	6610-00-405-6461	ALTIMETER
AAU24A		ALTIMETER
AAU-32/A	6610-00-134-5625	ALTIMETER, ENCODING
AG44	6680-00-585-1503	GENERATOR,TACHOMETER
AI-803B	6610-00-787-7652	INDICATOR, STANDBY ATTITUDE
AM-1967A/ASQ-10	5996-00-976-1429	AMPLIFIER,ELECTRONIC CONTROL
AM1967AASQ10	5996-00-999-3891	AMPLIFIER,ELECTRONIC CONTROL
AM1967ASQ10	5996-00-903-3224	AMPLIFIER,ELECTRONIC CONTROL
AM-4535/ASQ-81V	5895-00-168-3590	AMPLIFIER-POWER SUPPLY
AM4535ASQ81V	5895-00-168-3590	AMPLIFIER-POWER SUPPLY
AN3203V30		VOLTMETER
AN5745T2A	6610-00-515-3324	ACCELEROMETER
AN5766T4		STANDBY COMPASS
AN5791-1	6685-00-557-0372	INDICATOR, OUTSIDE AIR TEMP
AN5791-2	6685-00-514-5331	INDICATOR, OUTSIDE AIR TEMP
AN5839-2	6695-00-628-8990	INDICATOR, LANDING GEAR POSITION
ATS100-169		STARTER, AIR TURBINE
ATS100-294		STARTER
ATS100-346	2995-00-470-8080	STARTER, AIR TURBINE
AV16B1609		VALVE
AV16B1824		VALVE
AV16D1121B	2915-00-818-7798	VALVE, MOTOR OPER. SHUT OFF
AV16E1131B	2915-00-887-1904	VALVE, MOTOR OPER. SHUT OFF
AV16F1103		HOUSING
B-1836	5945-00-167-7460	SENSOR, UNDERVOLTAGE
B-183C	5945-00-167-7460	SENSOR, UNDERVOLTAGE
B2-96800-2		ASSY, CONTROL VALVE
B2-96800-3		ASSY, CONTROL VALVE



**WINGS AEROSPACE, LLC**  
**P-3 REPAIR CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
B41542-10-002	6610-00-134-5625	ALTIMETER, ENCODING
B41542-10-003	6610-00-168-0797	ALTIMETER, ENCODING
B44232-10-101	6610-00-459-4578	ALTIMETER, PRESSURE
B45152-10-402	1680-01-485-5685	ALTIMETER, AIRCRAFT
B6200-2		ASSY, CONTROL VALVE
B709-4	6620-00-928-0216	INDICATOR, TORQUEMETER
B709-7	6620-00-151-5363	INDICATOR, TORQUEMETER
B709-7J	6620-00-148-7313	INDICATOR, TORQUEMETER
BA5-01082-509	6220-00-119-5611	LIGHT, COCKPIT, AIRCRAFT
BD5-01082-507	6220-00-003-1524	LIGHT, COCKPIT, AIRCRAFT
BD5-01082-509	6220-00-119-5611	LIGHT, COCKPIT, AIRCRAFT
BG1053AA01	6615-01-004-9354	INVERTER, ELECTRICAL
BH183M13	6620-00-020-6096	INDICATOR, TEMPERATURE
BH183R16	6620-00-738-5996	INDICATOR, TEMP, TURBINE INLET
BH183R58	6685-00-919-2188	INDICATOR, TEMP, TURBINE INLET
BYLB7520	4810-00-566-0332	ACTUATOR & VALVE ASSY
C-10421/ASN-124	6605-01-060-5126	CONTROL, INDICATOR
C-10687/AOD-159A	5895-01-081-7646	CONTROL, INDICATOR
C-11104/A	1680-01-174-1962	PANEL, CONTROL ELECTRICAL
C-12639/ASQ-227	5895-01-483-0693	PANEL, CONTROL ELECTRICAL
C2138APA125A	5841-00-730-0593	CONTROL, INDICATOR
C2-96000-8	1680-00-070-4812	ACTUATOR
C2-96100-8	1680-00-070-5993	WINDOW UNIT L/H
C2-96300-8	1680-00-070-5994	WINDOW UNIT R/H
C3335AJN	6605-00-061-3041	INDICATOR, VARIATION
C-3832/ASN-42	6605-00-966-9501	INDICATOR, POSITION
C-3833/ASN-42	6605-00-966-9502	INDICATOR, POSITION
C7617ARR72V	5845-00-122-1667	CONTROL, INDICATOR
C8416ASW31	6615-00-524-0245	CONTROL, ALTITUDE
C-9863/ASN-124	6605-01-022-9501	CONTROL, INDICATOR
C9863ASN124	6605-01-022-9501	CONTROL, INDICATOR
C-9982/AAS-36	5855-01-052-6953	CONTROL SERVO, ELECTRICAL
C-9983/AAS-36	5855-01-053-0674	CONTROL, DETECTING
CNA21N2	5826-00-887-1934	CONTROL UNIT
CPK-281A24G-9	6610-00-759-7170	COMPUTER, TRUE AIR SPEED
CYLZ4246	1680-00-303-6129	CONTROL BOX, ACTUATOR
CYLZ5837	1660-00-887-1899	CONTROL BOX, ELECTRICAL
D6000-8	1680-00-070-4812	ACTUATOR, WINDSHIELD WIPER
D6100-4		WINDOW UNIT L/H
D6100-5		WINDOW UNIT L/H
D6100-6		WINDOW UNIT L/H
D6100-7	1680-00-070-5993	WINDOW UNIT L/H
D-6100-7	1680-00-070-5993	WINDOW UNIT
D6300-5		WINDOW UNIT R/H
D6300-6	1680-00-325-1266	WINDOW UNIT R/H
D6300-7	1680-00-070-5994	WINDOW UNIT R/H





**WINGS AEROSPACE, LLC**  
**P-3 REPAIR CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
D-6300-7	1680-00-070-5994	WINDOW UNIT
DG1032AA02	5841-01-111-5938	RADAR MODULATOR (PULSED RF SOURCE)
DL1326M39-4	1680-00-877-6385	LINEAR ACTUATOR, ELEC
DL1326M39-4A	1680-00-877-6385	LINEAR ACTUATOR, ELEC
DL1326M39-5	1680-01-181-3218	LINEAR ACTUATOR, ELEC
DL1326M40	1680-00-903-0831	ACTUATOR, EXHAUST DOOR
DL1326M40-1	1680-01-181-1374	ACTUATOR, EXHAUST DOOR
DL1326M40-3	1680-00-877-6388	ACTUATOR
DL1326M40-4	1680-01-181-1374	LINEAR ACTUATOR, ELEC
DYLZ5858-1	1660-00-818-7701	VALVE, SHUTOFF
E-276	5945-00-165-3815	SENSOR, UNDERVOLTAGE
EA-1045-037-1A	1650-00-786-7710	MOTORPUMP, HYD
EA-1045-037-2	4320-00-072-2291	MOTORPUMP, HYD
EA-1045-037-2B	4320-00-949-6842	MOTORPUMP, HYD
EA-1045-039-2A	4320-00-856-9396	MOTORPUMP, HYD
EA1068A2313		XMIT, ENGINE OIL
EA1068A2352	6680-00-319-1723	XMIT, QTY
EA1091A2015	6680-00-319-1706	TANK UNIT
EA1091A2024	6680-00-319-1710	TANK UNIT
EA1320-077	4320-00-887-1898	MOTORPUMP, HYD
EA1320-077-1	4320-00-124-1588	MOTORPUMP, HYD
EA-1320-422-1	4320-00-949-6840	MOTORPUMP, HYD
EA-1320-442	4320-00-226-5642	MOTORPUMP, HYD
EA148ANH-102H	6680-00-319-1722	INDICATOR, QTY
EA148ANH95H	6680-00-319-1711	HYD. QTY INDICATOR
EA148ANH-95H	6680-00-319-1711	INDICATOR, QTY
EA514B967	6680-00-515-4010	GAGE, LIQUID QTY
EB32B1	5945-00-010-1364	RELAY ASSEMBLY
F15597-10-003	6620-00-543-2534	INDICATOR, RPM
G8895-1	6220-00-858-0915	LIGHT ASSEMBLY, LANDING
G8905B20	6220-00-858-2455	LIGHT, NAVIGATIONAL
GC24B1	6615-00-887-6765	POWER SUPPLY, MONITOR
GG2472AC03	6615-00-575-8765	GYROSCOPE, RATE
GG2479AA02	6615-00-757-5816	GYROSCOPE, RATE
GG2479AB02	6615-01-014-4119	GYROSCOPE, RATE
GL14A1	6615-00-887-6776	SYNCHRONIZER, ELECTRICAL
GL14B1	6615-00-179-2349	SYNCHRONIZER, ELECTRICAL
GL1B2	6615-00-887-6775	INTEGRATOR, COMPUTER
GL1B4	6615-01-021-3613	COMPUTER MECHANISM
ID-1481A	6610-00-787-7652	INDICATOR, STANDBY ATTITUDE
ID-1481A/A	6610-00-165-5838	INDICATOR, STANDBY ATTITUDE
ID-1540/A	5826-00-117-4629	INDICATOR, BEARING
ID-1556/AJN-15	6610-00-116-4020	INDICATOR, FLIGHT DIRECTOR
ID-1872A/A	5845-01-341-6042	INDICATOR, DISTANCE
ID-2205/ASA-65V	5895-01-101-1893	INDICATOR, MAGNETIC
ID-2254/ASA-65V	5895-01-126-6137	INDICATOR, MAGNETIC



**WINGS AEROSPACE, LLC**  
**P-3 REPAIR CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
IP-1213/AQA-7(V)	5845-00-129-6521	INDICATOR, BEARING
IP-1402/ALR-66(V)	6625-01-141-9773	INDICATOR, SITUATION
IP-414A/APA-125	5895-00-730-0594	INDICATOR, AZIMUTH
IP471ULA2	6625-00-815-3593	INDICATOR
IP981AQA7V	5845-00-179-3212	INDICATOR, BEARING
JG165A2	6685-00-319-1685	INDICATOR, TEMPERATURE
JG7020A39	6680-00-600-1723	INDICATOR, LIQUID QUANTITY
JG7020A40	6680-00-663-4351	INDICATOR, LIQUID QUANTITY
JG7020A42	6680-00-663-4350	INDICATOR, LIQUID QUANTITY
JG7020A68	6680-00-675-9760	INDICATOR, LIQUID QUANTITY
JG7020C9	6680-00-663-4179	INDICATOR, LIQUID QUANTITY
JG7044A4	5841-00-318-8570	CAGEABLE VERTICAL GYRO
JG7046A2	6680-00-514-3323	TRANSMITTER, LIQUID
JG7046A3	6680-00-663-5164	TRANSMITTER, LIQUID
JG7047A1	6680-00-514-3326	TRANSMITTER, LIQUID
M3500-5		INDICATOR
MB1		ALTIMETER
MF10-3911-25Z		HYDRAULIC MOTOR ASSEMBLY
MF10-3911-25ZE		HYDRAULIC MOTOR ASSEMBLY
MF19-3911-25ZE		HYDRAULIC MOTOR ASSEMBLY
MF19-3911-30Z		HYDRAULIC MOTOR ASSEMBLY
MF19-3911-30ZE		HYDRAULIC MOTOR ASSEMBLY
MF45-3911-20Z		HYDRAULIC MOTOR ASSEMBLY
MF69-3906-30BCD-4	1650-00-887-1903	MOTOR ASSY, HYD
MF8-3911-25Z		HYDRAULIC MOTOR ASSEMBLY
MF9-3911-20S390		HYDRAULIC MOTOR ASSEMBLY
MF9-3911-25Z		HYDRAULIC MOTOR ASSEMBLY
MF9-3911-25ZG		HYDRAULIC MOTOR ASSEMBLY
MF9-3911-30Z	1650-00-508-7109	HYDRAULIC MOTOR ASSEMBLY
MF9-3911-30ZE	4320-01-224-9869	HYDRAULIC MOTOR ASSEMBLY
MF9-3911-30Z-S295		HYDRAULIC MOTOR ASSEMBLY
MF9-3911-30Z-S481	1650-01-815-9387	HYDRAULIC MOTOR ASSEMBLY
MPEV1-060-1	4320-01-044-0522	MOTORPUMP, HYD
MS17983-2	6605-00-551-8187	COMPASS
MS21971-1	6620-00-543-2534	INDICATOR, RPM
MS25470-7	6685-00-882-8127	HYD PRESS IND
MS27403-2	6695-00-628-8990	INDICATOR, LANDING GEAR POSITION
MS28008-1		AIR TEMP INDICATOR
MS28009-2		INDICATOR
MS28010-2	6620-00-557-0350	INDICATOR
MS28010-8	6620-00-935-1321	INDICATOR
MS28025-1	6610-00-515-3324	ACCELEROMETER
MS28067-2	6610-00-585-4132	INDICATOR, ANGLE OF ATTACK
MS28075-1	6610-00-473-5046	RATE OF CLIMB INDICATOR
MS28094-1	6605-00-591-2330	INDICATOR, INDUCTION
MS90323-6	6620-01-242-7236	INDICATOR, TORQUEMETER



**WINGS AEROSPACE, LLC**  
**P-3 REPAIR CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
N52730-1	1650-00-887-4271	VALVE, FLAP ASYMMETRY
N52730TAB	1650-01-245-5935	VALVE, FLAP ASYMMETRY
PP-4986/ASA-70	6130-00-240-0022	POWER SUPPLY
PP-4987/ASA-70	6130-00-478-6428	POWER SUPPLY
PS200-18	2995-00-807-3613	STARTER
PS200-22	2995-00-757-3476	STARTER
PS200-35		STARTER
QB88194-1	6130-00-917-4429	POWER SUPPLY
R1596M5	1680-00-887-1911	ACTUATOR, OIL COOLER
SA106A1	6615-00-887-6777	AMPLIFIER, FILTER ASSY
SA106A2	6615-00-887-6777	AMPLIFIER, FILTER ASSY
SA194A1	6615-00-887-6766	AMPLIFIER, RELAY
SA218A1	6110-00-887-6767	AMPLIFIER, ELECTRONIC
SA222A1	6615-00-887-6768	REACTOR ASSEMBLY
SA223A1	6110-00-888-1180	AMPLIFIER, ELECTRONIC
SA244A1	6615-00-887-6769	AMPLIFIER, FILTER ASSY
SA244B1	6615-00-963-1321	AMPLIFIER, FILTER ASSY
SA282A1	6625-00-065-3400	AMPLIFIER ASSEMBLY
SA292A1	6615-00-963-1320	AMPLIFIER, ELECTRONIC
SA292B1	6110-00-868-7170	AMPLIFIER, ELECTRONIC
SA312A1	6615-00-072-4500	AMPLIFIER, FILTER ASSY
SA312B1	6615-00-793-2684	AMPLIFIER, FILTER ASSY
SA312C1	6615-00-918-6483	AMPLIFIER, FILTER ASSY
SA34D1	5950-00-887-4355	REACTOR ASSEMBLY
SA61A1	6615-00-887-6770	AMPLIFIER, CONTROL
SA71B1	6615-00-887-6771	AMPLIFIER, LIMITER
SA71D1	5895-01-325-7877	AMPLIFIER, LIMITER
SD607711		PUMP, HYDRAULIC
SD609802	4320-00-248-9078	PUMP, HYDRAULIC
SLZ9028E	6610-00-620-7888	INDICATOR,ANGLE
SLZ9028G	6610-00-811-6070	INDICATOR,ANGLE
SPL5568		ACTUATOR, FLAP
SPL5568-1		ACTUATOR, FLAP
SPL5568-3	3040-00-566-0336	WING FLAP ACTUATOR
SPL5568-5	3040-01-397-6147	ACTUATOR, WING FLAP
SPL5568-7	3040-01-337-8854	ACTUATOR, WING FLAP
SPL5569		BRAKE
SPL5569-3	1680-00-887-1909	BRAKE, FLAP ACT
SPL5569-5		BRAKE, FLAP ACT
SPL5569-7	1680-01-253-9642	BRAKE, FLAP ACT
SPL5569-9	1680-01-382-5112	BRAKE, FLAP ACT
SR-3J	6685-00-887-6815	INDICATOR, PRESSURE
SR4J		INDICATOR
SR-4J	6685-00-887-6814	INDICATOR, POSITION
SR4W	6610-00-858-0615	INDICATOR
SR-4W	6610-00-858-0615	INDICATOR, FLAP POSITION



**WINGS AEROSPACE, LLC**  
**P-3 REPAIR CAPABILITIES LIST**

<b>PARTNO</b>	<b>NSN</b>	<b>ITEM_NAME</b>
SR5E		INDICATOR
SR-5E	6685-00-887-6813	INDICATOR, PRESSURE
SRD-9B	6685-00-887-9303	INDICATOR, DUAL PRES
SRT-314C	6620-00-053-2851	INDICATOR, TORQUEMETER
ST-104D	6620-00-561-9308	TRANSMITTER, PRESSURE
ST-104E	6685-01-334-3244	XMIT, PRES
ST105F	6685-00-887-1972	TRANSMITTER
ST-105F	6685-00-887-1972	XMIT, PRES
ST-106AE	6620-00-895-3880	TRANSMITTER, PRESSURE
ST-106W	6620-00-895-3880	TRANSMITTER, PRESSURE
ST109C	6685-00-887-1971	CABIN TRANSMITTER
ST-109C	6685-00-887-1971	XMIT, CABIN PRES
ST-3G	6685-00-887-1970	XMIT, X-FEED PRES
ST-4T	6620-00-807-6954	TRANSMITTER, PRESSURE
TG255-007	6680-00-923-8466	GENERATOR,TACHOMETER
TRU-161/A	6615-01-014-4119	GYROSCOPE, RATE
TRU2AA	6615-00-077-1831	RATE GYRO TRANSMITTER