


East Lake Tarpon Special Fire Control District

	<i>SOP 936 Portable Generators</i>	
	Implementation Date: 11/2000	Revision Date(s): 06/23/2009
		Reviewed Date(s):
	Forms or Attachments: None	

Daily Check

1. Inspect for cleanliness.
2. Check air filter.
3. Check gas and oil levels.
4. Check condition of starter rope.
5. Start engine.
6. Test electrical system.

Lights

1. Check for cracks.
2. Check for cleanliness.
3. Check operation.

Extension Cords

1. Check for faulty connections.
2. Check for cracks.
3. Check operation.

Weekly Cleaning (every Monday) (524 and 548) also spare generator kept at Station 57.

1. Air Filter: Remove cover and elements. Carefully check both elements for holes or tears and replace if damaged.

2. Foam Element: Wash in detergent and warm water, rinse thoroughly allow element to dry.
3. Paper Element: Tap lightly several times on a hard surface or blow compressed air through the filter from the inside out. Replace if excessively dirty.
4. Sediment Cup: Turn fuel valve to OFF. Remove the sediment cup and O-ring and wash them in non-flammable or high flash point solvent. Dry them thoroughly and install securely. Then turn valve to **ON**, and check for leaks.
5. Avoid excessive water, a rag with mineral spirits or similar type agent shall be used. Wipe off any excess cleaning agent.

Fuel

1. Use the one (1) gallon safety can be designated for the tool.

Other Maintenance

1. For more complex maintenance, contact Vehicle Maintenance Officer for the individual operation manual.