

MWM2400-2500-1.5

2.4-2.5GHz 1.5W Class A/AB High Performance Amplifier *Preliminary*

- ❖ **Class A/AB 1.5W ISM amplifier**
- ❖ **2.4-2.5GHz bandwidth**
- ❖ **35dB typical gain**
- ❖ **+/- 0.5dB typical gain flatness**
- ❖ **8-28VDC input voltage range**
- ❖ **50 ohms input/output**
- ❖ **Available with heatsink and fan or as a Mini-System**

Amplifier picture coming soon.

The MWM2400-2500-1.5 is a compact Class A/AB ISM amplifier module, excellent for stepping up signal generator outputs to a more useful power level, or for use as a pre-driver in high power RF energy systems. It has a wide DC supply range of 8-28VDC. A 5VDC version is also available.

Specifications

$V_{sup} = +8VDC, I_{DQ} = 0.64A, P_{out} = 1.5W, T_{base} = 25^{\circ}C, Z_{load} = 50\Omega$

Parameter	Min	Typ	Max	Units
Freq. Range	2400		2500	MHz
P_{1dB}	1	1.5	1.7	W
Input Power		-3	0	dBm
Gain	32	35		dB
Gain Flatness		+/-0.5	+/-0.75	dB
Drain Current		1.1	1.25	A
Efficiency	15	17		%
IRL		-20	-14	dB
f_2		-55	-45	dBc
f_3		-60	-50	dBc
Dimensions	1.85 X 3.50 X 0.75 (46.99 X 88.90 X 19.05)			inch (mm)

Maximum Ratings

Operation beyond these ratings will void warranty.

Parameter	Value
V_{supply}	8-28VDC
Bias Current (non-adjustable)	0.64
Supply Current	1.25A
Load Mismatch*	5:1
Housing Base Temperature	70°C
Storage Temp.	-40°C to 85°C

*All phase angles, 1.5W forward power, current limited to 1.25A.

Option Ordering Info

Heatsink and fan	MWM2400-2500-1.5-HSF
Mini-System	MWMS2400-2500-1.5
5VDC input	MWM2400-2500-1.5-5

RF and Microwave Power Technology, LLC • 2380 Solitude Drive • Reno, NV 89511 USA


(775) 842-3280 • sales@rfmpt.com • www.rfmpt.com

Specifications contained herein are subject to change without notice.

RF and Microwave Power Technology, LLC assumes no liability for the use of this information.

© 2016 RF and Microwave Power Technology, LLC



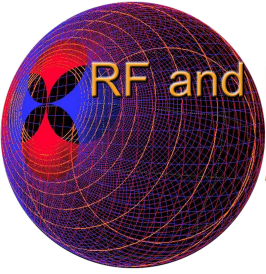

Instructions for Amplifier Use

- 1) If not supplied with a heatsink, apply a layer of high quality thermal grease (Wakefield Type 120 or equivalent) to the underside of the amplifier housing. Thinner is better, but ensure that when mounted to your heatsink, contact across the *entire* module base is made. Gaps and air bubbles will significantly reduce cooling, leading to possible amplifier damage. Use four #6-32 screws to mount the amplifier to your heatsink.
- 2) Guarantee sufficient airflow through the heatsink fins to keep the maximum housing base temperature at or less than that specified in the Maximum Ratings section. Contact RFMPT for details on how to qualify your heatsink’s performance, if needed.
- 3) Connect a proper signal source to the RF IN connector, and desired load to the RF OUT connector. Torque connectors to industry standards for the type supplied with the amplifier.
- 4) Connect DC V_{supply} and Ground wires to the terminals provided. Ensure that the connections are of proper polarity, and within the voltage range in the Maximum Ratings section.
- 5) Apply DC power and sufficient RF drive to achieve desired output level. Do not exceed the maximum rated power of 1.7W.
- 6) To disconnect the amplifier, first remove the RF drive, then DC power, then the RF connections.

Contact the factory at support@rfmpt.com with any questions, or for special options, testing requirements, and/or operating conditions not specified in this document.

Document Control

Revision	Date	Notes
Pre	5-30-2016	Preliminary release based on pallet amplifier data.

