

## GoHoist.com Moving Caster Notes

**Note: The GoHoist moving casters are to be used only for moving the GoHoist. Do not have the casters in place when doing any lifting with the hoists. The moving casters are not rated for a weight above 200lb and will fail if used on the hoist while lifting a boat.**

### Use of moving casters.

The GoHoist moving casters are made specifically for the left and right legs on each side of the GoHoist. The red casters are to be placed on the right leg of each hoist when viewed from the side. Think of the nautical term "red right returning." The yellow casters are for the left legs. The notch/seam on the caster sleeve is positioned on the inside of each leg.

The GoHoist casters are also manufactured so that they have the same 12 degree angle as the legs. Make sure that the higher part of the caster sleeve is facing the outside of the hoist leg - the side where the tension chain nut and washer is positioned. View the images below.

Attach the moving casters by loosening the tension chain eyebolt nuts enough for the castor foot cap to slip on to the bottom of the leg and completely over the eye bolt shaft, when lined up with the notches on the top of the caster. Make sure that the washer is on the outside of the caster and hand tighten the bolts so that the caster does not slip down off the leg. The eyebolt nuts do not have to be tight for lifting. Review images below.



Left foot caster.



Viewing one hoist from side.



Right foot caster.