


Prevost Park position.

Before installation, verify park position of electric motors according to bracket position.

To relocate park position:

- 1) Disconnect Con-link # 2 from Trans-link # 1 (figure 2)
- 2) Loosen nut # 3 from Motor shaft (nut 13mm)
- 3) Relocate Trans-link # 1 to a 180 degree angle from original position (figure3)
- 4) Tight nut # 3 to a 25lb torque by holding trans-link # 1 secure in position with a wrench
- 5) Reinstall Con-link # 2 into a Trans-link # 1

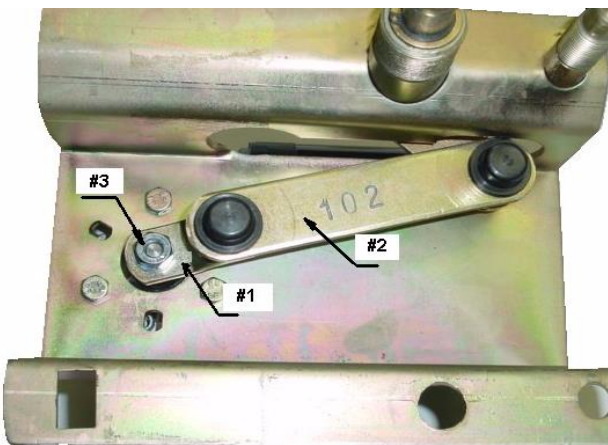

WARNING:

NEVER REACH INTO THE AREA OF MOVING LINKAGE WHEN THE SYSTEM IS RUNNING!