

GREASE FRONT BEARINGS

AS OF THE 2019 MODELS ALMOST ALL THE FRONT BEARINGS ON EVERY ROASTER BRAND WE SELL USES OPEN BEARINGS THAT ARE REQUIRED TO BE GREASED EVERY 1.5-2 MONTHS OR EVERY 150 HOURS OF USE (WHICH EVER COMES FIRST).

THIS CAN BE DONE WHEN ALSO GREASING THE BACK BEARINGS ON VIRTUALLY ALL OUR ROASTERS EXCEPT A COUPLE OF THE VERY SMALL MODELS THAT HAVE SEALED BEARINGS ON BACK (BC-1 & BC-2 AS OF 2020 MODELS & EARLIER)

LISTED BELOW ARE PICTURES OF THE VARIOUS MODELS AND HOW TO REMOVE AND PACK FRONT BEARING WITH GREASE:

BC ROASTERS:

TOP VIEW: USING A HEX KEY TO REMOVE BC COVER



ONCE COVER IS REMOVED YOU MAY WANT TO CLEAN OLD GREASE



NEXT PACK BEARING WITH FRESH GREASE & REPLACE WITH COVER




SEDONA ELITE ROASTERS:

SEDONA: USING A HEX KEY TO REMOVE COVER



EXAMINE & CLEAN BEARING*IF NEEDED REMOVE AND CLEAN BEARING

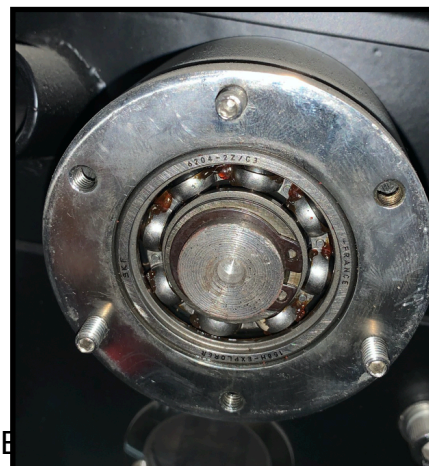

REPACK WITH FRESH HIGH TEMP FOOD GRADE GREASE & PUT COVER BACK ON



GREASE FRONT BEARINGS

PHOENIX FRONT BEARING:

PHOENIX (ORO): USING A HEX KEY TO REMOVE COVER



IF NEEDED REMOVE & CLEAN BEARING IN SOLVENT & REINSTALL* (*TO REMOVE SEE PDF ON REPLACING FRONT BEARING)



WHAT TYPE OF GREASE DO I NEED?

Grease Gun User Manual



ALL ROASTERS SHOULD USE HIGH TEMPERATURE FOOD GRADE GREASE TO LUBE YOUR FRONT & BACK STEEL BEARINGS (Don't Lube Ceramic models)

BUY A 3 WAY LOADING GREASE GUN
CLICK ON PICTURE TO BUY!



Click on image to buy grease

PACK BEARING WITH GREASE & PUT COVER BACK ON.

FOR ALL TYPE ROASTERS USE HIGH TEMPERATURE BEARING GREASE WE RECOMMEND SUPER LUBE FOOD GRADE HIGH TEMPERATURE GREASE ALSO BE SURE TO BUY & USE A GOOD GREASE GUN. SEE OUR WEBPAGE FOR AN EXAMPLE OF TOOLS:

[HTTP://WWW.BUCKEYECOFFEE.COM/BEANS--BAGS---TOOLS-.HTML](http://www.buckeyecoffee.com/beans--bags---tools-.html)