


QUAD PUMP MANUAL CONTROL

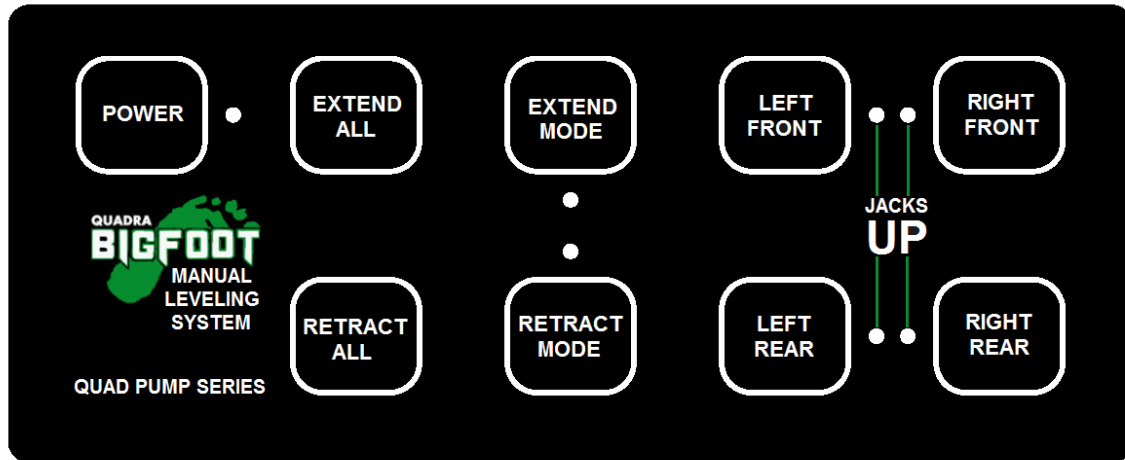

Simultaneous and individual operation makes this control great for many applications.

Individual all up indication when each cylinder is fully retracted.

Ignition safety feature, disables extend functions when ignition is on.


One touch retract (all four jacks), automatically cuts power to each pump as they retract.

Ignition alarm if one or more jacks are not fully retracted when ignition is on, audible alarm will sound.

Extend All: Press & hold to extend all four jacks simultaneously.

Retract All: Retracts all four simultaneously, Always visually check that all jacks are fully retracted prior to operating the vehicle. If you have an all up light, but see one of the cylinders not fully retracted, enter Retract Mode, and operate that cylinder (see instructions below).

For individual operation: Press and release Extend Mode button, press and hold corresponding jack you want to extend. Do the same for retract function. In case of limit switch failure or "false all up light" (jack not fully retracted but it's "up" light is on)... Press Retract Mode and run that particular jack to override the limit switch, then replace switch and pin.

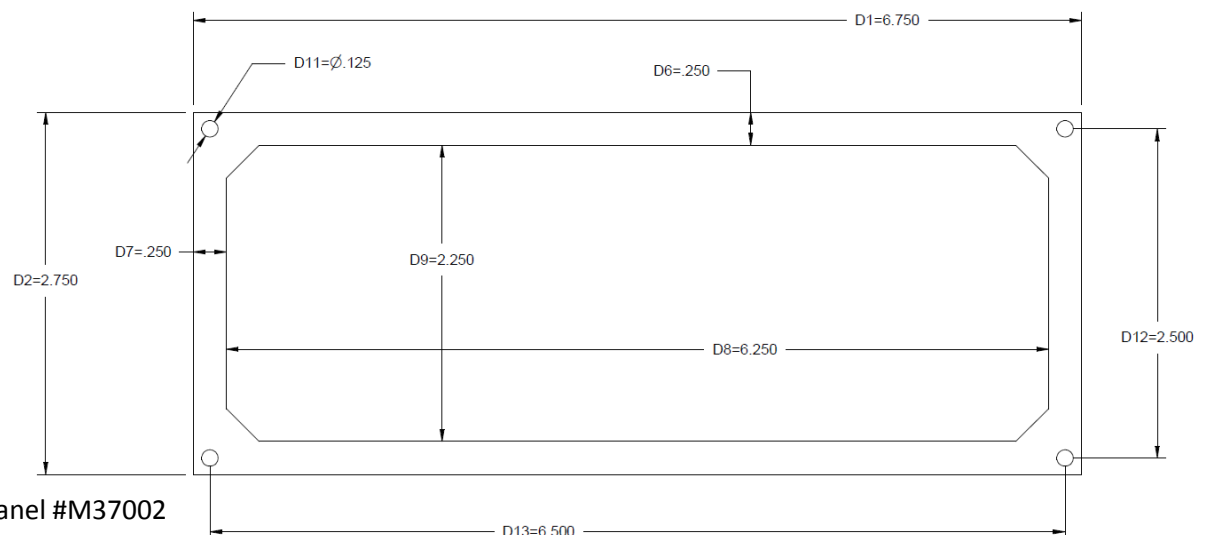

Replacement control panel #M37002