Hot Farm

Weight classes – 11,000 / 13,000 / 16,500

(No - Open/Super Farm tractors allowed)

Class Rules:

- No speed or Rpm limit
- One fuel only
- Stock appearing block
- OEM head and manifolds
- Max turbo size 3x3 in 13,000 and 16,500
- No V or double cut tires
- Duals allowed in 16,500 only
- No tire size limit in 13,000 and 16,500

Special To 11,000 (Optional to run for points with RPM)

- 466 cubic inch mas
- Factory appearing injection pump for that model tractor
- Factory crossover
- No cut tires
- Max 20.8x38 tire size
- Max 2.8 inlet turbo
- Factory front weight bracket

NON RPM MEMBERS WILL RUN FOR PAYOUT ONLY NO POINTS

Required Safety Equipment: (10 Mph speed limit) – if you do not have <u>ALL</u> required safety equipment.

- Steel flywheel, air shut off needs to disconnect at the rear of tractor and hook to sled.
- Rops with seatbelt, wheelie bars, fire extinguisher.
- Electric or no cooling fan.
- Any type of safety equipment is recommended.

General Rules:

- 1. Each tractor may be entered in (2 classes only) Plus King of the Hill.
- 2. Drivers must be 18 years old or 16 with parent's written consent.
- 3. Driver must be present at the Driver's Meeting.
- 4. Tractor may be 100 pounds max over posted class weight with driver.
- 5. No pressurized fuel, nitrous oxide or other oxidizing agents allowed.
- 6. All engine radiator fans must be properly shrouded. All clutches, pressure plates, fly wheels and drive train components must have 360 degree shroud of 3/16 inch or greater metal material.
- 7. Minimum drawbar length 18 inches from center of rear axle to point of hook, and may not pull from two or three-point hitching mechanisms.
- 8. The drawbar is to be stationary in all directions, and not to exceed 20" from top of drawbar.
- 9. No front weight frame or weights may extend more than 11' from the center of the rear axle.
- 10. All weights must be safely secured to the tractor; Rear weight must not interfere with hooking to the sled. If anything falls off during your pull, you will be disqualified.
- 11. Just before pulling, the puller will be weighed and must be on weight and move directly to staging.
- 12. Puller must operate in a safe manner at all times; Operators must remain seated during the pull with at least one hand on the steering wheel.
- 13. Must be in neutral when hooked and unhooked.
- 14. All pulls must start from a tight hitch no jerking permitted.
- 15. Driver is allowed one restart before 100 feet.
- 16. Tractor and skid must remain within boundaries of the contest course during the pull, or disqualified.
- 17. Driver must stop immediately upon signal from judge; Pull is over when forward motion stops
- 18. Failure to allow inspection by judges will result in disqualification.
- 19. Promoters reserve the right to refuse any entry.
- 20. Contest to be governed by judges with all decisions final. Judges have the right to stop and disqualify any tractor or truck if it is not being operated in a manner as would be considered safe.
- 21. NO ALCOHOL IN THE PIT AREA.