
Project Lifesaver Association of Nova Scotia

Battery & Bracelet Change

What if the band does not fit?

PLANS will be providing a spiral punch to make ½ size holes in the band. It is very important to do this correctly so as not to overly weaken the strap.

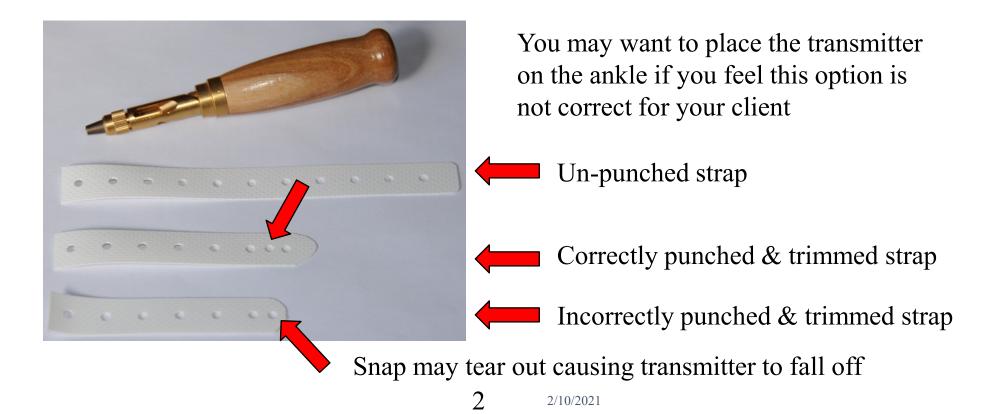

PLI 60 Longranger Transmitter



- PLI 60 Transmitter
- 5 year warranty
- Uses ½ or 1" straps



Components
Transmitter case
Transmitter Cap
Transmitter Key

Following the simple *Battery Change Procedure* will ensure proper sealing of the battery compartment.



• Battery change Procedure:

- Remove O-ring from the battery lid. Clean O-ring retaining groove in lid and make sure groove is free from debris, damage, or foreign substances.
- Inspect mating surface (top of threads) in the transmitter case. Make sure this area is clean and smooth.

Installing a transmitter on a client

Thread band through slots of transmitter

Write client # on band

Cut band to fit client's wrist (curve the edges of the cut band)

Place transmitter on top of clients wrist and hold in place

Snug wrist band so that only one finger can slide between band and subjects wrist

Place the closest hole in band on metal post of snap

Fold over the second part of snap so that it lines up and fastens

Unit needs to be snug, but not so snug that it could cut off circulation or hold moisture between the unit and the skin

Note: The nylon strap can also be used with the transmitter











Changing the battery cont.

 Continue to follow to check list on the back of the Caregiver's Log Sheet - PLANS













Inspect, Insert, tighten





- Inspect O-ring for any cracks, tears, or damage.
- If damaged, replace with new factory sealed & lubricated O-ring.
- If good, lubricate O-ring and reinstall onto battery lid.
 - Insert battery into lid (+ side down into lid), and tighten into transmitter case completely using the lid tool. Fit should be tight and secure.

Note:

To insure complete sealing, Maximum thumb and forefinger force must be used when tightening the lid.

Worn, damaged, dry, dirty, or under tightened O-rings can impair the sealing of the battery compartment.