

INSTALLATION INSTRUCTIONS

WOVEN WOOD PANEL TRACK ROLLER SHADE PANEL TRACK




PANEL TRACK HARDWARE

Thank you for your purchase. This woven wood or roller shade panel track has been custom built for you from the highest quality materials. To avoid errors and save valuable time, please read these instructions before installing your new shade. Hardware should always be installed by qualified installers with a good understanding of interior wall types, window frames and the required tools.

TOOLS YOU WILL NEED


1. Pencil or Marker
2. Measuring Tape
3. Phillips Screwdriver
4. Carpenter's Level
5. Power Drill
6. Ladder

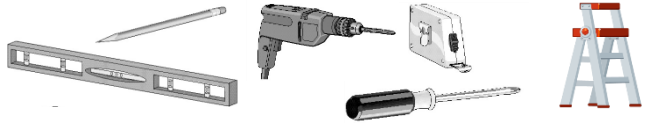

FASTENERS

- #8 screws for wood or aluminum
- Plastic inserts for drywall or plaster
- Auger threaded metal or plastic inserts for drywall.
- Molly bolts for drywall
- Toggle bolts for drywall or lath & plaster.

FASTENER OPTIONS

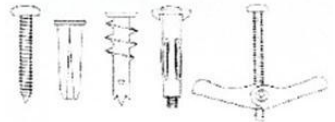

IMPORTANT: For installation in wood or aluminum frames, it's recommended you use the sheet metal screws included with your custom shades. For other types of wall or window construction you will need to furnish different fasteners.

Note: Fastener strength should be rated more than the weight of the shade.

TABLE OF CONTENTS

Getting Started: Parts CheckPage 2

STEP 1: Mounting The BracketsPage 3 – 5

STEP 2: Mounting The PanelsPage 6

STEP 3: Mounting The (Optional) Valance.....Page 7

STEP 4: Mounting The CORD TENSIONERPage 8

STEP 5: Operating The Panel TrackPage 9

 Cleaning Instructions.....Page 10

 Warranty.....Page 11

GETTING STARTED

All the required installation components are wrapped in your package along with these instructions. Check that the parts you have correspond to the parts shown below.

NOTE: Some parts may vary depending upon your chosen mounting options.

PANEL TRACK HARDWARE PARTS:

- Panel Track, Inside & Outside Mount
Bracket Types




2 and 3 way


4 and 5 way

- Outside & Wall Mount, Additional
Bracket Assembly

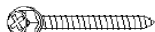

- Mounting Screws 

 - Track Splice Bracket
(for tracks over 144" wide)



- Optional Valance Brackets
(Outside Mount, 3" x 3" L-bracket)




STEP 1: MOUNTING THE BRACKETS

Panel Track hardware installation brackets are either 2 & 3 Way, or, 4 & 5 Way, Mounting the brackets level is essential for proper operation of the tracks.

Panel Track Brackets



(A)
Inside / Ceiling Mount
Used on 2 and 3 channel track

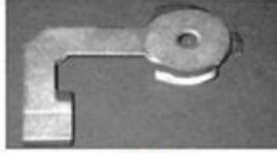


(B)
Inside / Ceiling Mount
Used on 4 and 5 channel track



(C)
Outside / Wall Mount
Used on all tracks

Mounting Depth Requirements

Number Track Channels	IS Mount Flush Mount Depth	IS Mount W/ Valance Flush Mount Depth	IS Mount Minimum Depth	OS Mount Wall Clearance	OS Mount Overall Projection
2	2-1/2"	3-1/2"	1-3/4"	2-1/2" – 3-1/8"	4-1/8" – 4-3/4"
3	2-3/4"	3-3/4"	1-3/4"	2-1/2" – 3-1/8"	4-1/2" – 5-1/4"
4	3-1/2"	4-1/2"	1-3/4"	2-1/2" – 3-1/8"	5-1/4" – 6"
5	3-1/2"	4-1/2"	2"	1-3/4" – 4"	5-1/8" – 7-3/8"

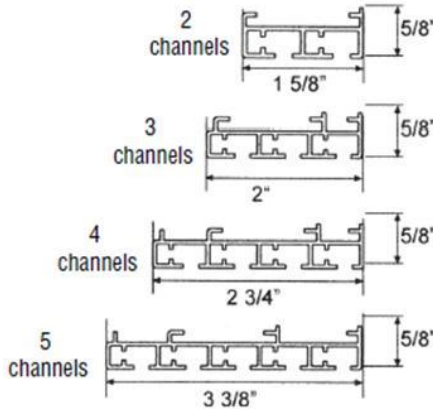

INSIDE OR CEILING MOUNTS:

MARK THE BRACKET LOCATIONS:

- Measure 4" from the edge of the window frame (or edge of the track for ceiling) on each side and mark the location with a pencil. **(see figure 1)**
- Space the additional installation brackets evenly between the 2 end brackets and mark the location(s) with a pencil.
- Make sure that the brackets are level with each other.
- Verify adequate clearance allowance is made for panel operation.

MOUNT THE BRACKETS:

- Place the bracket against the top of the window frame (or ceiling) and attach using the provided screw. **(see figure 2)**
- Repeat this step until all the brackets are placed in position and aligned.

ATTACH THE TRACK:

- Position track in place where it is centered in the window and the operating cord or wand is on the correct side.
- Hook front of track onto the lip of the bracket and snap back of track into back of bracket. **(see figure 3)**

figure 1



figure 2



figure 3



OUTSIDE OR WALL MOUNTS:

MARK THE BRACKET LOCATIONS:

- Measure 4" from the edge of the track on each side and mark the location of the installation brackets with a pencil. **(see figure 1)**
- Space the additional installation brackets evenly between the 2 end brackets and mark the location(s) with a pencil.
- Make sure that the brackets are level with each other.
- Verify adequate clearance allowance is made for panel operation.

MOUNT THE BRACKETS:

- Place the wall-mount bracket assembly against the top of the window frame and attach using the provided screw. **(see figure 2)**
- Repeat this step until all the brackets are placed in position and aligned.

ATTACH THE TRACK:

- Position track in place where it is centered in the window and the operating cord or wand is on the correct side.
- Hook front of track onto the lip of the bracket and snap back of track into back of bracket. **(see figure 3)**

figure 1



figure 2

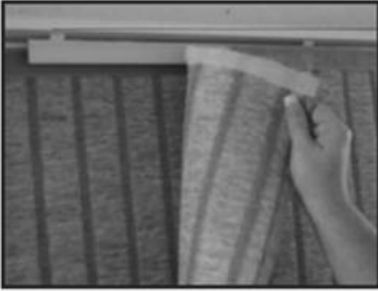


figure 3



STEP 2: MOUNTING THE PANELS


Unpack each panel and align the Velcro strip on the fabric to the one on the carrier. Starting from one end, start pressing the fabric against it until the panel is secured. Repeat this process until all panels are in place.



STEP 3: MOUNTING THE (optional) VALANCE

Valance installation brackets may be used for **INSIDE** or **OUTSIDE** mounts. Shim the brackets if necessary to achieve a level alignment. The bracket requirements and placements are the same for inside and outside mounts.

NOTE: If desired, valances may also be mounted directly with the provided installation screws, drilled vertically through the valance headrail into the top of the window frame (for inside mounts) or into the ceiling (for outside mounts). So, the valance brackets are not absolutely required as long as your mounting requirements accommodate this optional valance mounting method.

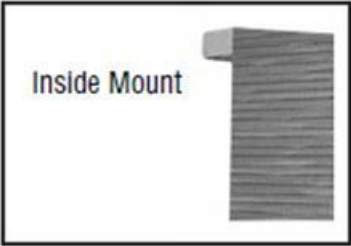

STEP 4: MOUNTING THE CORD TENSIONER




WARNING


Young children can STRANGLE in cord loops. They can also wrap cords around their necks and STRANGLE.

Child Safety Cord Tensioner

Attach the cord tensioner on the cord loop to the wall or window casement. This can prevent children from pulling cord loops around their necks.

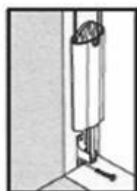

(ivory color)

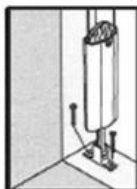

WARNING: It is imperative that the cord tensioner be properly secured to the wall or window frame to reduce children's access to the cord loop. Young children can strangle in cord loops. They can also wrap cords around their necks and strangle.

IMPORTANT: Locate the tensioner as close to the window as possible to minimize accessibility by children and pets. Ensure that the tensioner is not placed in the path of the shade material.

- Always keep cords out of the reach of children.
- Move cribs, playpens and other furniture away from cords. Children can climb furniture to get to cords.
- Attach the cord tensioner to the wall or window casement.

CHILD SAFETY




WARNING

For more safety information call 1-888-501-8364 in the U.S. or 1-866-662-0666 in Canada.

STEP 5: OPERATING THE PANEL TRACK

Tracks operate with either a wand or with a cord loop draw.

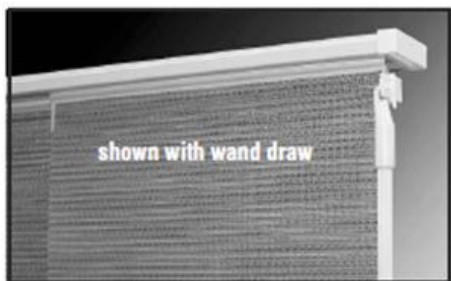

shown with cord draw
and optional valance

CLEANING INSTRUCTIONS

Woven Woods are made of the highest quality materials for extended wear. If it is not damaged or exposed to a great deal of direct sunlight, it is not unrealistic to expect years of enjoyment with minimal care. Drawing the track opened and closed periodically helps reduce most natural dust accumulation. If additional cleaning is desired, woven panels can be lightly brushed or carefully cleaned with a soft vacuum brush attachment. You can also use 3M Scotch guard spray on woven panels for added stain protection.

Panel track hardware may also be cleaned with a feather duster, or further, with a soft, damp cloth or sponge and then immediately dried with a soft cloth or towel.

NOTE: Woven Woods are hand crafted from a variety of quality natural bamboo, rattan, reed, jute and wood materials. As such, there is an inherently greater corresponding variation in color, grain, texture, cracking and warpage in the final manufactured shade. These variations are considered acceptable and are part of the unique beauty of woven woods.

DUSTING: Regular light dusting with a feather duster is all the cleaning that is needed in most circumstances.

VACUUMING: Use a hand-held vacuum with low suction for more thorough dust removal.

CAUTION: Do not immerse woven woods or hardware in water. Do not ultrasonically clean woven woods.

Roller Fabrics are made of the highest quality materials for extended wear. If it is not damaged or exposed to a great deal of direct sunlight, it is not unrealistic to expect years of enjoyment with minimal care. Drawing the track opened and closed periodically helps reduce most natural dust accumulation. If additional cleaning is desired, fabric panels can be lightly brushed or carefully cleaned with a soft vacuum brush attachment.

Panel track hardware may also be cleaned with a feather duster, or further, with a soft, damp cloth or sponge and then immediately dried with a soft cloth or towel.

NOTE: Transparent and vinyl roller fabric panels can be readily cleaned with any standard commercial window spray cleaner, which should be diluted with 10 parts water to 1 part cleaning solution. For best results, shades should be removed from brackets, and then placed on a clean, flat covered surface. To prevent streaking and inconsistent drying, wash and dry one small area at a time. Do not rub hard. Use a soft, lint-free cloth for washing and drying.

DUSTING: Regular light dusting with a feather duster is all the cleaning that is needed in most circumstances.

VACUUMING: Use a hand-held vacuum with low suction for more thorough dust removal. Vacuum your roller fabric frequently. This will keep your roller fabric looking like new! If your roller shade becomes soiled use a high-quality foam upholstery cleaner.

CAUTION: Do not immerse roller fabrics or hardware in water. Do not ultrasonically clean roller fabrics.

WARRANTY INFORMATION

Lifetime Limited Warranty covering our Custom Made Shades

We extend this lifetime limited warranty to the original purchaser. This warranty applies only to manually operated Custom Products properly installed in the window, door or interior area for which they were intended. Installation of the product must be in accordance with accompanying instructions. The product cannot be modified. It is the purchaser's responsibility to maintain and clean the product in compliance with the instruction provided. The product must be used only in the window for which it was purchased. Damage to the product resulting from misuse, abuse, direct exposure to salty air or discoloration due to sunlight or the passage of time is not covered by this warranty.

This warranty does not apply to conditions caused by normal wear and tear upon the product. This warranty is exclusive and in lieu of all other obligations, liabilities or warranties. In no event shall the Manufacturer be liable for incidental or consequential damages or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you.

In the event of a defect under this warranty, we will repair or replace the product, at our option, provided it is returned to our store. Our warranty obligation excludes shipping charges and labor costs for measuring and installation. Repairs will be made with like or similar parts. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Notes: Motorization Systems are warranted for five years from the date of purchase. Specialty Blinds and Shades are warranted for one year from the date of purchase.

This warranty does not apply to Commercial Orders.

