
Digital Video Recorder

User's Manual

**“TWXQ32 DVR”
X-Q16R/32R**

Thank you for using our product.

1. This is user's manual for Analog / HD-SDI / EX-SDI / TVI / AHD Hybrid DVR(Digital Video Recorder).
2. This manual contains product specification and introduction, installation guide, operating guide and other necessary matters for easy understanding. Users should read this user's manual carefully for proper use.
3. Contents in this manual may be changed according to the specification change and feature improvement without any notification.
4. This user's manual shall never be copied without prior agreement and violating this may be a reason for legal punishment on piracy.
5. If there is any incorrect or insufficient content in this user's manual, notify it to Customer Support Center.

Contents**CH 1. Product Introduction`**

1-1. Product Contents	5
1-2. Product Characteristics	6
1-3. Name of Each Part	8

CH 2. Installation Guide and Cautions

2-1. Cautions	15
2-2. Product Installation	18
2-2-1. Power Connection	18
2-2-2. Connecting External Device	18

CH 3. How to Use

3-1. General Usage Information	22
3-2. Live Mode	23
3-2-1. Live mode control	23
3-2-2. Live mode feature	25
3-3. Search Mode	33
3-3-1. Search selection type	33
3-3-2. Play Mode	37
3-4. Setup Mode	38
3-4-1. Display	38
3-4-2. Record	43
3-4-3. Device	48
3-4-4. Network	65
3-4-5. System	72
3-5. Firmware Upgrade	78

Contents

Trouble Shooting	80
-------------------------	----

CH1. Product Introduction

1-1. Product Contents

After removing packing materials of this product, check whether all following contents are included.

**Main Body (DVR):**

This converts the analog video and audio signal to the digital signal and saves on HDD.

**Adapter:**

This 12V adapter supplies power for 4, 8ch DVR.

**Power Cable:**

This connect the adapter and the power source.

**MOUSE:**

This is an controller for convenience.

**Program CD:**

This contains the User's manual and Client Program for DVR.

**Remote Controller:**

This is an IR remote controller for convenience.

**Battery:**

These are 2(two) battery for the remote controller.

1-2. Product Characteristics

1) Full HD real time and All Hybrid (Hybrid Series only)

This DVR can record HD and Full HD video with extreme quality. Also it displays 4K resolution, and therefore it provides the most clear image quality and the best security level. All video input is detected automatically.

2) High reliability

With Embedded hardware and software design, this maintains higher product reliability.

3) Simple usage

This allows users to use it conveniently by placing control buttons similar to existing ones on VCR, and users can easily learn the usage.

4) Pentaplex System

Pentaplex System allows live, recording, backup, networking and playback simultaneously.

5) Selectable recording setup

For recording methods, users can select the frame rate, resolution and video quality individually in order to be appropriate for user's environment.

6) Remote monitoring

With using exclusive line or Internet network, you can search or monitor recorded images remotely by installing exclusive client program on Windows PC or Mac.

7) Backup

You can backup with a versatile external USB devices.

8) Audio recording

You can record 4 sound inputs simultaneously. Moreover, you can listen to the sound in search and live monitoring and play mode.

9) Various recording methods

This provides convenient use with manual recording, recording by dates and days, hourly schedule recording, sensor and motion detection event recording and others to enable unmanned monitoring.

10) Various total monitoring features

You can cover any security scenario through various sensor inputs and contact output control.

11) Display information in easy-to-understand information method

This enhanced convenience of user by displaying information (date, time, recording method, recording frame number, HDD capacity and others) in monitoring, recording and playing mode in easy-to-understand way.

12) P/T/Z control

By built in RS485, various P/T/Z cameras can be used.

13) Dual CODEC for video transmission

DVR can send 120 fps (based on CIF) regardless of the local recording and viewing setup regardless with recording setup.

14) Web browser support

You can monitor and playback the video and control the PTZ camera by internet explorer.

15) Built in S.M.A.R.T.

You can automatically check the health of the hard disk drives.

16) Language pack

Basically DVR has multiple language set, furthermore you can choose the language set if you want.

17) Mirroring by internal HDD

If you install two HDDs, you can use the second HDD for backup for maximum fault tolerance.

18) Spot monitoring

Spot out can be enable to monitor sequentially in other place.

19) Touch LED Switch

You can operate with touch LED switch in front panel.

20) Text inserter(POS Interface)

You can operate with the POS and ATM.

21) HD Spot out

You can use one of VGA and HDMI to the HD spot.

1-3. Name of Each Part

[Front Panel]

<X-Q04/08>



1. **USB ports** : These USB ports are for mouse and USB devices. You should connect correctly the USB devices and mouse as picture directed.
2. **Status lamps**
POWER : Blue color back light. Power indicator.
RECORD : Red. Indicate the recording.
NETWORK : Green. Lit on connecting the network
3. **IR RECEIVER** : It is for remote controller.

[Front Panel]

<X-Q16R/32R>



1. Playback buttons : It will be used on playback. If you press these buttons in live mode, it will be automatically changed to the Instant Play mode. 'Stop' button changes from the play mode to the live mode.

2. ARROW, ENTER : This button is used to change settings for the product in MENU Mode or used in Search Mode.

3. Function keys

- 1) MENU : It will move to the setup screen from the live mode.
- 2) SEARCH : It will change to the playback mode from the live mode.
- 3) BACKUP : It will move to the backup screen from the live or play mode.
- 4) DISPLAY : It will change the screen splitting sequentially from 1 to 20. It can be adapted both live and play mode.
- 5) SWITCHING : It will change to switching mode except 20 splitting.
- 6) ZOOM : It will go to the digital zoom directly.
- 7) PTZ : It will change to the pan, tilt and zoom control mode from the live mode.
- 8) LOCK/EXIT : If you want move to the upper menu or exit without saving, press this button. On playback, it will disappear the search list for the better viewing. On live viewing, it performs the system lock.
- 9) PANIC : This button is used in emergency status. If you push this button, the DVR starts to record with maximum speed regardless of setting value.

4. Status lamps

POWER : Blue color back light. Power indicator.

RECORD : Red. Indicate the recording.

NETWORK : Green. Lit on connecting the network

ALARM : Red. It will be lit on when the events happen

5. USB ports : These USB ports are for mouse and USB devices.


6. IR Window : the window for remote controller

7. Number buttons : If you press this button, it will be changed to full screen in live viewing or playback. If you want to go to 20ch, push the 10+ button twice. Also 10+ button is used for 'Hold' while Jog Shuttle action.

(※ In menu and password setting, it is automatically converted to number buttons)

[Rear Panel]

<04 CH>

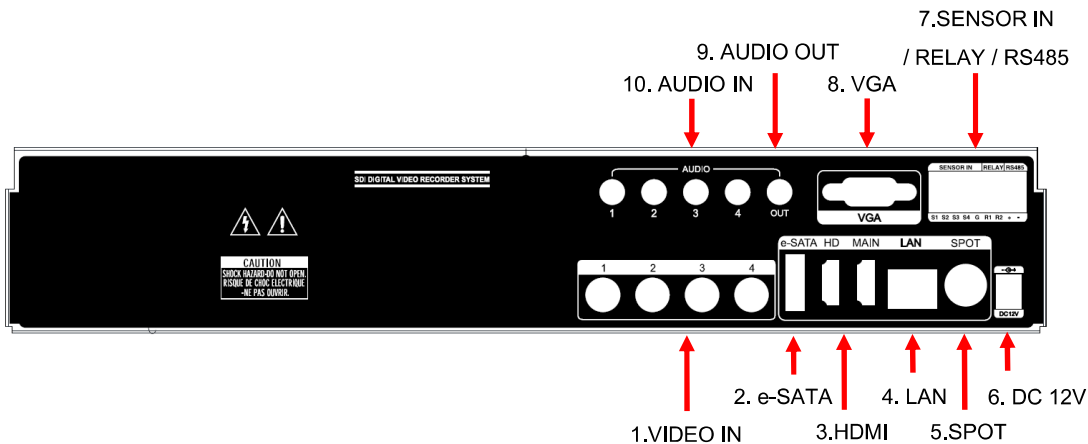


1. **VIDEO IN** : This receives images from cameras.
2. **e-SATA** : e-SATA port for external HDD storage.
3. **HDMI** : Video output for high resolution monitor.
4. **LAN** : This is the Gigabit Ethernet LAN cable connection terminal.
5. **SPOT** : For spot CRT monitor, composite signal comes out.
6. **DC 12V** : Power input.
7. **SENSOR IN** : This terminals can be connected to external sensors.
RELAY : This terminal blocks connect external electric devices to the product
 (Warning Lamp and others).
- RS485** : For control the pan and tilt cameras. Make sure that the polarity.
8. **VGA** : Video output for VGA display
9. **AUDIO OUT** : RCA audio out terminal.
10. **AUDIO IN** : RCA audio in terminals. You can record 4 channels at the same time.

❖ For more details, refer to [CH 2. Installation Method and Cautions].

[Rear Panel]

<08 CH>

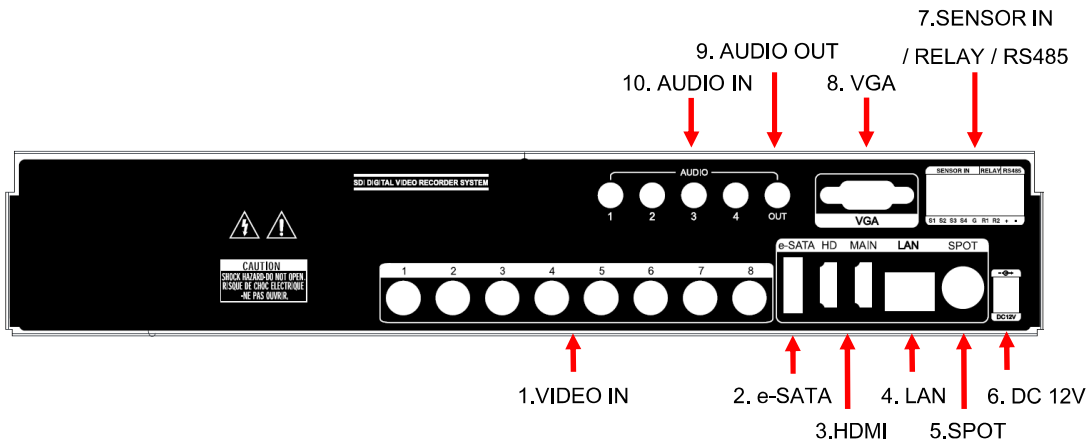


- 1. VIDEO IN** : This receives images from cameras.
- 2. e-SATA** : e-SATA port for external HDD storage.
- 3. HDMI** : Video output for high resolution monitor.
- 4. LAN** : This is the Gigabit Ethernet LAN cable connection terminal.
- 5. SPOT** : For spot CRT monitor, composite signal comes out.
- 6. DC 12V** : Power input.
- 7. SENSOR IN** : This terminals can be connected to external sensors.
RELAY : This terminal blocks connect external electric devices to the product
 (Warning Lamp and others).
RS485 : For control the pan and tile cameras. Make sure that the polarity.
- 8. VGA** : Video output for VGA display
- 9. AUDIO OUT** : RCA audio out terminal.
- 10. AUDIO IN** : RCA audio in terminals. You can record 4 channels at the same time.

❖ For more details, refer to [CH 2. Installation Method and Cautions].

[Rear Panel]

<16CH>

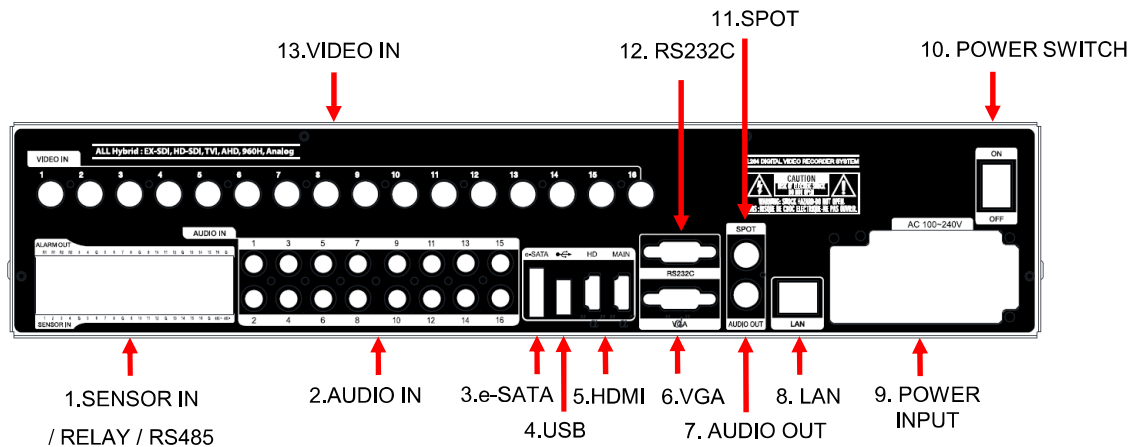


- 1. SENSOR IN** : This terminals can be connected to external sensors.
RELAY : This terminal blocks connect external electric devices to the product (Warning Lamp and others).
RS485 : For control the pan and tile cameras. Make sure that the polarity.
- 2. AUDIO IN** : RCA audio in terminals. You can record 16 channels at the same time.
- 3. e-SATA** : e-SATA port for external HDD storage.
- 4. USB** : This USB port is for mouse and USB devices.
- 5. HDMI** : Video output for high resolution monitor.
- 6. VGA** : Video output for VGA display.
- 7. AUDIO OUT** : RCA audio out terminal.
- 8. LAN** : This is the Gigabit Ethernet LAN cable connection terminal.
- 9. Power Input**
- 10. Power Switch(ON/OFF)**
- 11. SPOT** : For spot CRT monitor, composite signal comes out.
- 12. RS232C** : This is Serial communication(RS232C) cable connection terminal.
- 13. VIDEO IN** : This receives images from cameras and sends them to monitors.

❖ For more details, refer to [CH 2. Installation Method and Cautions].

[Rear Panel]

<32CH>

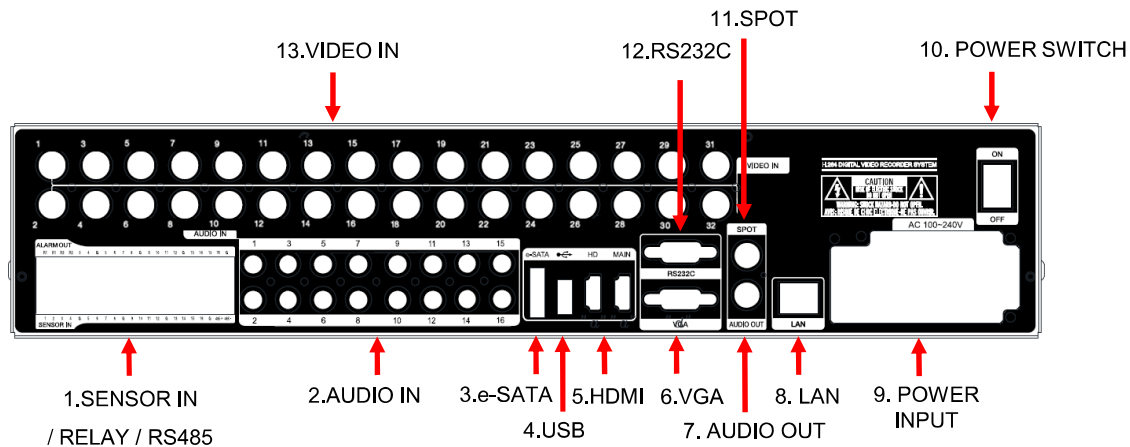

1. **SENSOR IN** : This terminals can be connected to external sensors.
RELAY : This terminal blocks connect external electric devices to the product (Warning Lamp and others).
RS485 : For control the pan and tile cameras. Make sure that the polarity.
2. **AUDIO IN** : RCA audio in terminals. You can record 16 channels at the same time.
3. **e-SATA** : e-SATA port for external HDD storage.
4. **USB** : This USB port is for mouse and USB devices.
5. **HDMI** : Video output for high resolution monitor.
6. **VGA** : Video output for VGA display.
7. **AUDIO OUT** : RCA audio out terminal.
8. **LAN** : This is the Gigabit Ethernet LAN cable connection terminal.
9. **Power Input**
10. **Power Switch(ON/OFF)**
11. **SPOT** : For spot CRT monitor, composite signal comes out.
12. **RS232C** : This is Serial communication(RS232C) cable connection terminal.
13. **VIDEO IN** : This receives images from cameras and sends them to monitors.

❖ For more details, refer to [CH 2. Installation Method and Cautions].

CH2. Installation Method and Cautions

2-1. Cautions

WARNING

Risk of electric shock.

Do not open the cover of the product.

**Servicing of this product by unauthorized personnel is prohibited
and will result in a void of warranty.**



**In order to ensure the most stable conditions for power, the use
of a UPS (Uninterrupted Power Supply) is recommended.**

- Avoid installing the product where there are direct rays or it is hot by locating near from heat generator. (May cause fire)
- Do not put vase, flowerpot, cup, cosmetics, drug, and anything the contain water on product. (May cause fire or electric shock, and it may injure people by falling)
- Do not insert or drop any metal object (coin, hair pin) or flammable object (match, paper) into air hole. (May cause fire or electric shock)
- Do not put any heavy object on it. (May injure people by being fell or destroyed.)
- Put power plug surely not to be moved. (If not, this may cause fire.)
- Unplug power plug and antenna when there are thunders and lightening. (May cause fire.)
- For cleaning the product, wipe surface with dry towel. Using chemical agent or cleaner may change the color and unpeel paint. Do not put several plugs at same time. (May cause electric shock.) If there is smoke or strange smell, stop operation. In this case, turn the power off and unplug it, and then contact our service center. (If you keep using it, this may cause fire or electric shock.)
- Do not unplug by pulling cord. (If cord is damaged, it may cause fire or electric shock.)
- Do not plug or unplug with wet hands. (May cause electric shock.)

- Keep the power cord untwisted. (May cause fire or electric shock.)
- Use proper adapter. (Using too much electric power may cause fire or electric shock.)
- Do not install it at where exposed to rain and wind and water drop. (May cause fire, electric shock and transformation.)
- Keep away from fire. (May cause fire.)
- Do not disassemble or remodel on your own. (May cause malfunction or electric shock.)
- Do not put next to flammable materials like flammable spray. (May cause fire.)
- Do not install it at a place with too much dirt. (May cause fire.)
- Do not install it on unstable places like shaking table and inclined place or shaking place. (May injure users by falling down or being upside down.)
- Do not put an heavy object on power cord or avoid it from being pressed by the device. (May cause fire or electric shock.)
- In case of using extension cord, do not use several devices at same time. (May cause fire with abnormal heating of extension.)
- When there are dirt on power plug pin or power outlet, clean it nicely. (May cause fire.)
- Do not damage on power cord or plug, and bend or twist or pull too much, and put it between other objects or heat. If power outlet insertion part is not tight, do not use it. (May cause fire or electric shock.)
- Do not drop or give a shock to the product. (May injure people or cause malfunction.)
- Do not touch power adaptor or signal controller. (May cause electric shock.)
- Do not put any object too close to block cooling fan. (May cause fire.)
- In case of exchanging batteries with improper type, there might be danger of explosion.
- For used batteries, throw away separately from other garbage.
- When you take out batteries, avoid children from eating them by mistake. Keep them away from children. (If a child ate them, contact a doctor right away.)

Note :

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with the part 15 of the FCC Rules. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operations.

FCC Warning :

This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

CE Warning : This is a Class A product. In a domestic environment this may cause radio interference in which case the user may be required to take adequate measures.

This product has obtained EMI registration.

2-2 Product Installation

This product may be composed of camera and monitor in default, and additionally the sensor, microphone, speaker and PC for network can be connected if necessary.

2-2-1. Power Connection


- 1) Connect adapter cable to power connection terminal at rear side.
- 2) Input AC power to the adapter. (free voltage from 100V to 240V, 50/60Hz)

※ You must operate it at the rated voltage instructed on the user's manual. In case power higher than the rated voltage is supplied, it may cause damages on product.

2-2-2. Connecting External Device

- ※ Connect it when power of the product is off.
- ※ Read through user's manual for the device you are connecting carefully.

1) How to Connect External Video/Audio Device

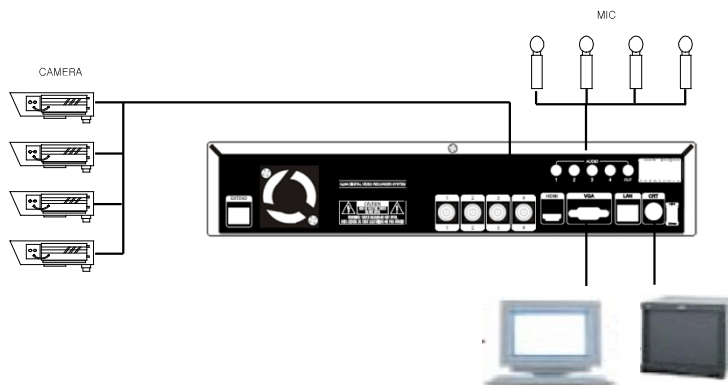


- Connect cameras to VIDEO IN by channels.
- Connect microphone (AMP) to AUDIO IN by channels.
- Connect VIDEO OUT to VIDEO IN of monitor.
- Connect HD output to HD Monitor.
- Connect AUDIO OUT to AUDIO IN of monitor (or speaker).
- Connect Spot output to Composite Monitor.

- ❖ Read this notice before connecting HD-SDI cameras.

You cannot mix NTSC and PAL cameras with DVR products.

1. Please check the type(NTSC or PAL) of cameras.
NTSC : 30fps, 60fps
PAL : 25fps, 50fps
- You can see the cameras connected with DVR on Device menu.

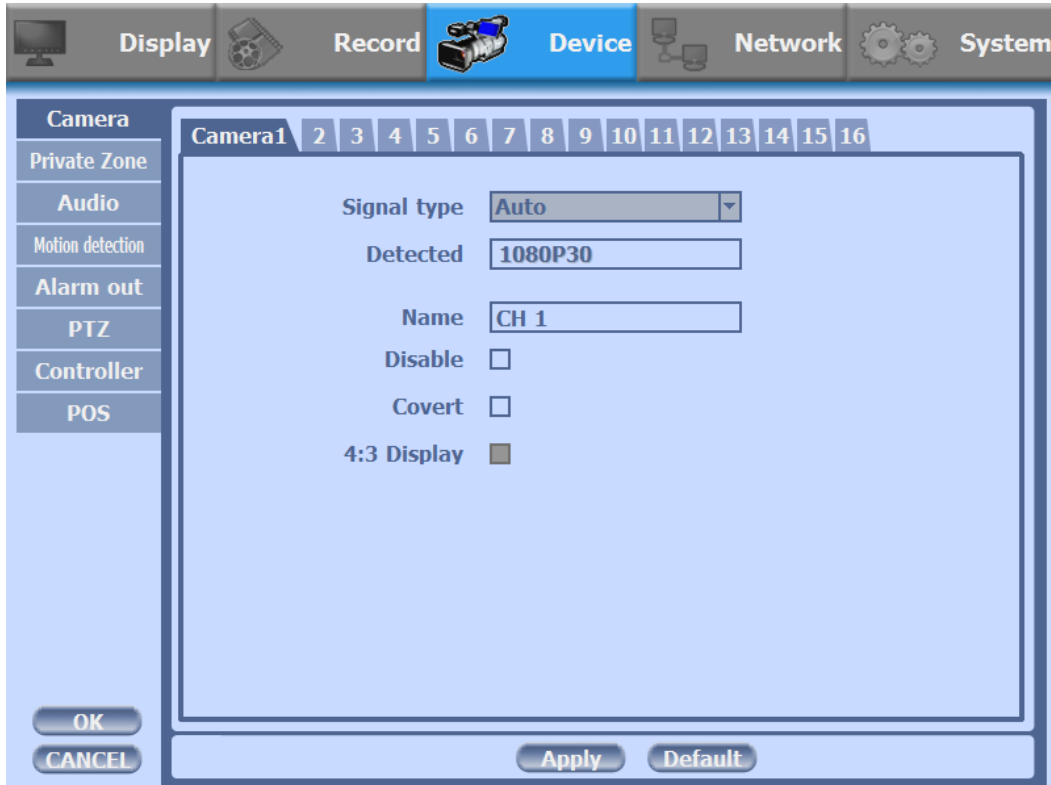


* The figure above shows that the camera is 1080P 30fps (NTSC).

2. Change camera type that you want to use on your camera.
- You can choose the type from setting fps on HD-SDI cameras.
(This DVR does not support setting manual fps.)
 - For more details, refer to user's manual of the related HD-SDI Camera.

2) How to connect external sensor

Sensor terminal is composed of 1 input channel and 1 output channel. Sensor out terminal is relay output with 1A, 24V or 0.5A, 125V.

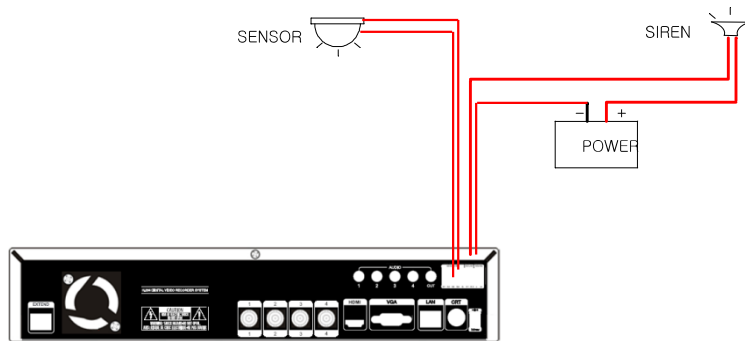

Sensor In : Connect the sensors. The sensor are composed of both signal and ground terminals, with a voltage difference of 5V. In the case that the sensor used for input is of the N/O (Normal Open) type, when the voltage difference between the signal and ground falls to 0V (short), the DVR can use this as a trigger to start alarm/sensor based recording.

Sensor Out : Connecting external electrical devices


The relay output terminal does not provide power, and functions only on an ON/OFF basis via a relay. Normally, the signal and ground should be on an OPEN basis, and the DVR will complete the relay connection.

3) Connecting with PC using LAN cable

If you want to connect DVR to PC directly, use LAN cable, and if you want to use HUB, connect cable via hub.


*Hub : This is a device connecting one office to devices located near with using cable when you organize LAN

*Cable : This is standard UTP cable used for communication among devices through Hub and others when you organize LAN

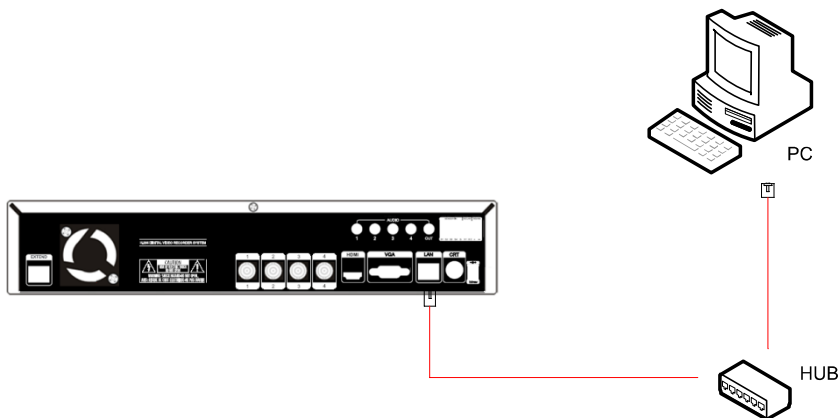

4) Connection Using PTZ camera

In case of using pan and tilt cameras, connect PAN/TILT DRIVE to product as shown at following figure.

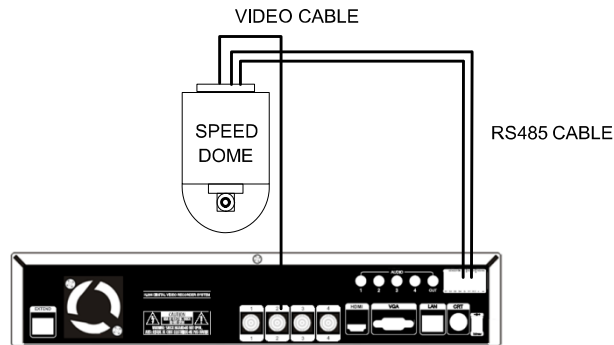**5) Installing Hard disk drive**

In case of installing the hard disk drive, open the upper case and install the hard disk drive on the hard bracket. Remember that the main power should be off to install the hard disk drive. If you have any trouble, please contact the technical support.

CH3. How to Use

3-1. General Usage Information

The DVR system can be operated with a mouse or remote controller under the four main modes listed below:

Live Mode – This is the “main or default” mode. From this mode you can view in real time all currently operating cameras, information regarding camera status, and have access to Pan/Tilt camera controls. In addition, system status information will be shown during live mode, and other modes can be entered from Live mode.


Setup Mode – The user will be able to customize settings for Live viewing, Recording, Backup, and Camera related devices under the Setup Mode.

Search Mode – In Search Mode, the user will be able to review all recorded footage in the case that an event must be reviewed using a calendar or event based search.

Backup Mode – In Backup Mode, the user will be able to archive the desired data to the preferred supported media of their choice (ex. CD, DVD, USB Backup, Remote Client Software, etc.)

Password Protection – The DVR system will utilize a user ID and password system to prevent unauthorized usage of this product. Control of the system will only be possible after entering a proper ID and password as illustrated below. (Factory Default settings are blank for these fields).

IDs and passwords should be managed by a system administrator, as different users may be given different levels of access to the DVR.

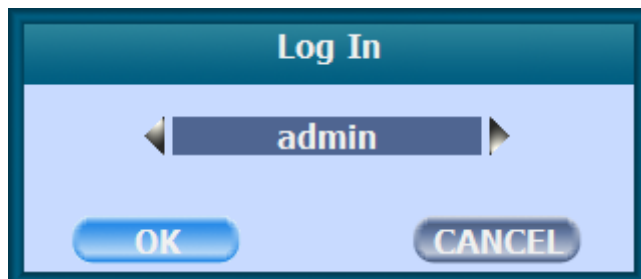

3-2. LIVE Mode






In this section you will know how to split the video mode into 1, 4, 6, 8, 9, 12, 16, as well as auto sequencing, PTZ Control, Mouse control, Setup configurations, Backup.



3-2-1. LIVE Mode Control

1) Live View Status











You may use the Live Menu Bar located at the bottom for quick shortcuts and view status of certain items.

	Recording indicator
	Event recording indicator
	Motion detection indicator
	Sensor activation indicator
	POS indicator

2) Live Menu Bar


You may use the Live Menu Bar located at the bottom for quick shortcuts and view status of certain items.



	Date
	Time
	Screen Split mode change
	Sequence activation
	Hard drive usage
	Lock/ Unlock indicator
	Scheduler activation indicator
	Network connection indicator
	Audio out channel indicator
	Audio Mute indicator

3) Live Popup Menu

By Right-Clicking anywhere on Live Screen, you may view the Live Popup Menu. By using the Live Popup Menu, you can quickly jump to the necessary configuration and settings.

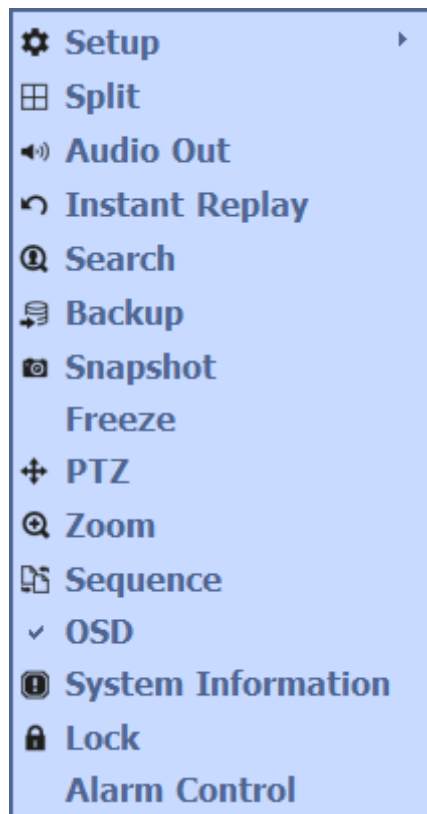


3-2-2. LIVE Mode Feature

1) Setup : refer to 3-4


2) Split

 Change video split mode for Live View.



3) Audio Out

 You can choose the audio out from this menu.



4) Instant Replay

This is very convenient function to catch the abrupt accident. During live viewing, you can go directly to the playback screen.

If you choose the 'Instant Replay', the DVR goes to the 'PLAY' with the present time screen. And you can use the functions related playback.




5) Search : refer to 3-3

6) Backup


There are two ways to enter the backup. The first one is that right click on the live screen, and the second one is that enter directly from 'Search' upon playback. If you choose the 'backup' from the live menu, below backup screen appears.

- You can set the backup device, time and channel from the backup screen.

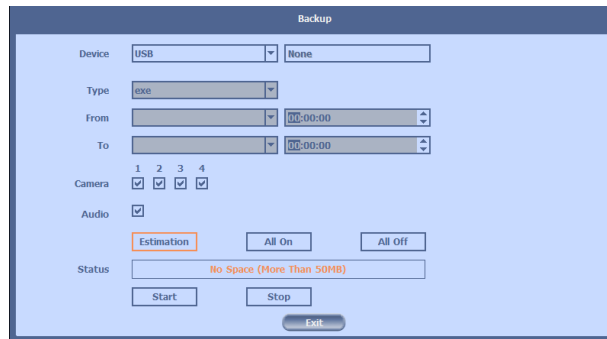


The screenshot shows a 'Backup' configuration window. It includes fields for 'Device' (set to USB), 'Type' (set to exe), 'From' and 'To' time ranges (both set to 00:00:00), and checkboxes for 'Camera' (1, 2, 3, 4) and 'Audio' (checked). There are buttons for 'Estimation', 'All On', and 'All Off'. The 'Status' field shows 'No Space (More Than 50MB)'. At the bottom are 'Start', 'Stop', and 'Exit' buttons.

- After that, if you push the 'Estimation' button, it will show the estimated backup file size.

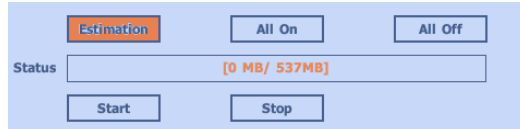

The screenshot shows the 'Backup' screen after clicking the 'Estimation' button. The 'Status' field now displays '[0 MB/ 537MB]'. The 'Estimation' button is highlighted in red.

- Then click the 'Start' button.

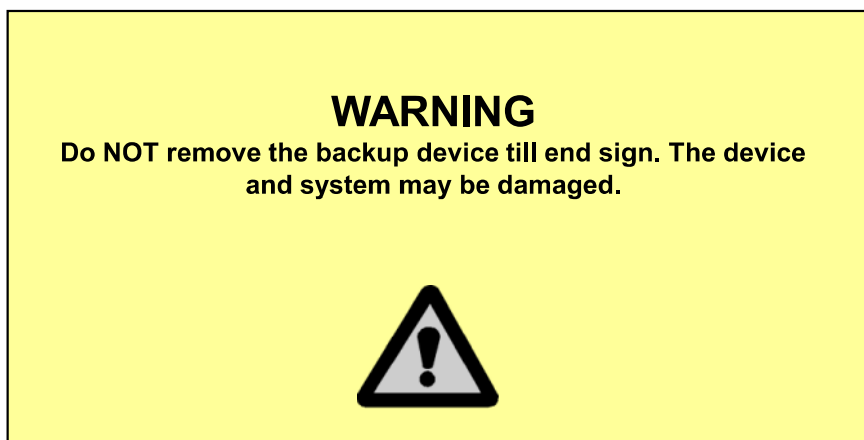

7) Snapshot

You can save the live snapshot by this menu. All channel will be saved individually to the USB memory by JPG format . You should put in USB memory before saving.

8) Freeze

You can freeze the current live video channels.

9) PTZ (Pan, Tilt and Zoom)

It is possible to control the pan and tilt camera by itself. Press the 'PTZ' button to enter the PTZ mode. For Menu setting, you can set it by pressing button as displayed at bottom of window.

- You can set the direction of camera by using the arrow buttons.



Preset[Enter]	Preset setup
Zoom -/+	You can zoom out/in with mouse or [1]/[2] buttons on the remote controller.
Focus -/+	You can adjust the focus with mouse or [3]/[4] buttons on the remote controller.
IRIS -/+	You can adjust the iris with mouse or [5]/[6] buttons on the remote controller.

❖ For more details, refer to [CH 2-2. Connection Using PTZ camera] and [CH 3-4-3. Device]

- **Preset[Enter]** : You can enter the preset number using the keypad appearing the preset button or 'Enter' button on the remote controller.



Run[Enter]	Move to preset number
Set[PTZ/SEARCH]	Set a position and name of a preset number
Clear[Stop/BACKUP]	Clear a preset set
Exit	Exit preset mode

❖ How to use Preset

1. Make sure that PTZ camera is connected to DVR.
2. Click the right mouse button and choose PTZ from a live pop-up menu.
3. After you move the screen, click the set button and set the position and name.

- ※ If you choose not a specified preset, UNDEFINED is displayed on the screen.
- ※ You can set up to 32. If you choose out of valid range, there is no action.

- **Camera[0]** : You can choose the PTZ camera with mouse or [0] buttons on the remote controller
- **Setup[9]** : If you press Setup using mouse (or [9] button on the remote controller) in PTZ Menu, PTZ setup window will appear. You can set the pan and tilt speed, 32 preset name and tour sequence as well as dwelling time.

PTZ Setup

Pan Speed Tilt Speed
Preset dwell time Tour ☐

Preset	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32
Preset 1	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	
Preset 2	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	
Preset 3	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	
Preset 4	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	
Preset 5	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	
Preset 6	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	
Preset 7	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	
Preset 8	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	

OK CANCEL

Pan Speed	Set pan speed 1~7
Tilt Speed	Set tilt speed 1~7
Preset dwell time	Set preset dwell time 2~6 sec
Tour	When you check the tour box, the preset tour starts in the order specified by the user.

❖ How to use Tour

Choose a preset from upper left to right.


※ If you use not specified presets, it automatically skip the tour.

10) Zoom

Digital zoom of live screen for selected channel. It can be 8x zoom and also control the position by mouse dragging.



- **Camera[0]** : You can choose the camera for zoom with mouse or [0] buttons on the remote controller.
- **Zoom[9]** : You can zoom with mouse or [9] buttons on the remote controller.

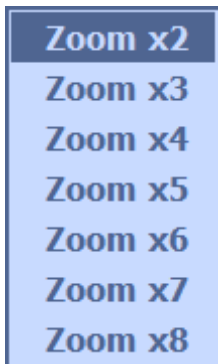

11) Sequence

Sequence Mode On /Off: Switches screens as set on Dwell time under Screen Setup

12) OSD

This feature shows current settings of product through GUI (Graphic User Interface) and INFO button at front side is used for this feature. When you turn on power, this will show current date and time, System Lock Setting, HDD usage, Video Loss Check, Sensor ON/OFF, Motion Detection Check, Recording Status and Schedule Feature Usage. As you press INFO button once more, GUI disappear->OSD disappear->GUI appear->OSD appear will happen sequentially.

- ❖ GUI (Graphic User Interface): displaying current status on monitor as images
- ❖ OSD (On Screen Display): displaying current status on monitor as character

13) System Information

It shows the system information.


System Information	
Firmware version	1.0.4.4
HDD	0/160 GB
MAC Address	00:09:1B:00:01:02
IP	192.168.1.10
Connected IP	<input type="text"/>
Watch User	0
Search User	0
Setup User	0
Oldest Date	2012/07/27 00:00:00

14) Lock/Log In

Logs off current user and locks DVR from any further configuration and screen setup until next Administrator logs in.

15) Alarm Control

You can control all alarms connected and the DVR system buzzer.

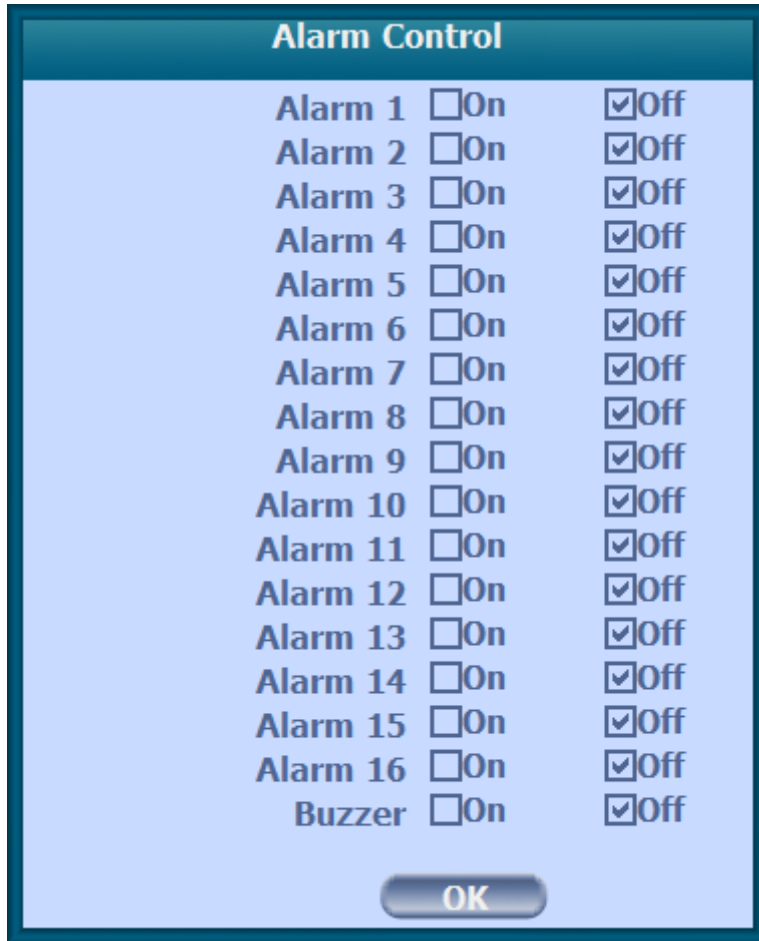


The image shows a software dialog box titled "Alarm Control". It contains a list of 16 items, each with two checkboxes. The first checkbox is labeled "On" and the second is labeled "Off". The "Off" checkbox is checked for all items. At the bottom center of the dialog is an "OK" button.

Alarm Control		
Alarm 1	<input type="checkbox"/> On	<input checked="" type="checkbox"/> Off
Alarm 2	<input type="checkbox"/> On	<input checked="" type="checkbox"/> Off
Alarm 3	<input type="checkbox"/> On	<input checked="" type="checkbox"/> Off
Alarm 4	<input type="checkbox"/> On	<input checked="" type="checkbox"/> Off
Alarm 5	<input type="checkbox"/> On	<input checked="" type="checkbox"/> Off
Alarm 6	<input type="checkbox"/> On	<input checked="" type="checkbox"/> Off
Alarm 7	<input type="checkbox"/> On	<input checked="" type="checkbox"/> Off
Alarm 8	<input type="checkbox"/> On	<input checked="" type="checkbox"/> Off
Alarm 9	<input type="checkbox"/> On	<input checked="" type="checkbox"/> Off
Alarm 10	<input type="checkbox"/> On	<input checked="" type="checkbox"/> Off
Alarm 11	<input type="checkbox"/> On	<input checked="" type="checkbox"/> Off
Alarm 12	<input type="checkbox"/> On	<input checked="" type="checkbox"/> Off
Alarm 13	<input type="checkbox"/> On	<input checked="" type="checkbox"/> Off
Alarm 14	<input type="checkbox"/> On	<input checked="" type="checkbox"/> Off
Alarm 15	<input type="checkbox"/> On	<input checked="" type="checkbox"/> Off
Alarm 16	<input type="checkbox"/> On	<input checked="" type="checkbox"/> Off
Buzzer	<input type="checkbox"/> On	<input checked="" type="checkbox"/> Off

OK

3-3. Search Mode

Search mode consists of two different modes of searching. The video data can be selected by 5 modes.

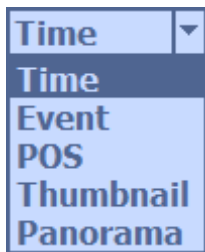

Time	Search by Month / Day / Time selection.
Event	Select from Event Log.
POS	Search by POS transaction data.
Thumbnail	Play the specific channel by user defined interval.
Panorama	Play the specific channel continuously.


3-3-1. Search Selection Type

1) Time Based search selection




- Select the Date you wish to view by selecting a Date from Calendar.
- Select time you wish to view by selecting a time from Time Line.
- You may click on Refresh, Option, Backup, Import, Exit , Full Screen for additional features and options.

2) Event Based Search Selection

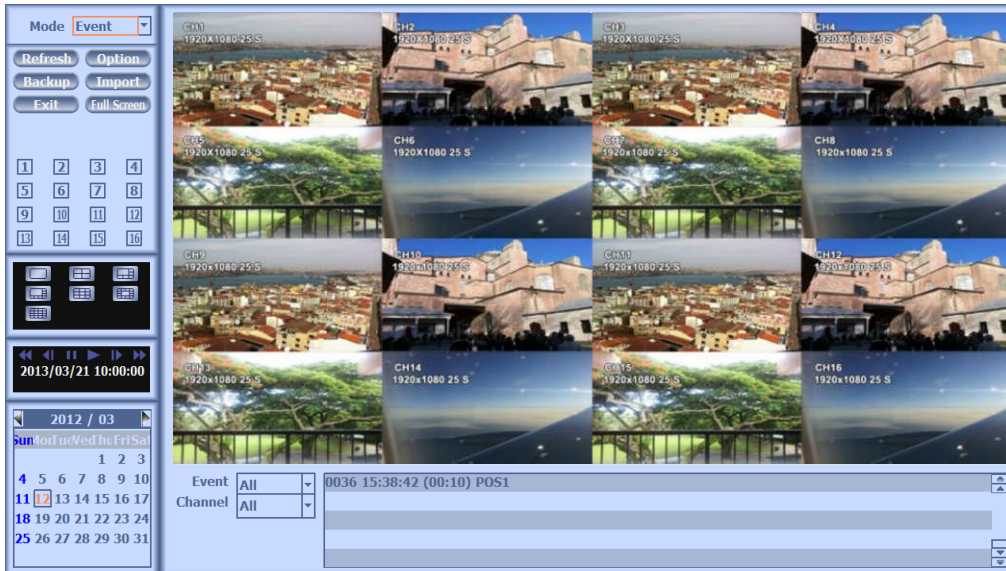


- Select search date from calendar
- Event log will be displayed according to the chosen date
- Preview pane above the Event Log will show preview of currently selected video

3) POS Search

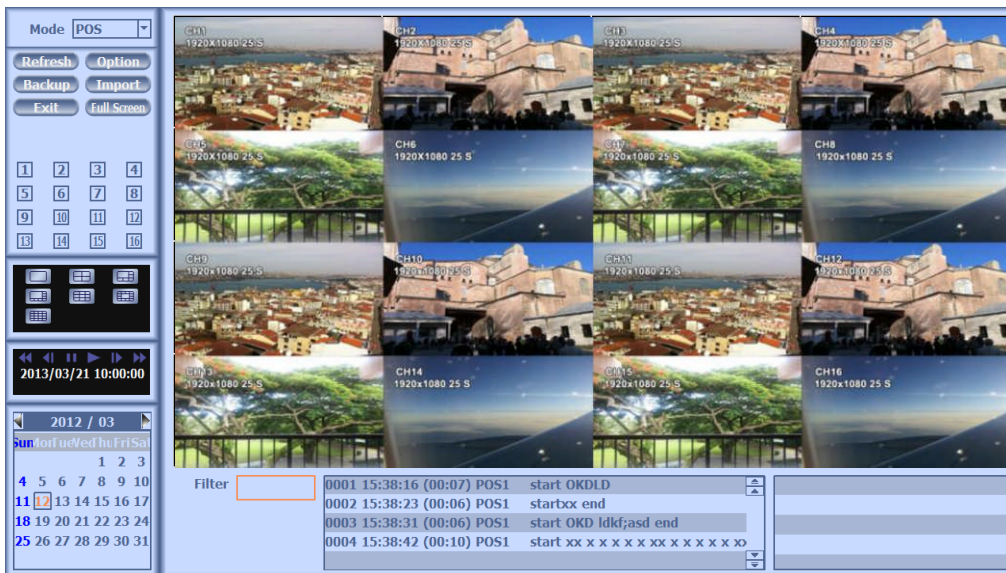


- Select search date from calendar
- POS transaction data will be displayed according to the chosen date
- You can search detail by filter.

4) Thumbnail Search

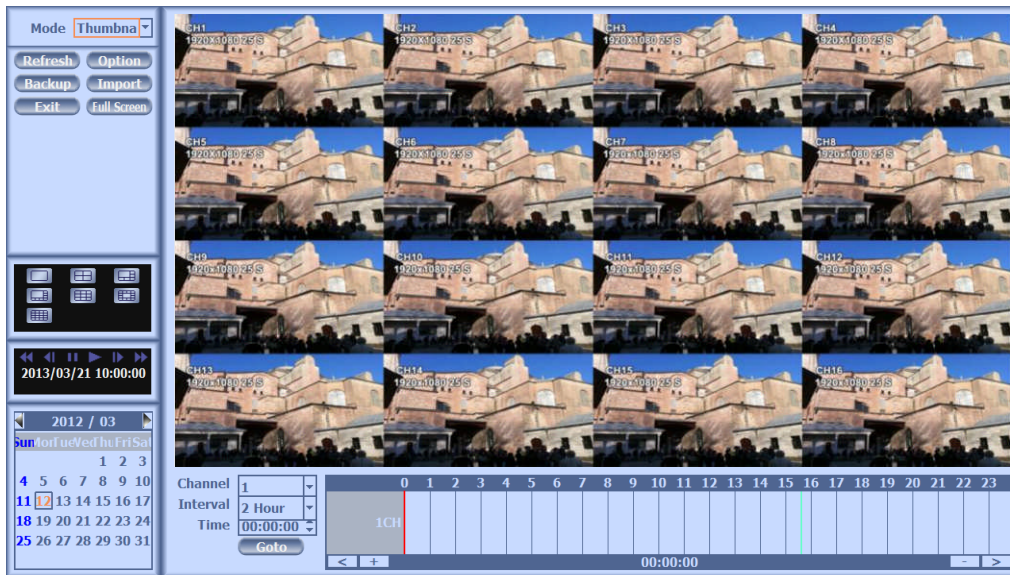

- Select search date from calendar
- Choose the channel and interval, then select the time from bar or typing
- The selected channel will be played individually by interval time difference


5) Panorama Search

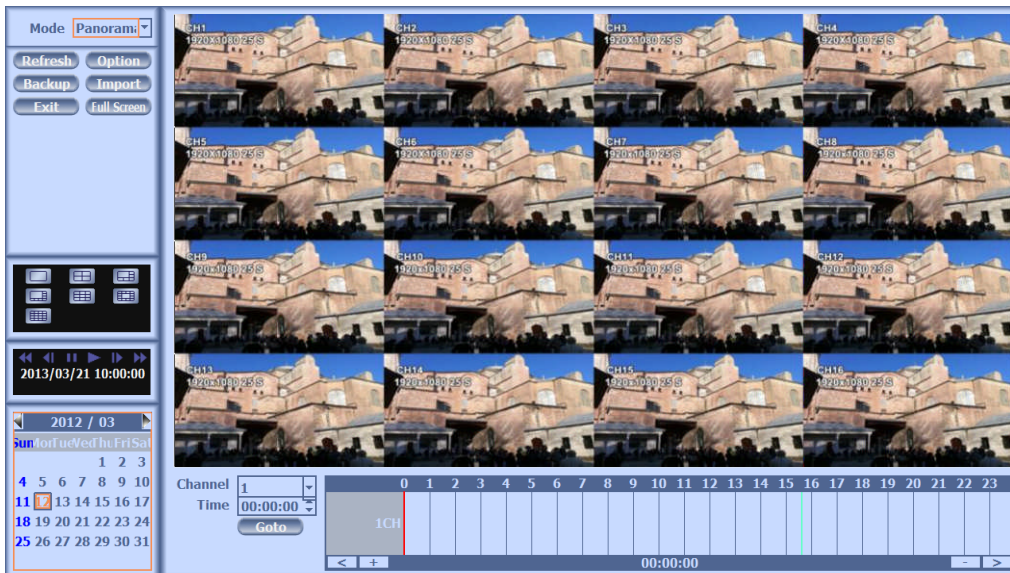

- Select search date from calendar
- Choose the channel and time from bar or typing
- The selected channel will be played continuously. If you want to play faster, use the FF button.



6) Search Related buttons

- You may click on Refresh, Option, Backup, Import, Exit , Full Screen for additional features and options

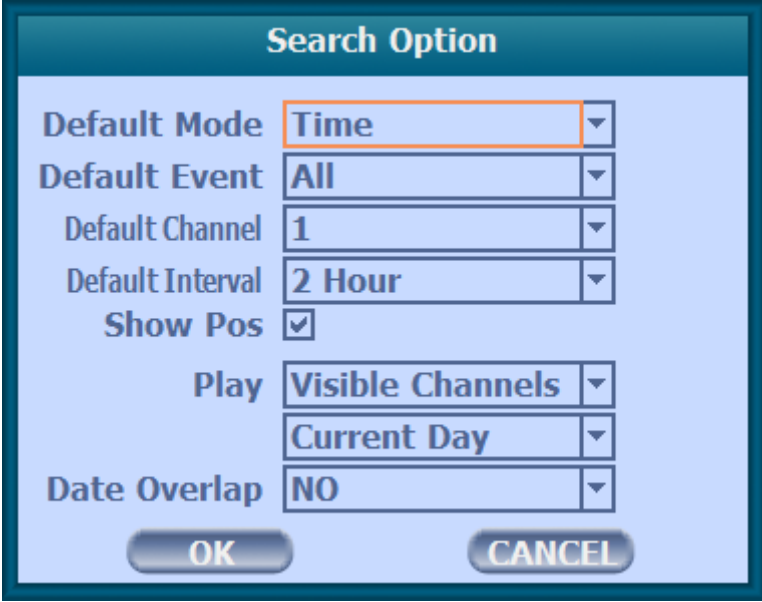Refresh	Reload all data list.
Option	<p>Search option.</p> 
Backup	Backup recorded data to external USB device.
Import	Playback recorded data from external USB device.
Exit	Move to Live video mode.
Full Screen	Load playback data to full screen mode.

3-3-2. Play Mode

If you choose 'Full Screen', the full screen appear. You can control the play speed in here.

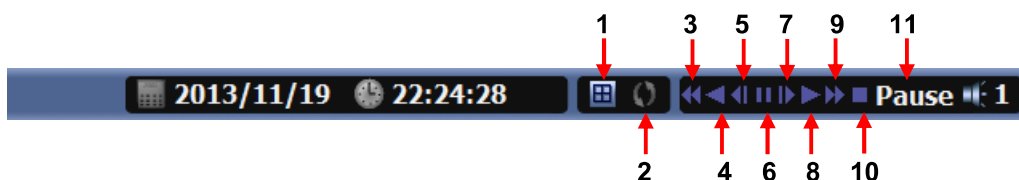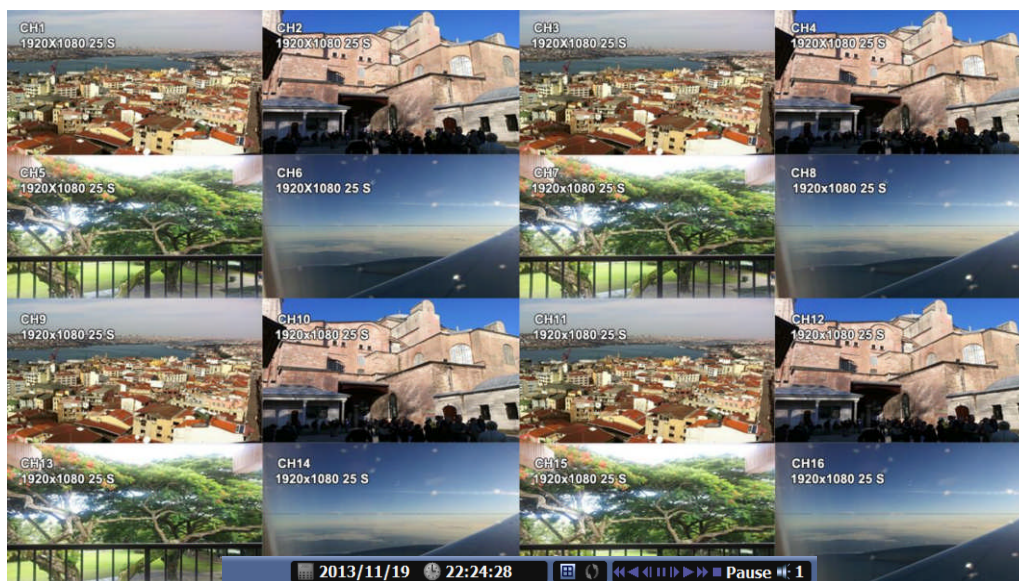

► Play Screen GUI

1. Split Screen
2. Sequence
3. FB (Fast Backward): FB×2, 4, 8, 16, 32, 64 times faster
4. Playback : Backward normal speed
5. SB (Slow Backward):SBx1/2, SBx1/4
6. STILL (Pause) / Frame advance
7. SF (Slow Forward):SFx1/2, SFx1/4
8. Play : Forward normal speed
9. FF (Fast Forward): FF×2, 4, 8, 16, 32, 64 times faster
10. STOP : Stops playing and returns to LIVE Screen.
11. Status information

3-4. SETUP Mode


Access Setup menu from Right Clicking mouse button to Popup Menu.
Configure Display, Record, Device, Network, System which is navigated by clicking on corresponding tab menu at the top of the screen.

Apply	Apply changes
Default	Return to factory default settings.

3-4-1. Display

Configure OSD, Main Display, Color Control setting.


1) OSD

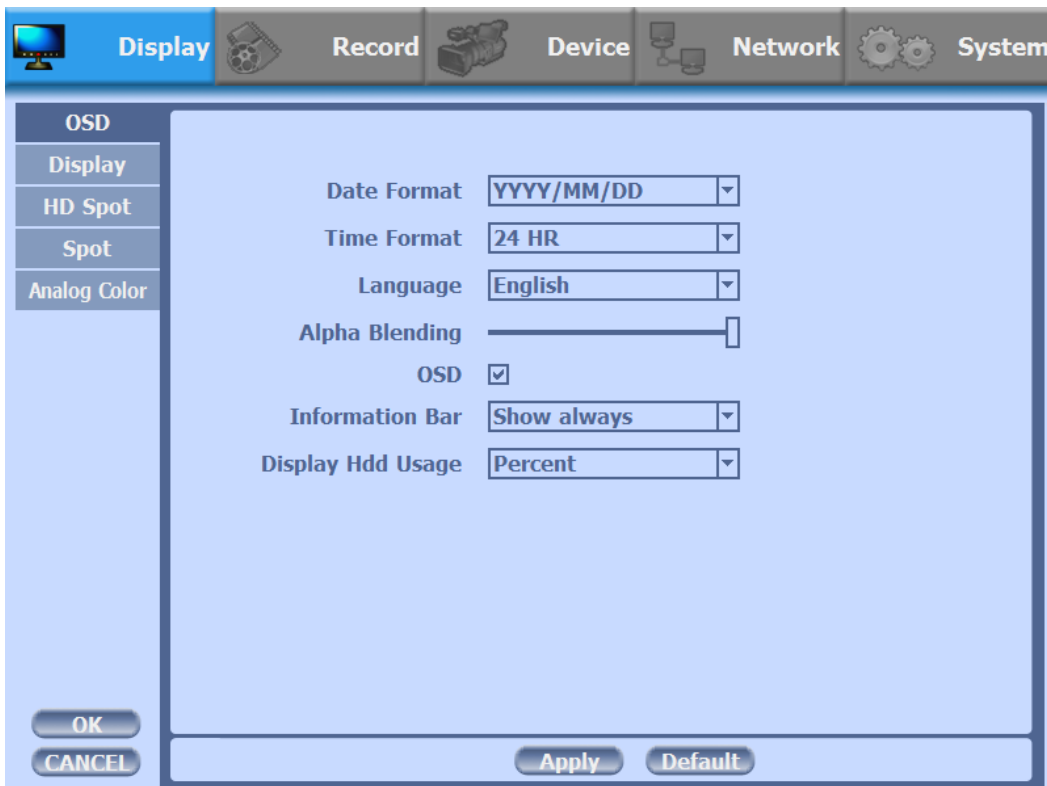

Date Format	YYYY/MM/DD, MM/DD/YYYY, DD/MM/YYYY
Time Format	24HR, 12H(AM/PM)
Language	Select system language.
Alpha Blending	Adjust transparency of System Menus.
OSD	OSD On/Off
Information Bar	Information Menu Bar Hide always /Auto hide/ Show always
Display HDD Usage	Percent/Oldest Date

2) Display

- You can use dual monitors that show same image by setting VGA+HDMI.
- Configure and view Resolution, Sequence Dwell Time and Display control settings.

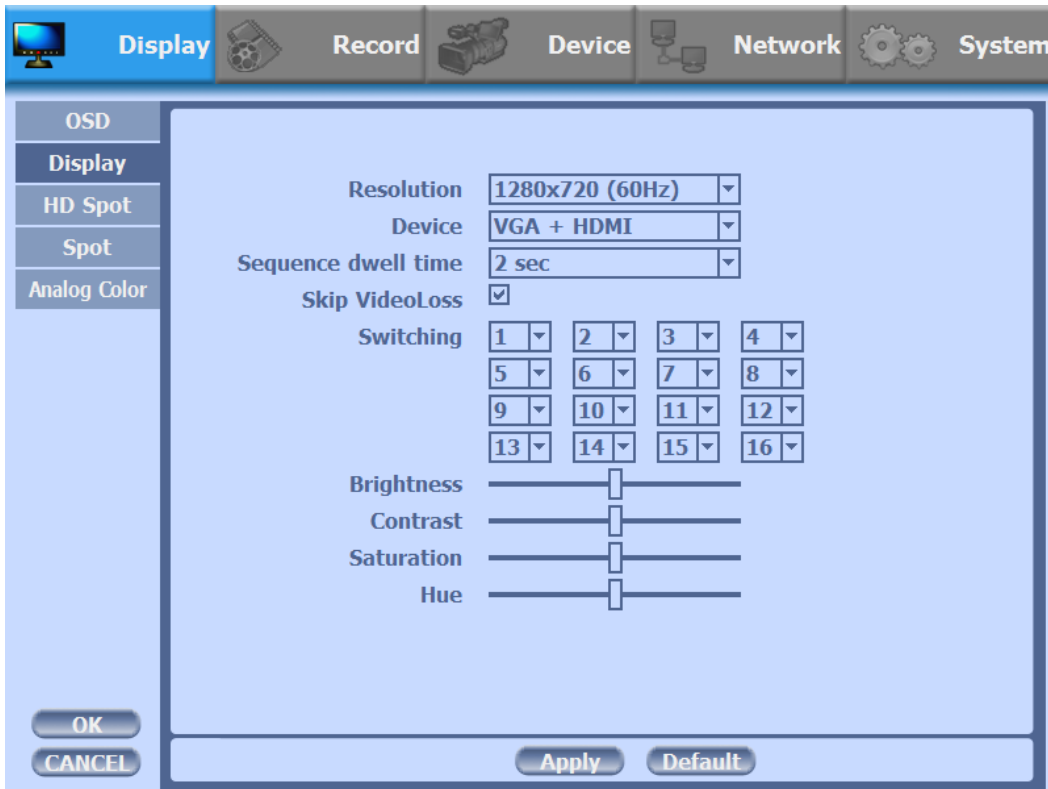

Resolution	1280x720(60Hz), 1280x720(50Hz), 1280x1024(60Hz), 1920x1080(60Hz), 1920x1080(50Hz)
Device	VGA+HDMI, VGA, HDMI
Sequence dwell time	1 sec ~ 60 sec
Skip Video Loss	Skip a video loss channel when you set the sequence of the live screen.
Switching	Set a display for the live screen.
Brightness	Adjust brightness.
Contrast	Adjust contrast.
Saturation	Adjust saturation.
Hue	Adjust hue.

3) HD Spot

- If you are not using VGA+HDMI for display, you can use HD Spot.

The screenshot shows the 'HD Spot' configuration window. On the left is a sidebar with menu items: OSD, Display, HD Spot (selected), Spot, and Analog Color. The main area contains the following settings:

- Resolution:** 1280x720 (60Hz) (dropdown)
- Device:** None (dropdown)
- Mode:** 16 Screen (dropdown)
- Sequence dwell time:** 2 sec (dropdown)
- Skip VideoLoss:** ☒
- Switching:** A 4x4 grid of 16 dropdown menus, each numbered 1 through 16.

At the bottom, there are buttons for 'OK', 'CANCEL', 'Apply', and 'Default'.

Resolution	1280x720(60Hz), 1280x720(50Hz), 1280x1024(60Hz),1920x1080(60Hz), 1920x1080(50Hz)
Device	VGA, HDMI, None
Mode (Split Screen)	1, 4, 9, 16 Screen
Sequence dwell time	1 ~ 60 sec
Skip Video Loss	Skip a video loss channel for the sequence of the HD Spot.
Switching	You can program the sequence channels. If you want to just see ch1, you set all box to '1'. You can make any useful sequence by this map.

4) SPOT Control

- Set the SPOT output .

The screenshot shows the 'Spot' control menu. The top navigation bar includes 'Display', 'Record', 'Device', 'Network', and 'System'. The left sidebar has 'OSD', 'Display', 'HD Spot', 'Spot', and 'Analog Color'. The main area contains the following settings:


- CVBS: NTSC
- Mode: 16 Screen
- Sequence dwell time: 2 sec
- Skip VideoLoss: ☒
- Switching: A 4x4 grid of buttons numbered 1 to 16.

At the bottom, there are buttons for 'OK', 'CANCEL', 'Apply', and 'Default'.

CVBS	Choose NTSC or PAL
Mode	1, 4, 9, 16 Screen
Sequence dwell time	1 ~ 60 sec
Skip Video Loss	Skip a video loss channel for the sequence of the Spot.
Switching	You can program the sequence time. If you want to just see ch1, you set all box to '1'. You can make any useful sequence by this map.

5) Color

- Adjust color of analog cameras.

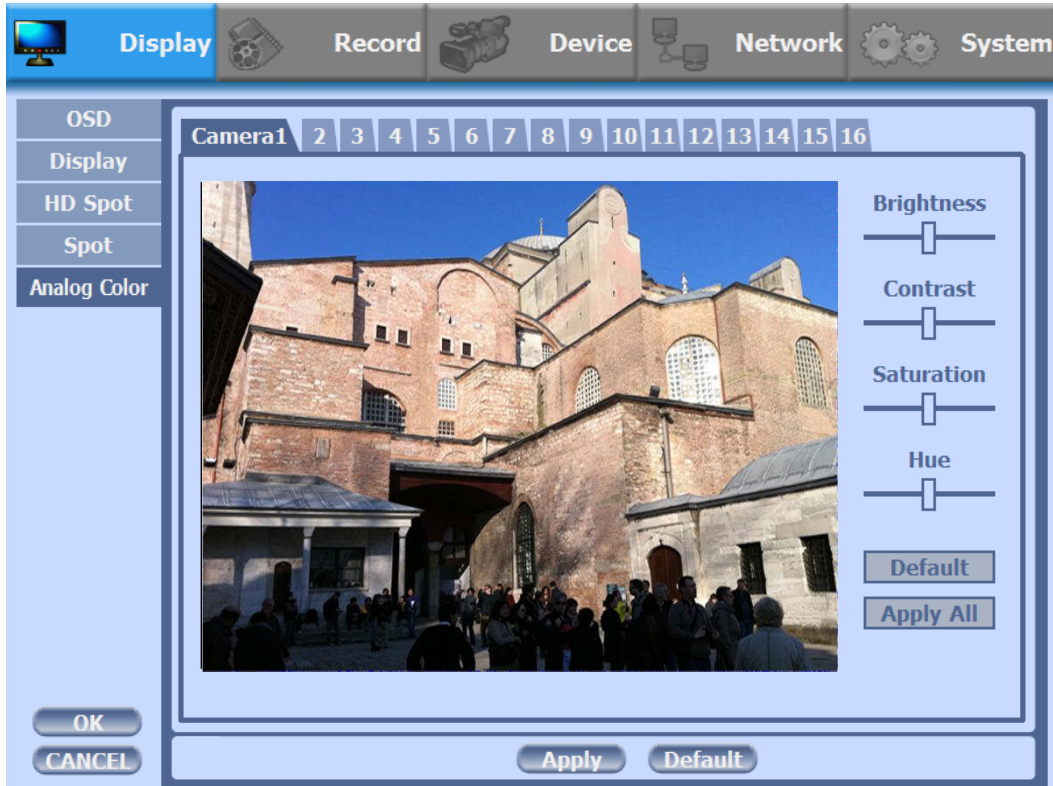

Brightness	Adjust brightness
Contrast	Adjust contrast
Saturation	Adjust saturation
Hue	Adjust hue
Default	Return to factory default settings.
Apply All	Apply changes to all channels.

3-4-2. Record

Configure and view Event In, Record, Group, Holiday settings

1) Record

Rec type		None, Conti, Event, C/E
Audio Rec		To select audio recording or not.
❖ ALL Apply		Apply the setting to whole channel.
Continuous	Resolution	1920x1080, 1280x720, 960x540
	FPS	30, 15, 10, 7, 6, 5, 4, 3, 2, 1 fps
	Quality	Super, High, Med, Low
❖ Event	Resolution	1920x1080, 1280x720, 960x540
	FPS	30, 15, 10, 7, 6, 5, 4, 3, 2, 1 fps
	Quality	Super, High, Med, Low
	❖ Duration	5 ~ 60 sec
	❖ PreAlarm	0 ~ 4 sec
❖ Total		It shows the total fps.
❖ Estimated Recording Days		This is an automatic calculator of the recoding days.

- ❖ Event recording has priority in recording. In C/E recording, the recording will follow conti recording setup in normal condition while it would follow event recording setup in event generation.
- ❖ For convenience, you can use the 'Apply All' menu to change with the same preference. You don't have to setup each channel if you using the 'Apply All' function.
- ❖ Duration is to set post event recording time.
- ❖ Pre alarm is to set pre event recording time.
- ❖ Total shows total fps of all channels. If total fps is more than supported, it turns red. If it turns red, you need to set a lower resolution or FPS.
- ❖ Event recording has priority in recording. In C/E recording, the recording will follow conti recording setup in normal condition while it would follow event recording setup in event generation.

2) Group

- With this menu, you can set the group using the scheduler. If you choose 'Group' tab, you can see the similar screen with 'Record'. The setting is similar

The screenshot shows the 'Record' configuration window. The top menu bar includes 'Display', 'Record' (active), 'Device', 'Network', and 'System'. The left sidebar has 'Record', 'Group' (active), 'Schedule', 'Holiday', and 'Event In'. The main panel is titled 'Record' and shows settings for 'Group A'. At the top, there's a 'Timestamp' checkbox and a 'Group' dropdown set to 'A'. Below this is a row of camera tabs from 'Camera1' to '16'. The settings are organized into sections: 'Rec Type' (Conti), 'Audio Rec' (checked), 'Continuous Recording' (Resolution: 1920x1080, FPS: 30.0, Quality: Super), 'Event Recording' (Resolution: 1920x1080, FPS: 30.0, Quality: Super, Duration: 15 sec, PreAlarm: 0 sec), 'Total' (444.9 (1920x1080)), and 'Estimated Recording Days' (0.18 Day). There are 'Apply All', 'OK', 'CANCEL', 'Apply', and 'Default' buttons.



* Timestamp


With 'Record' and 'Group' menu, you can check the 'Timestamp' to mark the time on your recording files.

3) Schedule

- In recording, Schedule recording setting is most preferred. So if you activate the weekly scheduler, you cannot record manually.
- Schedule On : The weekly scheduler is activated.
- Holiday On : The holiday that set by user is activated.
- Since you can set recording weekly, you can reduce recording of unnecessary time period. In Scheduler window, days and channels are displayed, and recording information for each channel is displayed at bottom of window.


❖ How to set the weekly scheduler

1. Choose 'Scheduler' to 'On'.
2. Choose group and drag to wanted time.
3. Press the time bar  , if you want to set the detailed time.
4. Press 'Enter' button to change the group of the selected area.
5. If you activate 'Holiday' scheduler, choose 'holiday'.

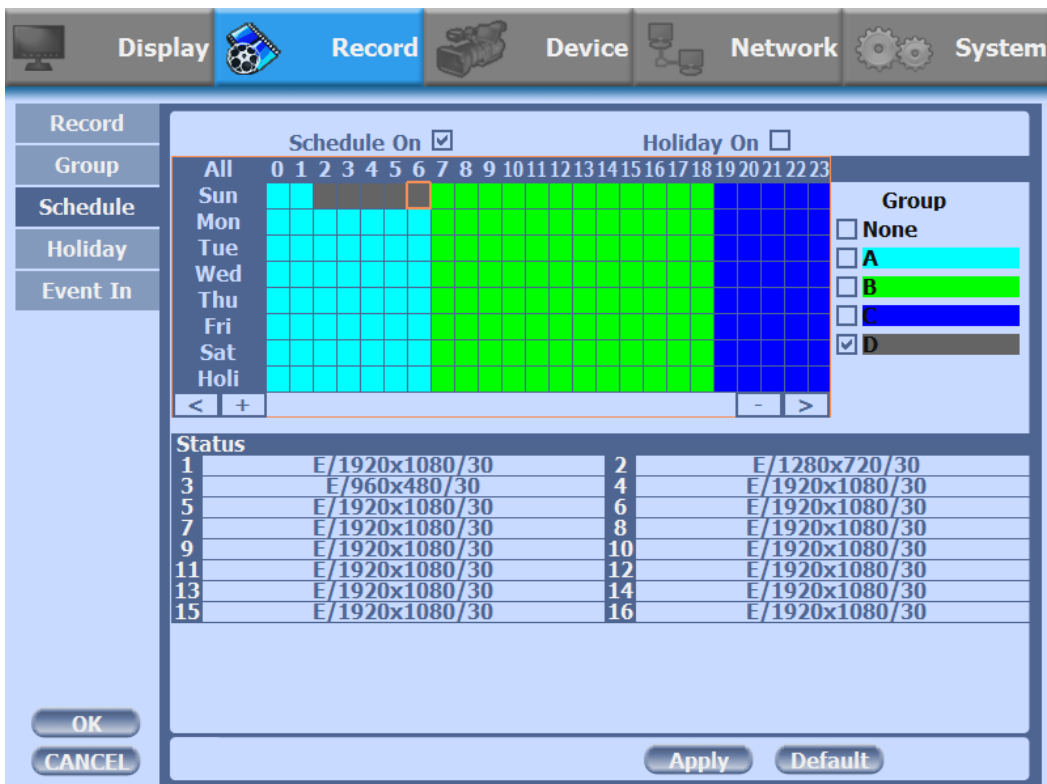

4) Holiday



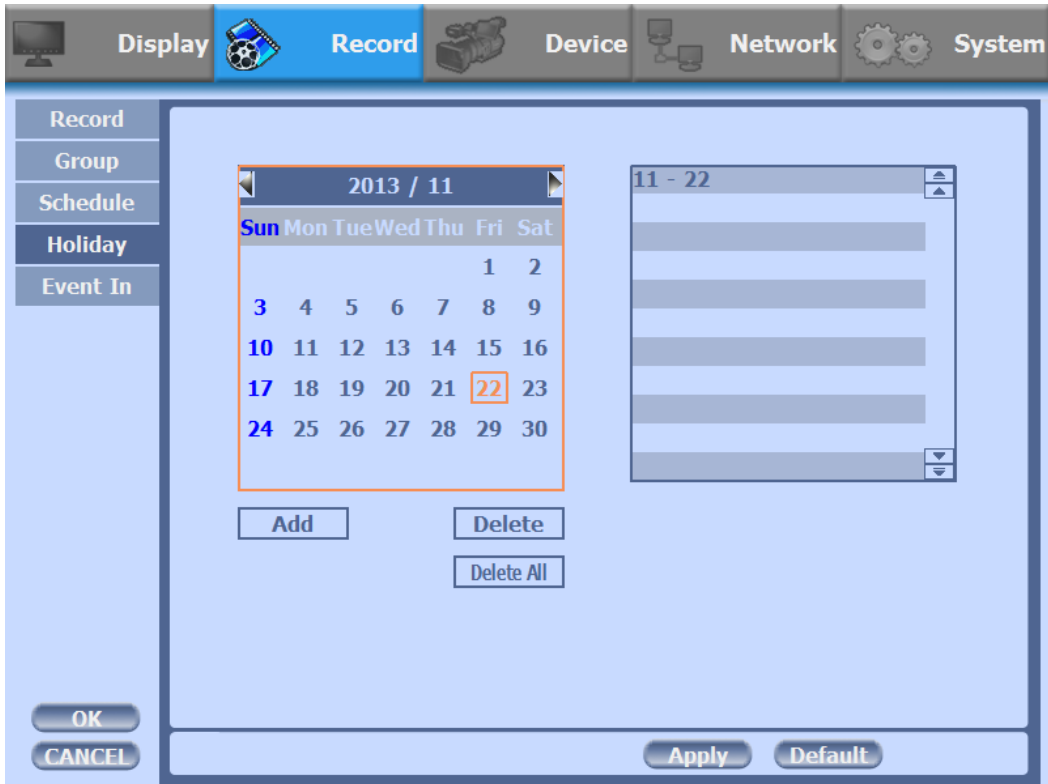

With this menu, you can add the holidays. Use the 'Add' button for adding the holiday and use the 'Delete' or 'Delete All' buttons for removing the existing holidays.




5) Event In





- With this menu, you can set sensor input, motion detection setup. You can also set each channel individually.
- Although you set Motion Detection and Sensor Setting to On in Event menu, if Event Input in Rec Menu is set to None, it only detects and does not record.

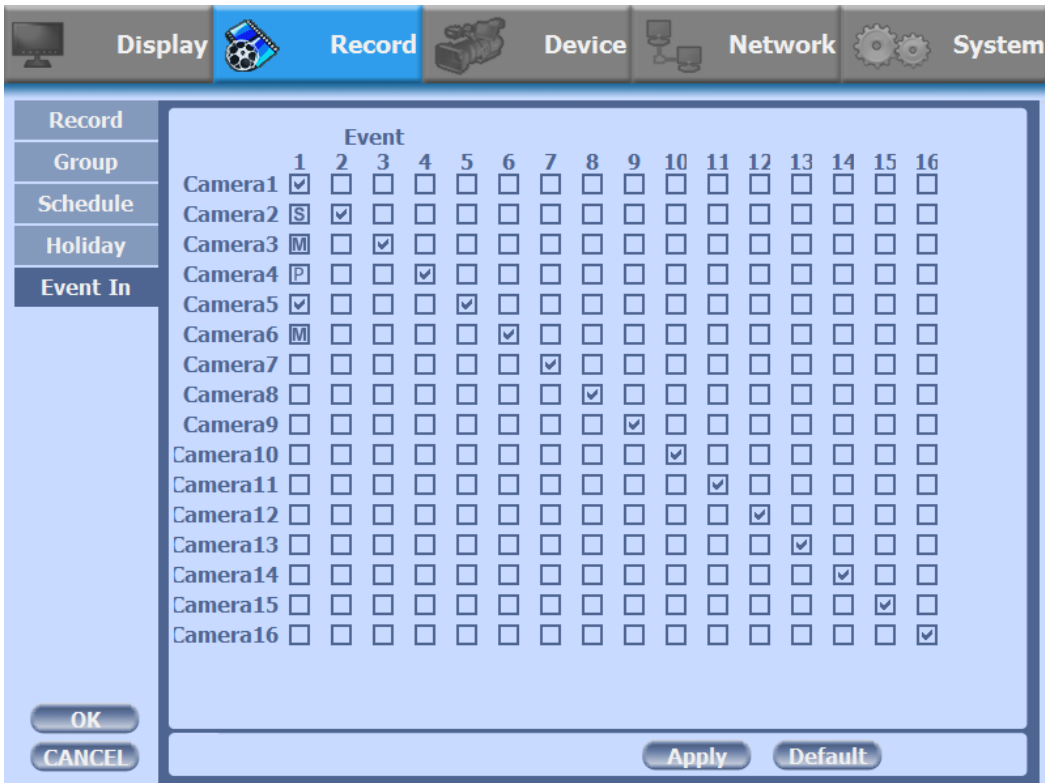❖ Summary regarding as Event Recording

Event In	OSD	Sensor	Motion Detection	POS
Sensor		ON	OFF	OFF
Motion Detection		OFF	ON	OFF
POS		OFF	OFF	ON
All Event		ON	ON	ON
None		OFF	OFF	OFF



The screenshot shows the 'Event In' configuration window. The 'Record' tab is selected. On the left, there are sub-tabs: Record, Group, Schedule, Holiday, and Event In (which is active). The main area is a grid for configuring 16 cameras (Camera1 to Camera16) across 16 events (Event 1 to Event 16). The grid shows the following settings (checked boxes):


Camera	Event 1	Event 2	Event 3	Event 4	Event 5	Event 6	Event 7	Event 8	Event 9	Event 10	Event 11	Event 12	Event 13	Event 14	Event 15	Event 16
Camera1	✓															
Camera2		✓														
Camera3			✓													
Camera4				✓												
Camera5	✓				✓											
Camera6						✓										
Camera7							✓									
Camera8								✓								
Camera9									✓							
Camera10										✓						
Camera11											✓					
Camera12												✓				
Camera13													✓			
Camera14														✓		
Camera15															✓	
Camera16																✓

At the bottom, there are buttons for OK, CANCEL, Apply, and Default.

3-4-3. Device

- Configure and view Camera, Private Zone, Audio, Motion Detection, Alarm Out, PTZ settings and Controller.


1) Camera

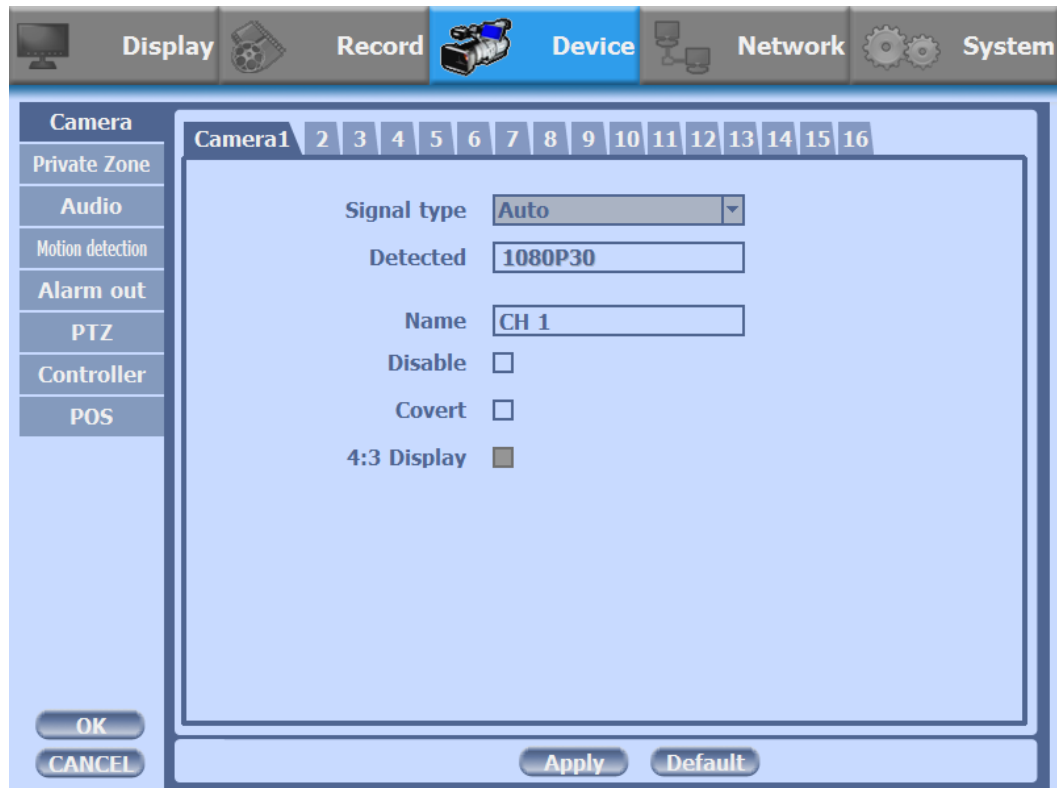

Signal type	All video input is detected automatically
Detected	Detected camera video type
Name	You can set the camera name.
Disable	Disable current camera. It is useful when the signal is bad.
Convert	Hide current camera from Live view but Record for future searching option.
4:3 Display	4:3 display of analog camera

2) Private Zone

If you want to hide some part of the picture for privacy, you can choose the area by dragging the mouse. The selected area will be changed to black screen.

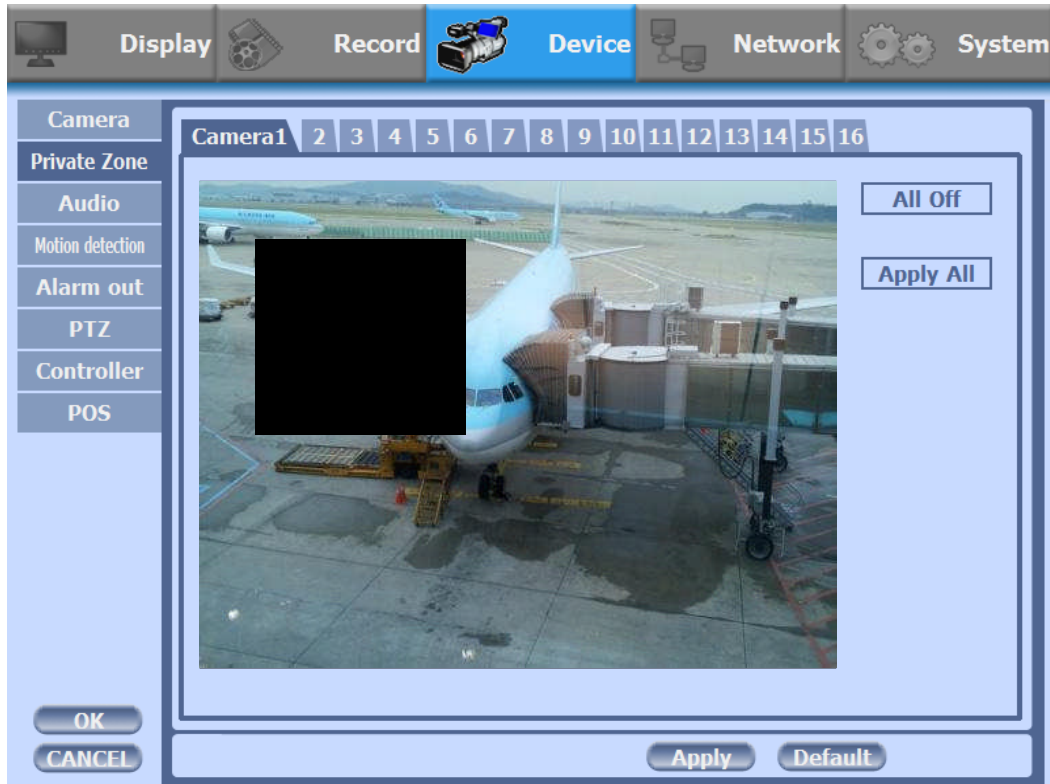

All Off	All off the private zone
Apply All	Apply the setting to whole channel


3) Audio

The screenshot shows the 'Device' configuration window. The top navigation bar includes 'Display', 'Record', 'Device' (active), 'Network', and 'System'. The left sidebar menu includes 'Camera', 'Private Zone', 'Audio' (active), 'Motion detection', 'Alarm out', 'PTZ', 'Controller', and 'POS'. The main configuration area lists 16 audio channels, each with a dropdown menu. The 'Audio Out' dropdown is also present. At the bottom are 'OK', 'CANCEL', 'Apply', and 'Default' buttons.

Audio 1~4	Assign audio input to a video channel.
Audio 1~8	
Audio 1~16	
Audio Out	Select which channel will be heard during Live View.

4) Motion Detection


- Change settings for Motion Grid selection and Sensitivity Level. You can set multiple area.

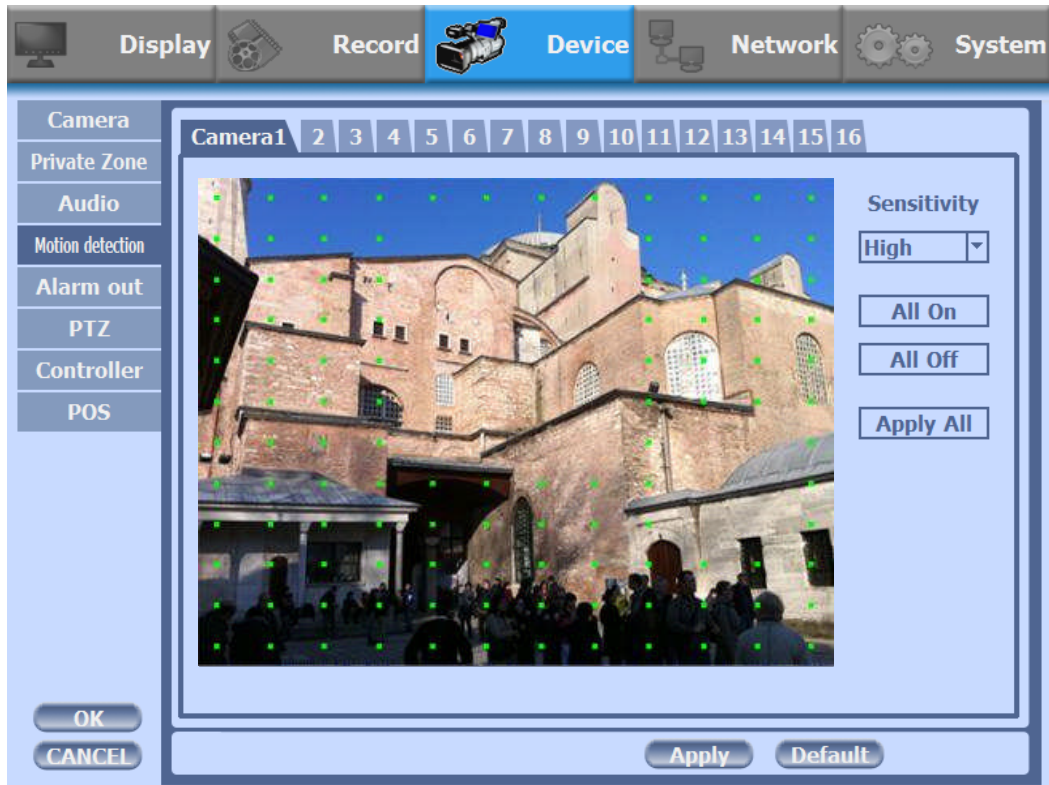

Sensitivity	Low, Mid, High
All On	This will activate the motion detection of the all area.
All Off	This will deactivate the motion detection of the all area.
Apply All	Apply the setting to whole channel

5) Alarm Out

- There are 4 types trigger such as sensor input, motion detection, POS and video loss. This setting is related that which trigger will be activate the action such as Relay, Popup, and Buzzer Alarm Out. Each type can have separate Duration value and also linked to selected camera.

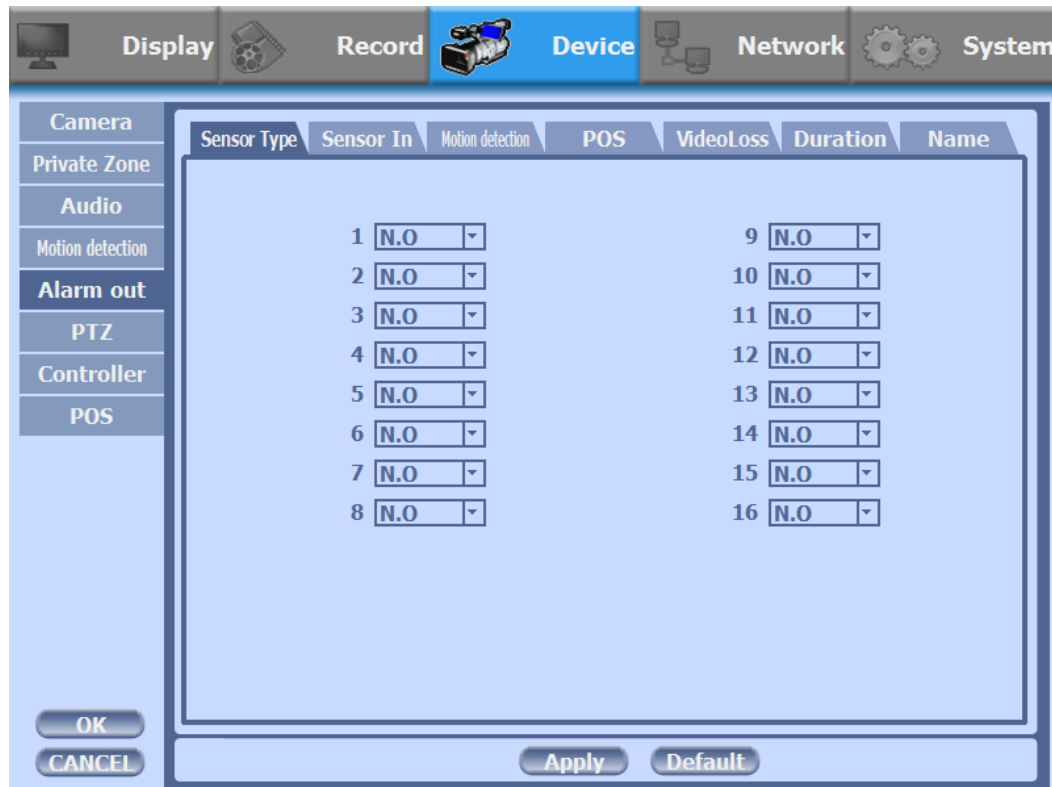

5-1) Sensor Type


Selectable option is N.O. (Normally Open) / N.C. (Normally Close)

1~4	N.O(Normal Open) / N.C(Normal Close)
1~8	
1~16	

❖ For more details, refer to [CH 2. Installation Method and Cautions].

5-2) Sensor In

- You can choose the action after sensor in between relay, buzzer sound, pop up, spot pop up and HD spot pop up. Also you can choose more than one action.

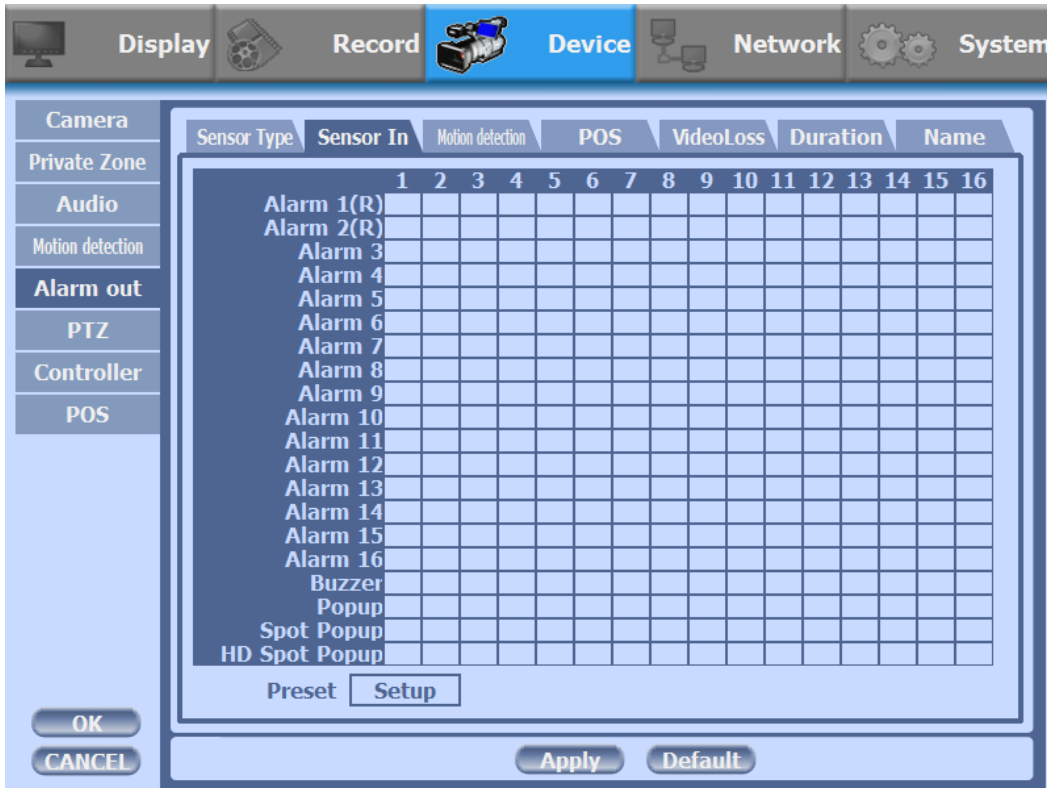

- Choose a sensor connected to a channel.
- If the sensor does not work, please check again the sensor type.
- Alarm 1 and 2 are relay out.
- Alarm 3 ~ 16 are TTL out(High, Low).

❖ For more details, refer to [CH 2. Installation Method and Cautions].

- Also you can choose more than one action. Furthermore you can set the preset position number by motion detection. If you push the 'setup' you can see the preset screen.


Sensor1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Camera1	None							Camera2	None						
Camera3	None							Camera4	None						
Camera5	None							Camera6	None						
Camera7	None							Camera8	None						
Camera9	None							Camera10	None						
Camera11	None							Camera12	None						
Camera13	None							Camera14	None						
Camera15	None							Camera16	None						

OK CANCEL


- You can assign the preset position individually by specific motion.

5-3) Motion Detection

- You can choose the action after motion detection between relay, buzzer sound, pop up, spot pop up, and HD spot pop up.

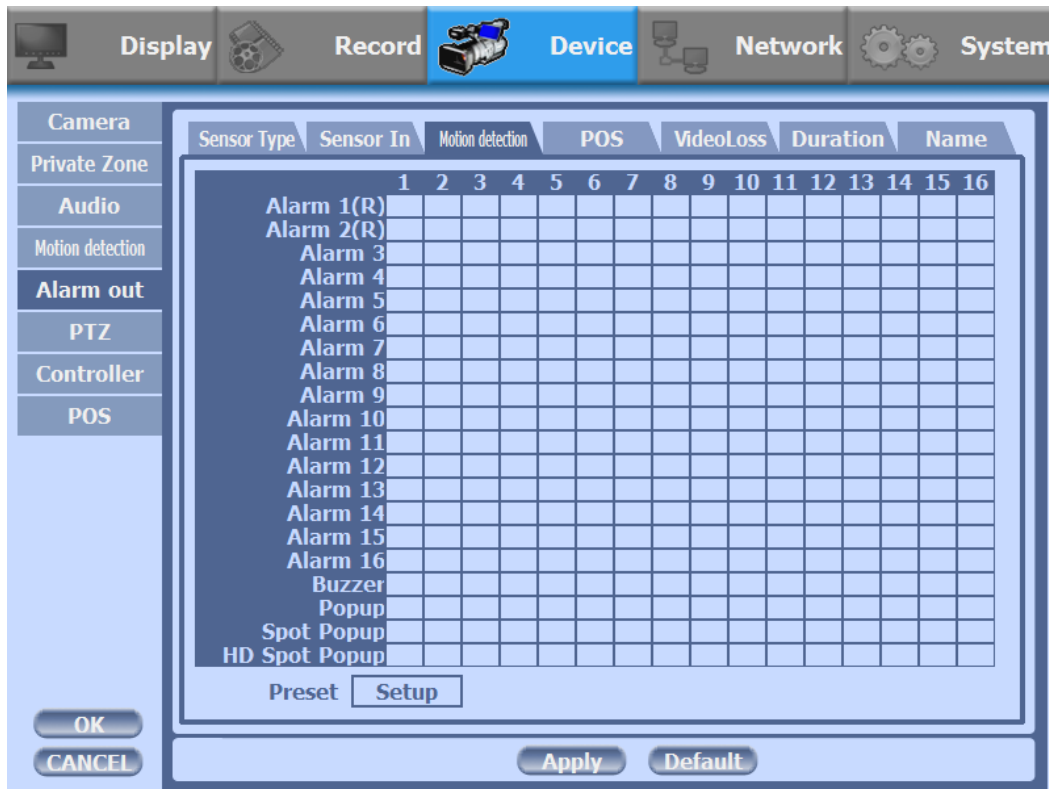


- Also you can choose more than one action. Furthermore you can set the preset position number by motion detection. If you push the 'setup' you can see the preset screen.

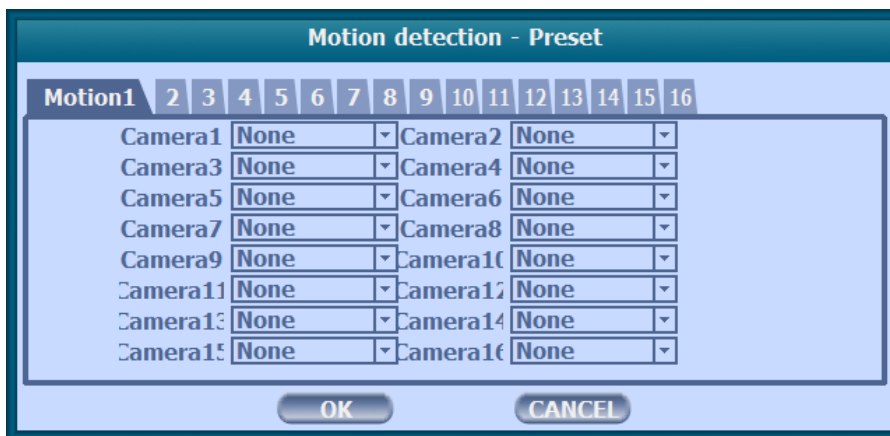

- You can assign the preset position individually by specific motion.

5-4) POS



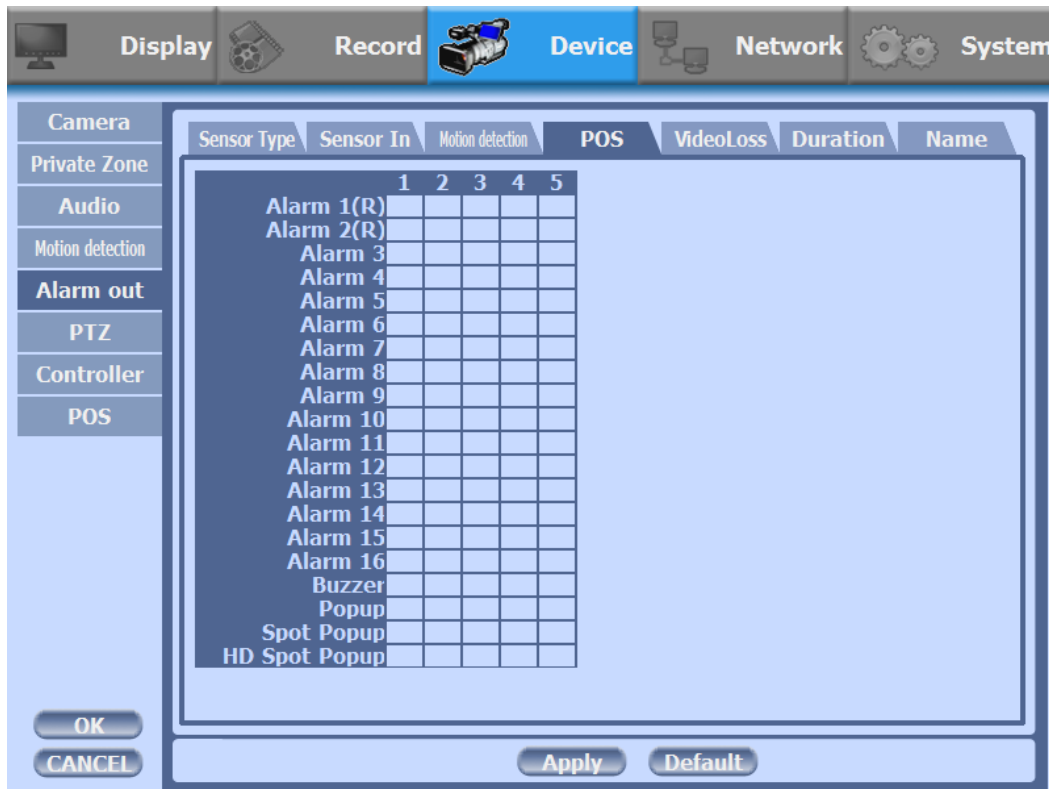


- You can choose the action after POS transaction or video loss between relay, buzzer sound, pop up, spot pop up and HD spot pop up.



- Also you can choose more than one action.

5-5) Video Loss

- You can choose the action after motion detection between relay, buzzer sound, pop up, spot pop up, and HD spot pop up.

 Display
  Record
  **Device**
 Network
  System

Camera

Private Zone

Audio

Motion detection

Alarm out

PTZ

Controller

POS

Sensor Type	Sensor In	Motion detection	POS	VideoLoss	Duration	Name										
	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16
Alarm 1(R)																
Alarm 2(R)																
Alarm 3																
Alarm 4																
Alarm 5																
Alarm 6																
Alarm 7																
Alarm 8																
Alarm 9																
Alarm 10																
Alarm 11																
Alarm 12																
Alarm 13																
Alarm 14																
Alarm 15																
Alarm 16																
Buzzer																
Popup																
Spot Popup																
HD Spot Popup																

OK

Apply

Default

- Also you can choose more than one action.

5-6) Duration

- You can choose the duration time from 5 to 60 seconds after motion detection between relay, buzzer sound, pop up, spot pop up, HD spot pop up, and preset.

Sensor Type	Sensor In	Motion detection	POS	VideoLoss	Duration	Name
Alarm 1(R)					5 sec	
Alarm 2(R)					5 sec	
Alarm 3					5 sec	
Alarm 4					5 sec	
Alarm 5					5 sec	
Alarm 6					5 sec	
Alarm 7					5 sec	
Alarm 8					5 sec	
Alarm 9					5 sec	
Alarm 10					5 sec	
Alarm 11					5 sec	
Alarm 12					5 sec	
Alarm 13					5 sec	
Alarm 14					5 sec	
Alarm 15					5 sec	
Alarm 16					5 sec	
Buzzer					5 sec	
Popup					5 sec	
Spot Popup					5 sec	
HD Spot Popup					5 sec	
Preset					5 sec	

OK CANCEL Apply Default

5-7) Name


- You can set a name of the alarms.

The screenshot shows a software interface for configuring alarms. At the top is a navigation bar with icons and labels: Display, Record, Device (highlighted), Network, and System. On the left is a vertical menu with options: Camera, Private Zone, Audio, Motion detection, Alarm out (highlighted), PTZ, Controller, and POS. The main area is titled 'Sensor Type' and contains a sub-tabbed interface with 'Sensor In', 'Motion detection', 'POS', 'VideoLoss', 'Duration', and 'Name' (selected). Under the 'Name' tab, there are 16 alarm entries, each with a label (e.g., 'Alarm 1(R)', 'Alarm 12') and a text input field containing the name 'Alarm 1' through 'Alarm 16'. At the bottom left are 'OK' and 'CANCEL' buttons. At the bottom right are 'Apply' and 'Default' buttons.

Alarm Label	Name
Alarm 1(R)	Alarm 1
Alarm 2(R)	Alarm 2
Alarm 3	Alarm 3
Alarm 4	Alarm 4
Alarm 5	Alarm 5
Alarm 6	Alarm 6
Alarm 7	Alarm 7
Alarm 8	Alarm 8
Alarm 9	Alarm 9
Alarm 10	Alarm 10
Alarm 11	Alarm 11
Alarm 12	Alarm 12
Alarm 13	Alarm 13
Alarm 14	Alarm 14
Alarm 15	Alarm 15
Alarm 16	Alarm 16

6) PTZ

Configure Pan/Tilt/Zoom camera for control via DVR System and Remote client.

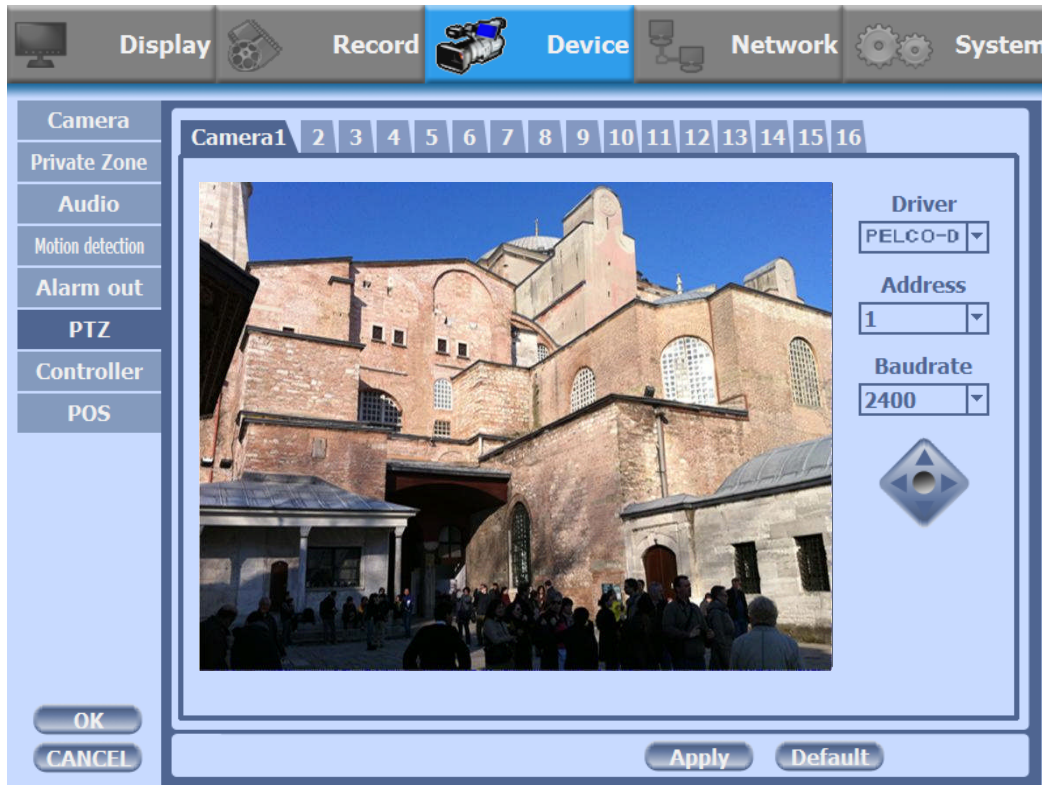

Driver	Choose Driver to be suitable for PAN/TILT Camera manufacturer.
Address	Choose address to be suitable for PAN/TILT Camera manufacturer.
Baudrate	Choose baudrate to be suitable for PAN/TILT Camera manufacturer.

- You have to set Comport value according to the connected camera.
- ❖ For connection of PAN/TILT Camera Receiver part, refer to user's manual of the related PAN/TILT Camera.

- ❖ There are more kinds of camera which can be supported. Please contact the tech support to want to know the other cameras.

Driver	Baudrate
PELCO D type	2400~9600
PELCO P type	2400
PANASONIC	2400~19200
ORIENTAL	2400(Fixed)
LPT-A100L	9600(Fixed)
LG-SD110	2400~19200


7) Controller

This sets the ID of remote control and system keyboard. If you have many DVRs in the same place, you can control separately the DVR by different remote control ID.

❖ Remote controller ID setup

Use the ID setup and number key to set the ID of remote control on the remote controller. You may check the ID by pressing the remote control key. The ID should be the same between the DVR and remote control.

And you can turn it on/off the key sound.

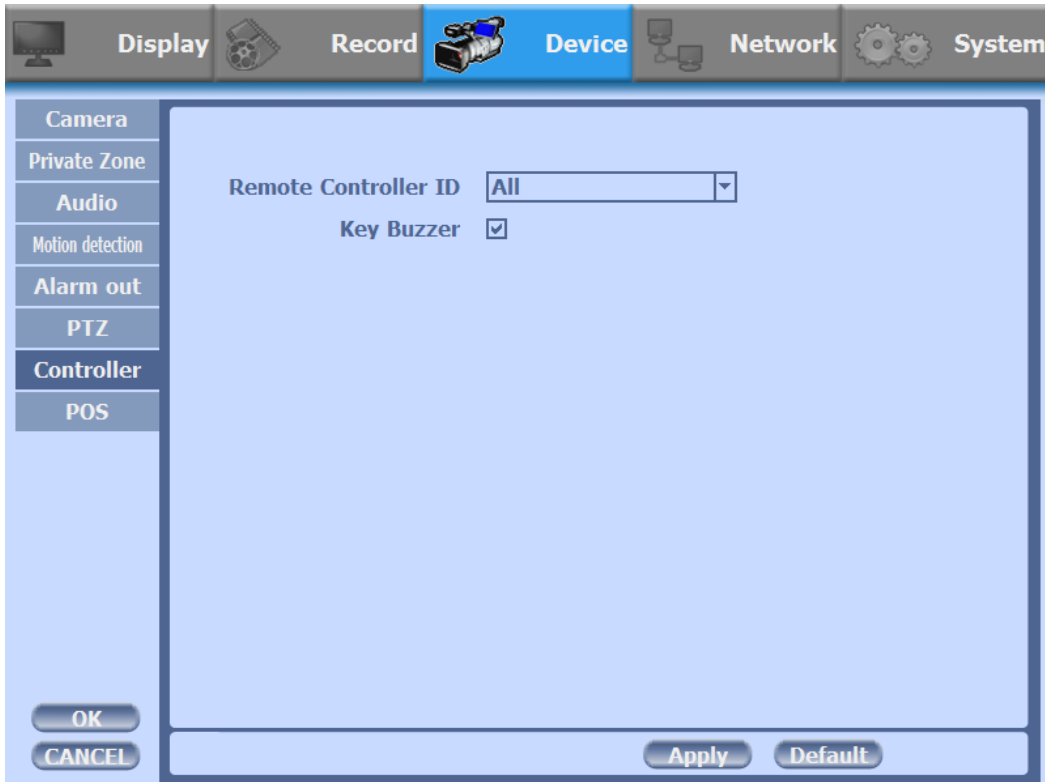

Remote Controller ID	All, 00 ~99
Key Buzzer	ON / OFF

8) POS

This sets the POS interface(text inserter) with the DVR and cash register.

※ If you are using a USB hub, you can use up to 4 USB POS.

The screenshot shows the 'Device' configuration menu with the 'POS' sub-tab selected. The interface includes a sidebar with various settings like Camera, Private Zone, Audio, Motion detection, Alarm out, PTZ, Controller, and POS. The main area contains fields for configuring the POS interface: Channel (set to 1), Baudrate (set to 2400), Start Word, End Word, Ignore Word, Number of add line (set to 0), Overlay Position (set to Upper Left), and Text Overlaying Duration (set to 60 sec). At the bottom, there are buttons for OK, CANCEL, Apply, and Default.

Channel	Select a Channel of POS
Baudrate	Select a baudrate of POS
Start Word	Type a start word of transaction
End Word	Type a end word of transaction. Text will be embedded into the picture between start word and end word.
Ignore Word	Type a word which you want ignore during text insertion.
Number of add line	This will determine the adding line after end word. (0~4)
Overlay Position	This will determine the text position.
Text Overlaying Duration	This will determine how long display the text up to 120 seconds. (60~120 sec)

❖ How to Connect POS

1. Connect the RS-232 cable or USB to RS232 serial cable between POS and DVR.




2. To set manually, at first you should know the setting values of the POS. You can get the information from the POS setting screen.

Register	Info	Condition	Setting						ETC
Counter	POS	Place	Receipt						
Setting	Setting	Setting	Setting						

Device Setup				
Device	Use	Part	Port	Protocol
Barcode Scanner	No			
Receipt Printer	Yes	PR4RT	COM1	4800,8,n,1
Cashbox	No			
Information	No			
Printer1	No			
Printer2	No			
Printer3	No			
Printer4	No			
Barcode Printer	No			
Terminal1	No			
Terminal2	No			
Terminal3	No			
Terminal4	No			
Telephone	No			
Save	Close			

3. If your setting is correct, you can see the below DVR screen on transaction. (This is the popup screen. You can set popup in the ‘Event In’ setup.)

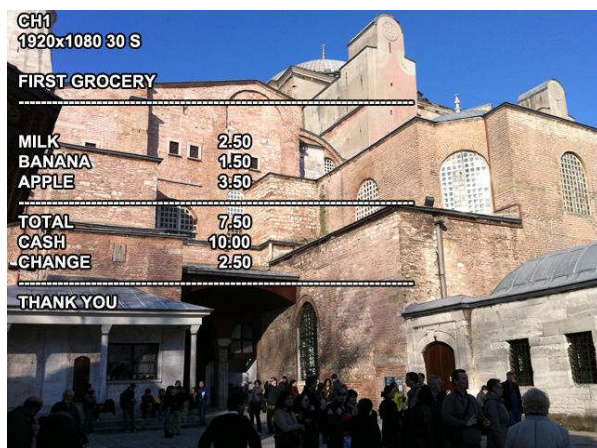

3-4-4. NETWORK

Configure and view Address, Port, DDNS, E-mail, Control and Status settings.

1) Address

Configure Network information for Remote client connection.

The screenshot shows the 'Network' configuration window with the 'Address' tab selected. The sidebar on the left contains the following tabs: Address, Magic IP, Port, DDNS, E-mail, Streaming, and Status. The main configuration area contains the following fields and controls:


- DVR Name:** Text input field containing 'DVR 1'.
- MAC Address:** Text input field containing '00:09:1B:00:00:03'.
- Type:** Dropdown menu set to 'Ethernet'.
- DHCP:** Checkmark is checked.
- IP:** Empty text input field.
- Subnet Mask:** Empty text input field.
- Gateway:** Empty text input field.
- DNS Auto:** Checkmark is unchecked.
- DNS IP:** Text input field containing '168.126.63.1'.

At the bottom of the window are four buttons: 'OK', 'CANCEL', 'Apply', and 'Default'.

DVR Name	Type the URL of DVR using virtual keyboard.
Type	It can be supported only Ethernet.
DHCP (Dynamic Host Configuration Protocol)	Set whether you want to use DHCP or not (On/Off). If you connect LAN after setting it to On, IP is allocated automatically. If you set it to Off, you have to input IP. DHCP is a protocol that allows managers to manage and allocate IP address centrally.
IP	Type the IP address.
Subnet Mask	Type the subnet mask.
Gateway	Type a gateway.
DNS Auto	If you connect LAN after setting it to On, DNS IP is allocated automatically. If you set it to Off, you have to input DNS IP.
DNS IP	Type the DNS IP.

2) Magic IP

Magic IP is our P2P service, which enables network access simply by using a smartphone to scan the supplied product QR code.

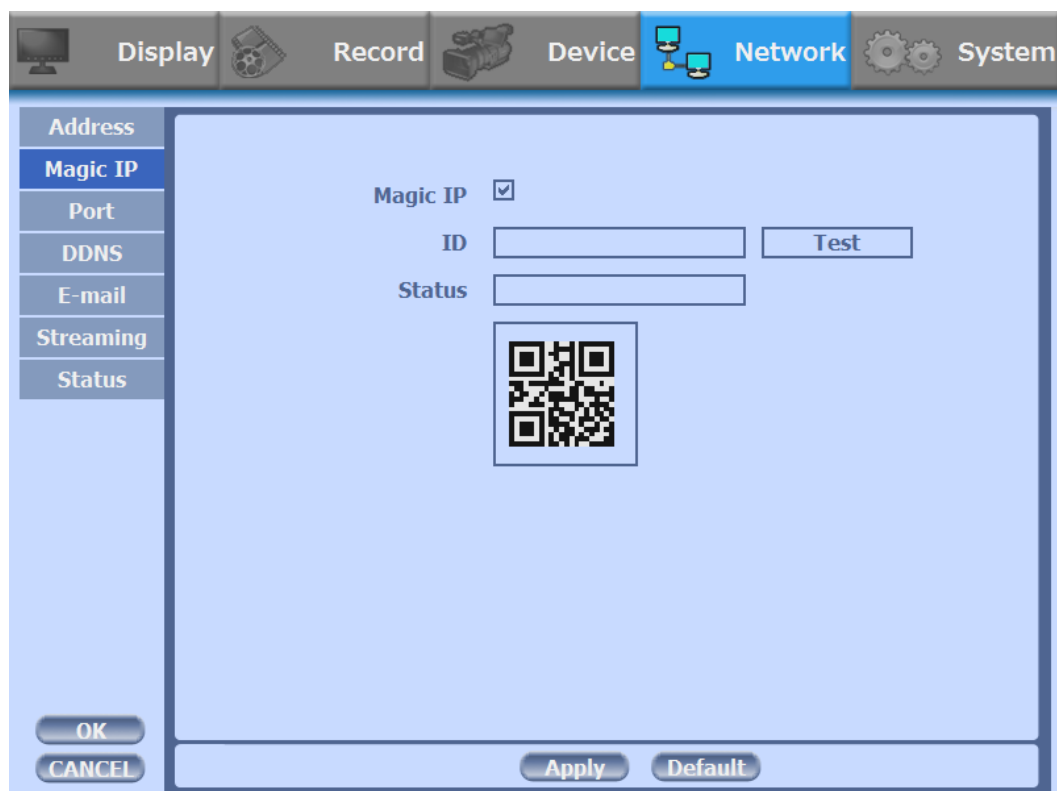

❖ Magic IP setup

1. Check Magic IP.
2. Make your own ID for P2P.
3. The ID must start with letter and contain at least seven characters.
4. When the test is done and succeed, it's QR code is automatically created.

3) Port

There are 4 kinds of ports for the case such as watch, search, setup and web. You can individually set the port number of the DVR. The default is 8000. You can choose from 8000 to 9999.

If you activate 'uPNP (Universal plug and play)' box, DVR connects the router automatically with these port number. You don't have to setup the router.

The screenshot shows the 'Network' configuration page with the 'Port' sub-tab selected. The left sidebar lists various settings: Address, Magic IP, Port, DDNS, E-mail, Streaming, and Status. The main area contains the following settings:

- Watch:** 8000 (range 8000-9999)
- Search:** 8000 (range 8000-9999)
- Setup:** 8000 (range 8000-9999)
- Web:** 80 (range 80,8000-9999)
- RTSP:** 8554 (range 8000-9999)
- ONVIF:** 8994 (range 8000-9999)
- uPNP:** ☐ (unchecked)
- uPNP Test:** A button to test the uPNP functionality.
- Status:** A text field for the test result.

At the bottom, there are buttons for 'OK', 'CANCEL', 'Apply', and 'Default'.

Watch	Type the port. (8000~9999)
Search	Type the port. (8000~9999)
Setup	Type the port. (8000~9999)
Web	Type the port. (8000~9999)
uPNP	ON / OFF
uPNP Test	Test uPNP
Status	It shows the test result of uPNP.

4) DDNS

This is the function to automatically change the IP of DVR to URL. This product supports the automatic DDNS service using manufacture's internal server. Also you can choose DynDNS.

The screenshot shows the DDNS configuration window. The 'Network' tab is active. On the left, a sidebar lists various settings, with 'DDNS' currently selected. The main configuration area includes the following fields and controls:

- DDNS Type:** A dropdown menu currently set to 'None'.
- DDNS Server:** A text input field.
- Port:** A text input field currently set to '0'.
- Domain name:** A text input field.
- ID:** A text input field.
- DDNS Password:** A text input field.
- Duration:** A dropdown menu currently set to '1 Hour'.
- DDNS Test:** A button to test the DDNS configuration.
- Status:** A text input field at the bottom of the main area.

At the bottom of the window, there are four buttons: 'OK', 'CANCEL', 'Apply', and 'Default'.

DDNS Type	Choose a DDNS type.
DDNS Server	Defend on the DDNS type, it will be auto-typed or disable.
Port	Defend on the DDNS type, it will be auto-typed or disable
Domain name	Type the port of the email account.
ID	Defend on the DDNS type, it will be auto-typed or type the ID of your DDNS.
DDNS Password	type the DDNS password.
Duration	choose the time sync frequency with DDNS server.
DDNS Test	Test your DDNS.


5) E-mail

You can send a notification of events by email. Fill all the information correctly and push the 'Email Test'. Also you can select each event individually by 'Event Set'.

Receiption	Type the email address of the receiption.
Sender	Type the name of the sender.
SMTP Server	Type the SMTP server of the email account.
Port	Type the port of the email account.
Authentication	Set whether you want to use authentication or not (On/Off).
SSL	Set whether you want to use SSL or not (On/Off).
Account	Type the email account of the sender.
Password	Type the password of the send's email account.
Duration	Set the duration time to send continuous mails.
E-mail Test	Test the email account.
❖ Event Set	Set events

❖ **Event Set**

Set events to send the email.

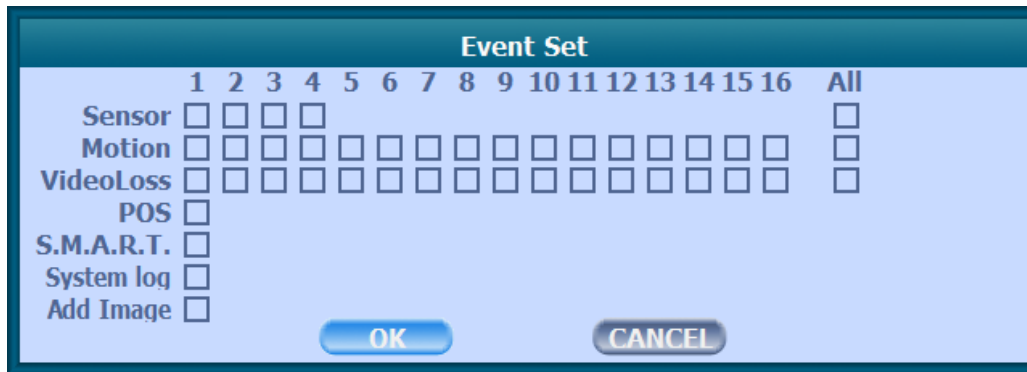


The 'Event Set' window has a title bar 'Event Set'. Below it is a grid of checkboxes for 16 channels (1-16) and an 'All' column. The rows are labeled: Sensor, Motion, VideoLoss, POS, S.M.A.R.T., System log, and Add Image. At the bottom are 'OK' and 'CANCEL' buttons.

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	All
Sensor	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>													<input type="checkbox"/>
Motion	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
VideoLoss	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
POS	<input type="checkbox"/>																
S.M.A.R.T.	<input type="checkbox"/>																
System log	<input type="checkbox"/>																
Add Image	<input type="checkbox"/>																

Sensor	Detect a sensor input.
Motion	Detect a motion detection.
Video Loss	Detect a video loss.
POS	Send inserted text of POS to the email.
S.M.A.R.T.	Send checked HDD S.M.A.R.T result to the email.
System log	Send system log to the email.
Add Image	Send a snapshot of events to the email.

❖ **Snapshot Set**

Set the regular hour for snapshot to send the email.

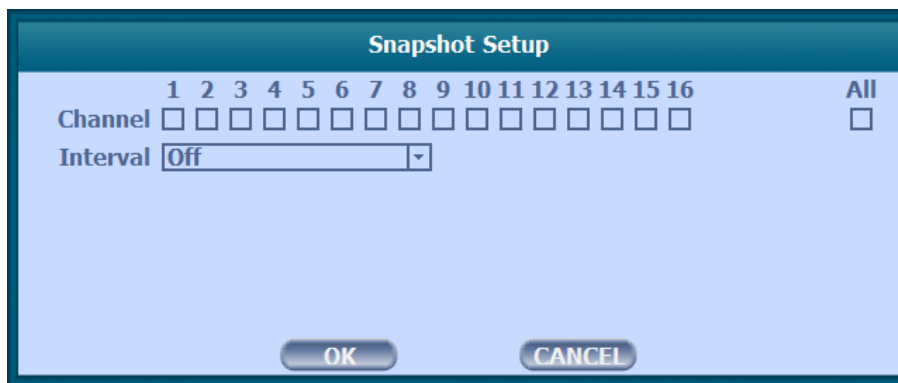

The 'Snapshot Setup' window has a title bar 'Snapshot Setup'. Below it is a grid of checkboxes for 16 channels (1-16) and an 'All' column. The rows are labeled: Channel and Interval. The Interval is set to 'Off'. At the bottom are 'OK' and 'CANCEL' buttons.

	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	All
Channel	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Interval	Off																

6) Streaming

CMS can use the 'High resolution' setting in the case of full screen or quad screen, and use the 'Low resolution' setting in the case of more than 4 split. You can adjust the number of split to switch from High to Low resolution.

The screenshot shows the 'Network' tab in the CMS configuration software. On the left is a sidebar with options: Address, Magic IP, Port, DDNS, E-mail, Streaming (selected), and Status. The main area is for 'Camera1' and shows a grid of 16 camera slots. The 'On' checkbox is checked. Under 'High Resolution', the settings are: Resolution: 1920x1080, FPS: 5.0, Quality: Super, Bandwidth: 17162 Kbps. There is an 'Apply All' button. Under 'Low Resolution', the settings are: Resolution: 480x256, FPS: 5.0, Quality: Super, Bandwidth: 1256 Kbps. At the bottom, the 'Total' line shows '14.7/21.2/21.2/21.2 (45) (1920x1080)'. At the very bottom are buttons for 'OK', 'CANCEL', 'Apply', and 'Default'.

On	Set whether you want to use the channel on CMS or not (On/Off).
High Resolution	You can choose the resolution of transmission. (1920x1080, 1280x720, 960x540, 640x352)
FPS	You can adjust the frame rate.
Quality	Set picture quality.(Super, High, Med, Low)
Bandwidth	It shows the video transmission of the high resolution.
Low Resolution	It is using the fixed resolution of transmission.(480x256)
FPS	You can adjust the frame rate.
Quality	Set picture quality.(Super, High, Med, Low)
Bandwidth	It shows the video transmission of the low resolution.
Total	Total shows total fps of all channels. If total fps is more than supported, it turns red. If it turns red, you need to set a lower resolution or FPS.

7) Status

This shows the information how many connections and what is the action of each connection.

The screenshot shows a software interface with a top navigation bar containing icons and labels for 'Display', 'Record', 'Device', 'Network' (highlighted), and 'System'. On the left, a vertical menu lists 'Address', 'Magic IP', 'Port', 'DDNS', 'E-mail', 'Streaming', and 'Status' (highlighted). The main area displays 'Total BPS (Kbps)' with an input field. Below this is a table with columns 'User', 'Ip', 'Port', 'Kbps', and 'Description'. The table is currently empty. At the bottom left are 'OK' and 'CANCEL' buttons. At the bottom right are 'Delete' and 'Refresh' buttons.

User	Ip	Port	Kbps	Description
------	----	------	------	-------------

3-4-5. SYSTEM

Configure and view system Date/Time, User Authority, Storage, System Log and Configuration settings

1) Date/Time

The screenshot shows the 'System' configuration menu with the 'Date/Time' sub-menu selected. The settings include:

- Timezone:** A dropdown menu.
- Daylight Saving Time:** An unchecked checkbox.
- Date:** A field showing '2013/11/29'.
- Time:** A field showing '22:48:29'.
- NTP Server:** A text field containing 'time.nist.gov'.
- NTP Check:** A dropdown menu set to '1 Day'.
- Sync:** A button to synchronize the time.

At the bottom of the interface are buttons for 'SHUTDOWN', 'OK', 'CANCEL', 'Apply', and 'Default'.

Timezone	Choose the time zone of your site. If you using the NTP function, it must be set correctly to your zone.
Daylight Saving Time	It enables to adapt the day light saving time automatically.
Date / Time	This sets product time. Input time by pressing number buttons after moving cursor with direction buttons. Be careful to move to backward. The overlapped data will be deleted with warning message.
NTP (Network Time Protocol) Server	This function is to change the time of DVR automatically via network. Press the 'Enter' button and using the virtual keyboard, type the address of NTP server.
NTP Check	choose the time sync frequency with NTP server.
Sync	Sync the time and NTP.

2) User Authority

This sets User authority individually. You can give to each users the authorities such as setup, search, backup, PTZ, network and camera control.

The screenshot shows the 'User Authority' configuration window for the 'admin' user. The interface includes a top navigation bar with icons for Display, Record, Device, Network, and System. A left sidebar contains menu items: Date/Time, User Authority (selected), Storage, S.M.A.R.T., System log, and Configuration. The main configuration area has tabs labeled 'admin', '1', '2', '3', '4', '5', '6', and '7'. The 'admin' tab is active, showing the following fields and options:

- ID: admin
- Password: Setup
- Setup: ☐
- Search: ☐
- Backup: ☐
- PTZ: ☐
- Network: ☐
- Network Event Notification: Setup
- Camera: Setup
- Lock: 10 Min (dropdown menu)

At the bottom of the window are buttons for Shutdown, OK, CANCEL, Apply, and Default.

ID	Type an ID.
Password	Type a password.
Setup	Authorizes the setting of the system.
Search	Authorizing the search of the system.
Backup	Authorizing backup of the system.
PTZ	Authorizing PTZ of the system.
Network	Authorizing network of the system.
Network Event Notification	Authorizing a network event notification.
Camera	Authorizing a camera.
Lock	select the auto-lock time.(Off, 1~10 min)

3) Storage

Display the information and usage of the hard disk drives.

The screenshot shows the 'Storage' configuration screen. On the left is a sidebar with menu items: Date/Time, User Authority, Storage (selected), S.M.A.R.T., System log, and Configuration. The main area is divided into 'DVR' and 'eSATA' sections. The DVR section shows a table with 4 drives, each with a 'Format' button. The eSATA section shows a table with 12 drives, each with a 'Format' button. Below these tables, there are several configuration options: 'Total' (HDD 0/160 GB), 'HDD Check' (Run button), 'HDD Overwrite' (checked checkbox), 'Disk Mirroring' (unchecked checkbox), 'Auto Deletion' (Off dropdown), 'Alarm Check HDD' (checkboxes 1-4), 'Alarm Check HDD (eSATA)' (checkboxes 1-12), and 'Alarm out' (Off dropdown). At the bottom are 'Apply' and 'Default' buttons. On the far left of the main area are 'Shutdown', 'OK', and 'CANCEL' buttons.

Total	Display all the HDD usage being used for the product. If you press the 'Enter' button on here, all the hard disk drives will be formatted.
HDD Check	Check all the HDD.
HDD Overwrite	Determine whether you want to continue recording if there is no spare saving space at hard disk drives.
Disk Mirroring	If you install two hard disk drives, you can set the second drive as a backup drive by mirroring. The mirrored disk size will be the same or greater than master HDD.
Auto Deletion	You can select the holding period of the data. If you choose 'OFF', the DVR keep the maximum data regarding the HDD capacity.
Alarm Check HDD	There is an alarm if there is no HDD or no format. It is useful to check the HDD absence.
Alarm Check HDD (eSATA)	There is an alarm if there is no eSATA or no format. It is useful to check the eSATA absence.
Alarm out	You can choose Buzzer or Relay.

4) S.M.A.R.T :Self-Monitoring Analysis and Reporting Technology

This function lets you probe the hard disk drives and investigate the status of the drivers automatically.

S.M.A.R.T. On ☒

S.M.A.R.T.

Check Day Sunday

Boot Message 2 Errors

Check Time 30 min

Limit 55°C (131°F)

Alarm out Buzzer

	Error/Test	Temperature	Reallocation(Sector)	Used(Day)
1				
2				
3				
4				

eSATA (1~6)


eSATA (7~12)

Shutdown OK CANCEL Apply Default

S.M.A.R.T.	
S.M.A.R.T. On	Set whether you want to use S.M.A.R.T. or not (On/Off).
Check Day	Determine the date to perform the S.M.A.R.T. The check time is at 00:00 AM of the day and it shows the result at 01:00 AM.
Boot Message	The number of message of showing the errors.
Temperature	
Check Time	Temperature check period.
Limit	The upper tolerance of the hard disk drive temperature.
Alarm out	You can choose the alarms or the system buzzer.
eSATA	Check eSATA HDD.

5) System Log


You may view all System administration log from Setup → System → System Log.
Also you can export the system log and easily send it to technical support for trouble shooting.

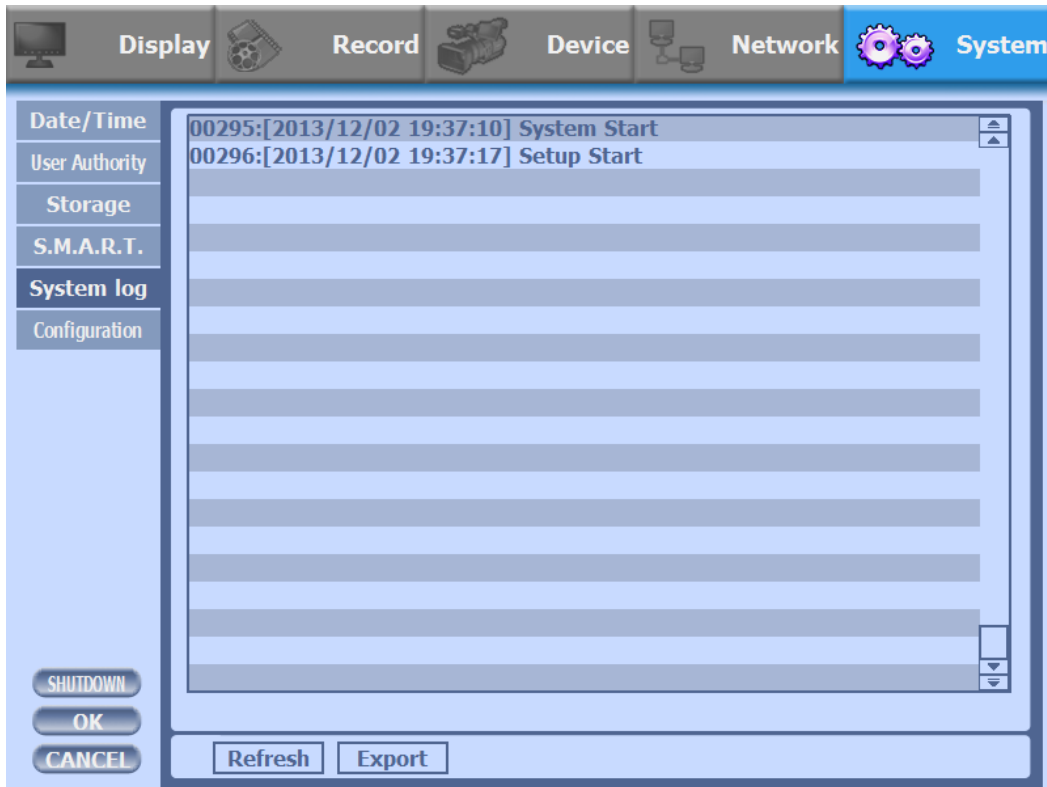

Refresh	Refresh the system log.
Export	Export the system log.

6) Configuration

Shown at the following screen, from Setup → System → Firmware, you may view the current firmware version as well as Upgrade the firmware and additionally, Export, Import, and Default DVR Configuration.

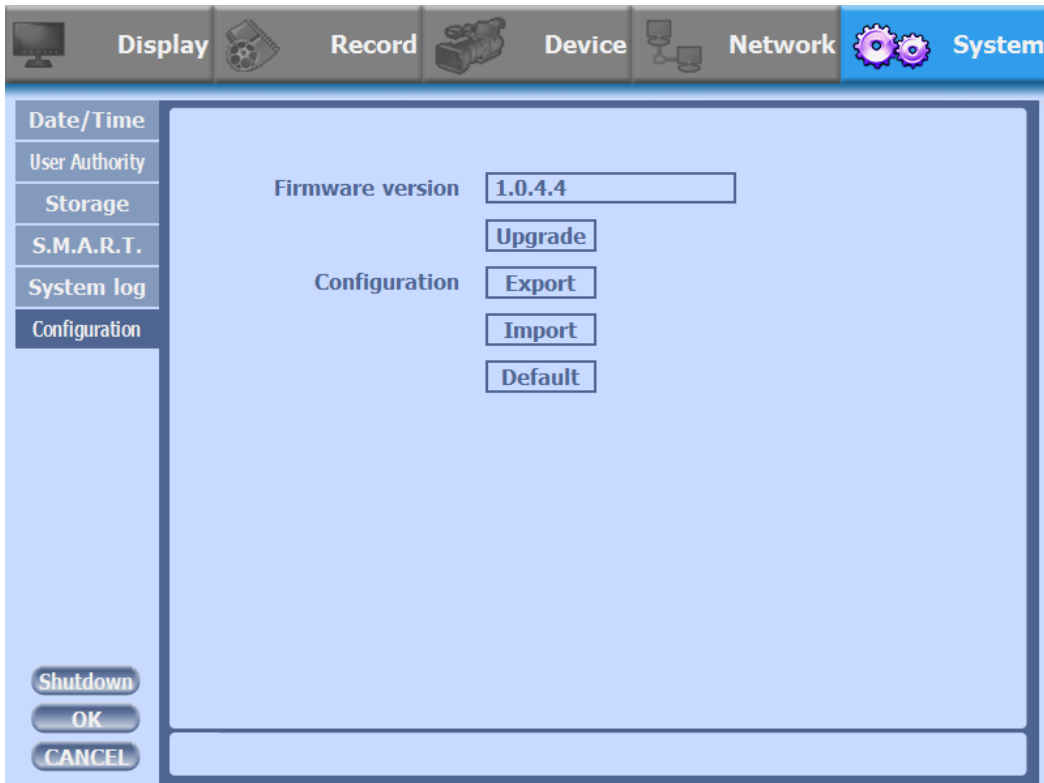



Firmware version	It shows the firmware version.
Upgrade	Upgrade the firmware.
Export	Export system settings.
Import	Import system settings.
Default	Return to factory default settings.

You should connect correctly the USB devices, before you use firmware upgrade, export and import.


3-5. Firmware Upgrade

If you want to upgrade, please follow that;

1. Download the latest firmware to USB memory root directory.
2. Put this memory to USB slot of DVR.
3. Choose 'Upgrade' and you can see the below screen will appear.
4. Select the desired file, then choose 'OK'.

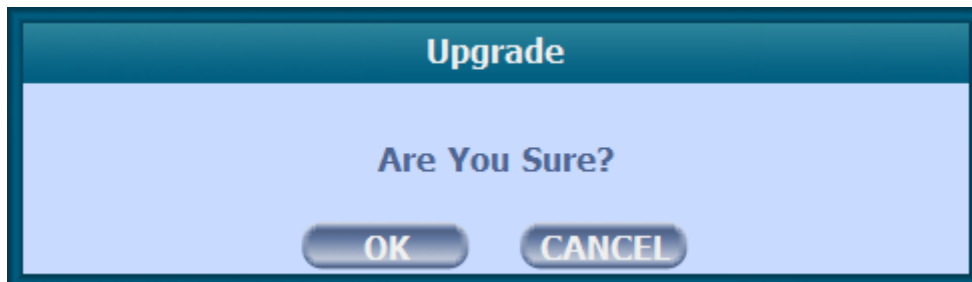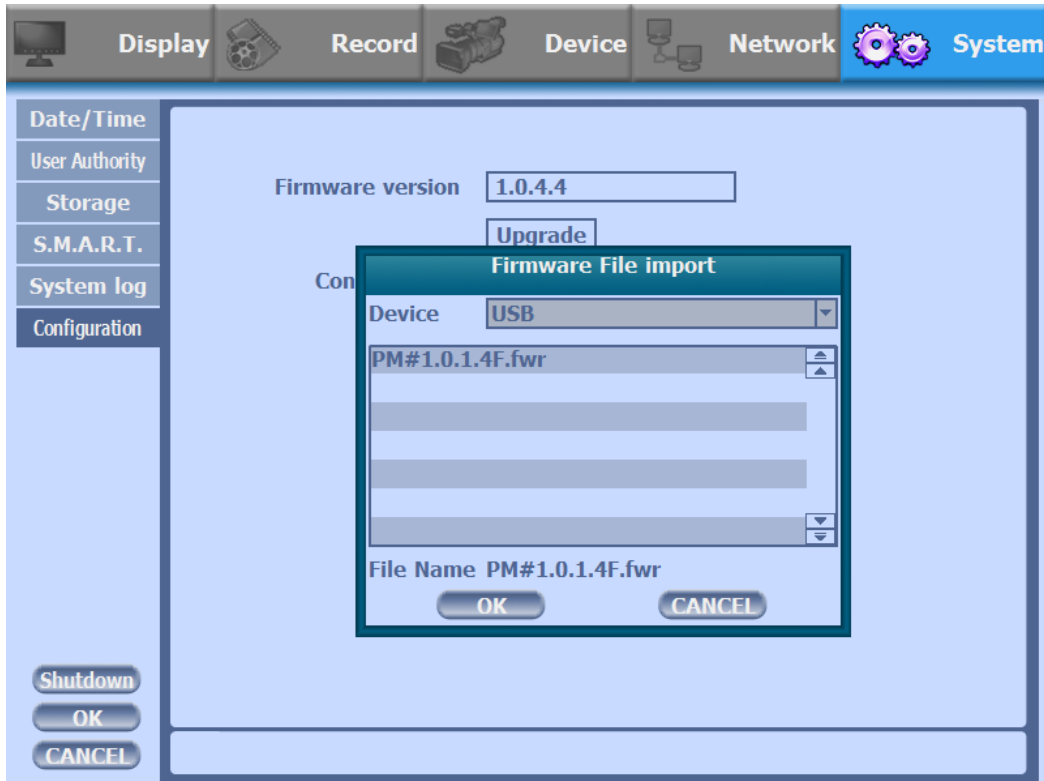

If you choose OK, you can see the below download window on the DVR screen.

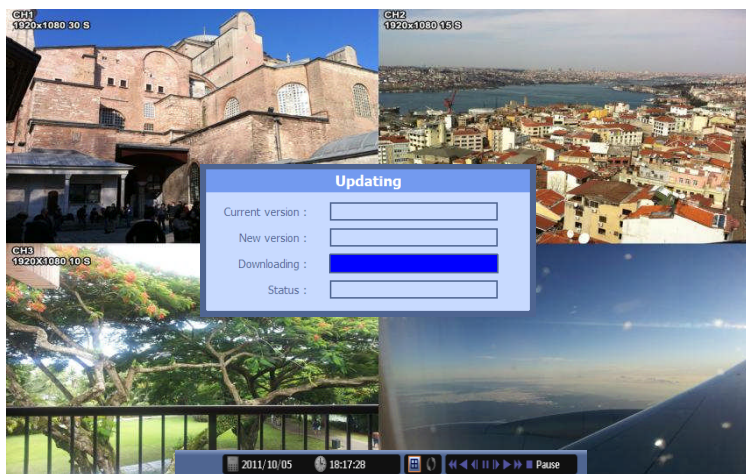

WARNING!!!

Do not turn off the power during download procedure. If you power off manually, all memory will be deleted !

※ After upgrading, DVR will reboot automatically. Before rebooting, do not operate manually !

Trouble Shooting

Symptom	Checkpoint	Countermeasure
<ul style="list-style-type: none"> ● Can't turn on power. 	<ul style="list-style-type: none"> ● Is DVR connected to power supply cable? 	<ul style="list-style-type: none"> ● Connect power cable
<ul style="list-style-type: none"> ● There is no image on monitor 	<ul style="list-style-type: none"> ● Are DVR and monitor turned on? ● Are cables of DVR connected? 	<ul style="list-style-type: none"> ● Turn on power. ● Connect DVR cable.
<ul style="list-style-type: none"> ● Only INFO OSD is on monitor and no image 	<ul style="list-style-type: none"> ● Is camera turned on? ● Are cables of DVR and monitor connected? 	<ul style="list-style-type: none"> ● Turn on camera. ● Connect cables of DVR and monitor.
<ul style="list-style-type: none"> ● There is Video Loss message. 	<ul style="list-style-type: none"> ● Is NTSC/PAL setting normal? ● Is connection between DVR and camera normal? 	<ul style="list-style-type: none"> ● Check whether NTSC/PAL setting is SETUP properly ● Check whether DVR and camera are connected properly
<ul style="list-style-type: none"> ● Can't search with Client Program. 	<ul style="list-style-type: none"> ● Isn't another user using same IP? 	<ul style="list-style-type: none"> ● Use it after another use finishes using it. If another user is searching DVR remotely with same IP, you can not search.
<ul style="list-style-type: none"> ● Motion Detection doesn't work well 	<ul style="list-style-type: none"> ● Isn't it too bright or too dark? 	<ul style="list-style-type: none"> ● Increase Motion Detection sensitivity. ● Install camera closer.
<ul style="list-style-type: none"> ● There are differences between Live screen and actual condition during remote monitoring 	<ul style="list-style-type: none"> ● Isn't camera installed too far away? 	<ul style="list-style-type: none"> ● Since it buffers Live images, there might be changes with actual condition. (1~2 sec)
<ul style="list-style-type: none"> ● Live doesn't work well in remote monitoring 	<ul style="list-style-type: none"> ● Is it set to True Color? ● Are PC specifications and VGA Card specifications appropriate? 	<ul style="list-style-type: none"> ● Refer to recommended Client PC specifications in 4-1 Installing Client Program?