PLB SERIES SOLAR POWERED LED BOLLARD



DO NOT REMOVE CARDBOARD FROM THE HEAD ASSEMBLY UNTIL PRODUCT IS CONNECTED AND INSTALLED.


HANDLE WITH CARE. COATING IS A LONG LASTING FINISH. HOWEVER SCRATCHES OR DAMAGE TO POWDER COAT WILL AFFECT PRODUCT APPEARANCE AND DURABILITY.

USE CAUTION WHEN HANDLING 6V 8AH BATTERY TO AVOID SHORT CIRCUITING THE TERMINALS.

IMPORTANT: PLEASE READ THE FOLLOWING INSTRUCTIONS PRIOR TO INSTALLING PLB SERIES BOLLARD.

INSTALLATION PROCEDURES

- 1. Install bollard in an area with good sun exposure.
- 2. Install (3) supplied anchor bolts (1) in concrete foundation using template provided. Ensure bolts project a maximum of 1.75" above concrete surface.
- 3. Remove the mounting plate $\stackrel{\textcircled{1}}{\bigcirc}$ from the product and install onto anchor bolts positioning the washers $\stackrel{\textcircled{3}}{\bigcirc}$ and nuts (4) above and below the mounting plate as pictured in the diagram. Use these fasteners to level the mounting plate then secure in position by tightening the nuts.
- 4. Install pole (5) over mounting plate and install (3) ¼-20 screws (6) loosely until each fastener is aligned to its' mounting hole, and then tighten.
- 5. Remove the head assembly \bigcirc (with cardboard cover attached) from the pole.
- 6. Remove the battery $^{(8)}$ from product packaging.
- 7. Use the strap $^{(9)}$ to secure battery to the bracket.
- 8. Connect the battery harness to the connector (10) on the back of the battery bracket.
- 9. Once battery is connected, LED's will turn on for 1 minute. The unit is now functional.
- 10. Install the head assembly onto the pole and secure into place with (3) washers (11) and (3) ½-20 bolts (12)and tighten evenly. For asymmetrical distribution ensure correct LED orientation as shown below.
- 11. Remove cardboard cover from head assembly.

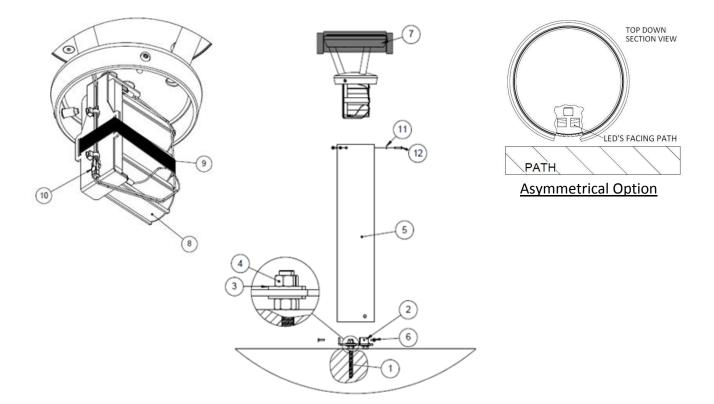

First Light Technologies 479 John St. Victoria, BC Canada V8T 5H1 Document 70-0004 12.SEP.13

www.FirstLightTechnologies.com info@FirstLightTechonologies.com

250.590.5774

© Copyright First Light Technologies Ltd.

PLB SERIES SOLAR POWERED LED BOLLARD



DO NOT REMOVE CARDBOARD FROM THE HEAD ASSEMBLY UNTIL PRODUCT IS CONNECTED AND INSTALLED.

HANDLE WITH CARE, COATING IS A LONG LASTING FINISH, HOWEVER SCRATCHES OR DAMAGE TO POWDER COAT WILL AFFECT PRODUCT APPEARANCE AND DURABILITY.

USE CAUTION WHEN HANDLING 6V 8AH BATTERY TO AVOID SHORT CIRCUITING THE TERMINALS.

MAINTENANCE

- If panel becomes soiled, clean with a soft damp cloth to maintain optimal performance.
- Do not use any abrasive materials or detergents.


TROUBLESHOOTING

Light does not turn on when battery is connected:

- Check the battery harness polarity.
- If harness connected correctly, measure battery voltage and contact customer service.

The light flashes when battery is connected:

• Battery state of charge is lower than optimal state, install and the product should charge the battery. Monitor for correct operation. If complications persist, please contact customer service.

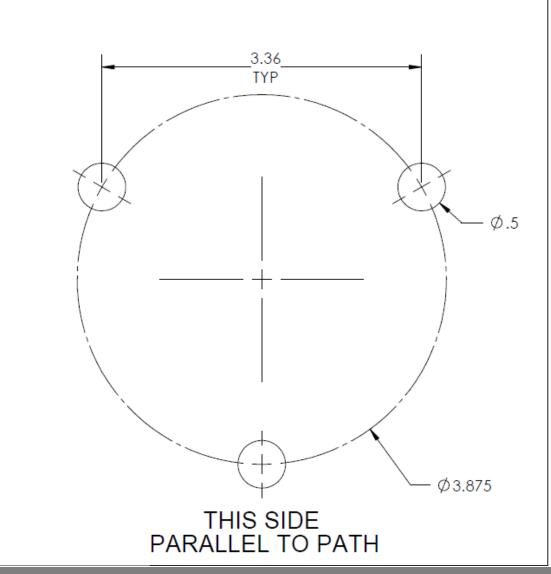

First Light Technologies 479 John St. Victoria, BC Canada V8T 5H1 Document 70-0004 12.SEP.13 www.FirstLightTechnologies.com info@FirstLightTechonologies.com

250.590.5774 © Copyright First Light Technologies Ltd.