
## Air-Electric Service Station P/N 10264

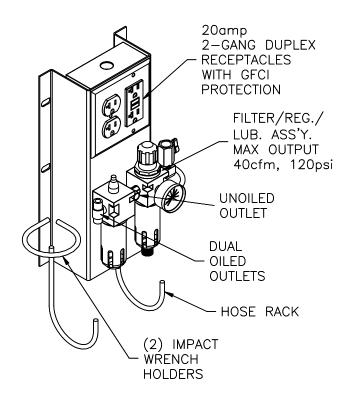

## **Installation Instructions**

- 1. Use Air-Electric Service Station centered on the back of the Power or Idler column as a template to mark mounting holes (use bottom set of bracket holes).
- 2. Drill two holes ¼" diameter.
- **3.** Tap holes 5/16"-18NC.
- **4.** Mount Service Station with provided hardware.
  - (2) 5/16"-18NC Phillips Pan Hd Screw x 3/8" Lg.
  - (2) 5/16 Split Lock Washer

**IMPORTANT:** The hole locations are critical to avoid interference with the carriage slide blocks. Use hardware listed above to avoid interference with the back of the carriage.

