

# Important: Read all instructions Before starting to program.

\*If you wait more than 10 seconds between any two steps the LED will go out and you will have to start over.

1. First, press and hold the (+) button. The Red LED will turn on. Next, while continuing to hold the (+) button, press and hold the (-) button. Continue to hold both buttons until the LED starts to blink (approximately 5 seconds). Release both buttons while the LED is blinking. The LED will blink two times and then remain on to confirm you are in programming mode. Go to Step 2 Quickly
2. While the LED is on, press and release the (+) button. The LED will blink off once and then remain on. Go to Step 3
3. Enter the 8-digit code (sequence of (+), (0), (-) see example below) from the printed sticker on the inside cover of your control box (or copy the settings of your receivers dip switches), pressing the buttons that correspond with the sticker. Go to Step 4

	1	2	3	4	5	6	7	8
+	●	○	○	○	○	●	●	○
0	○	○	●	○	●	○	○	○
-	○	●	○	●	○	○	○	●

Receiver Code

+	-	0	-	0	+	+	-
---	---	---	---	---	---	---	---

4. Then press the (+) button once. The LED will blink twice to confirm a valid code has been entered and then remain off.