
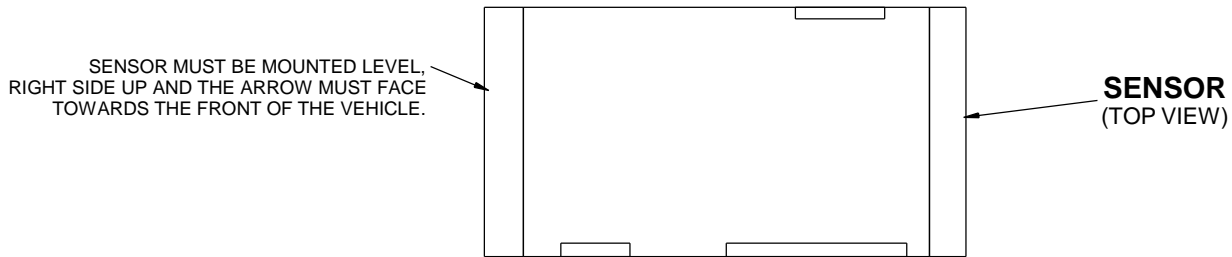



# Automatic Panel & Sensor Wiring Description

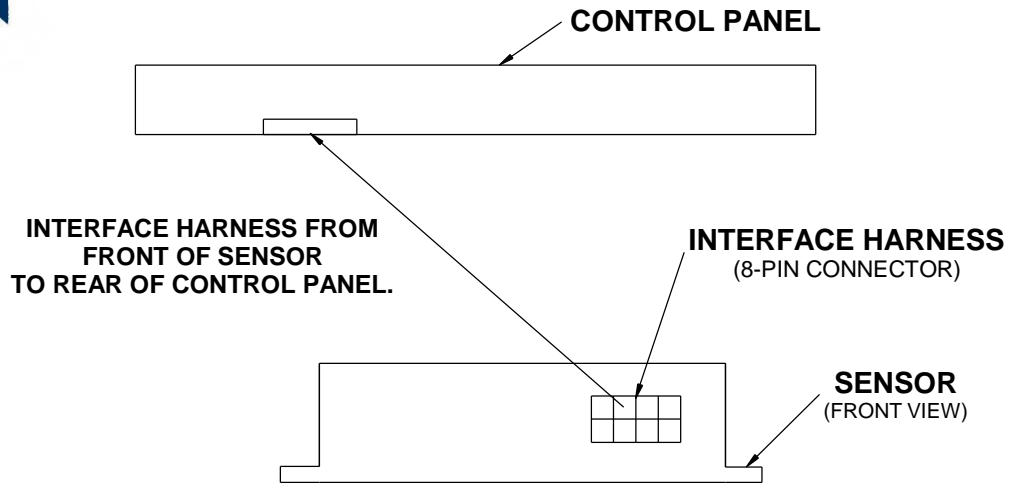

- 1 = EMPTY
- 2 = RED > BATTERY
- 3 = BLACK > GROUND
- 4 = EMPTY
- 5 = ORANGE > LEAVE OPEN\*\*
- 6 = YELLOW > IGNITION SWITCH

\*\*ORANGE WIRE IS AIR DUMP FEATURE, INSTALL IF EQUIPPED WITH 300/301 HARNESS ONLY.

- 7 = EMPTY
- 8 = EMPTY
- 9 = TAN > LEFT FRONT LIMIT SWITCH
- 10 = GREEN/WHITE > LEFT FRONT TOP SOLENOID
- 11 = GREEN > LEFT FRONT BOTTOM SOLENOID
- 12 = WHITE > LEFT REAR LIMIT SWITCH
- 13 = GREY/WHITE > LEFT REAR TOP SOLENOID
- 14 = GREY > LEFT REAR BOTTOM SOLENOID
- 15 = WHITE/BLACK > RIGHT REAR LIMIT SWITCH
- 16 = BROWN/WHITE > RIGHT REAR TOP SOLENOID
- 17 = BROWN > RIGHT REAR BOTTOM SOLENOID
- 18 = PURPLE > RIGHT FRONT LIMIT SWITCH
- 19 = BLUE/WHITE > RIGHT FRONT TOP SOLENOID
- 20 = BLUE > RIGHT FRONT BOTTOM SOLENOID

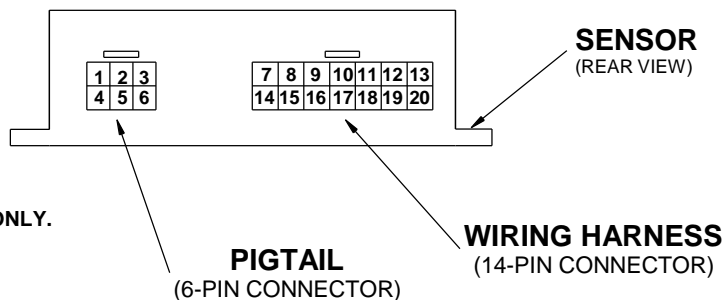

PIGTAIL GOES TO VARIOUS LOCATIONS

WIRING HARNESS IS THE MAIN HARNESS THAT GOES TO EACH PUMP & CYLINDER LIMIT SWITCH.