 




HIMALAYA


f l i p c a r d s d i s p l a y
a s s e m b l i n g i n s t r u c t i o n s

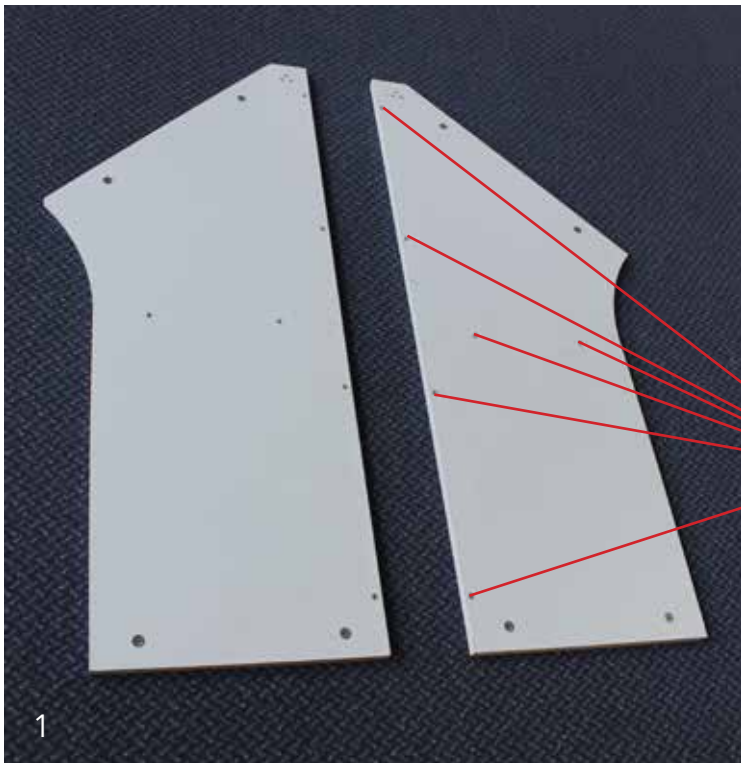




1. Put the two sides of the display on a **flat soft** surface in order to avoid damaging or scratching them.




2. Install the six included bolts (image 2) on each of the pieces as shown on images 3 and 4, using either manual or electrical screwdriver.

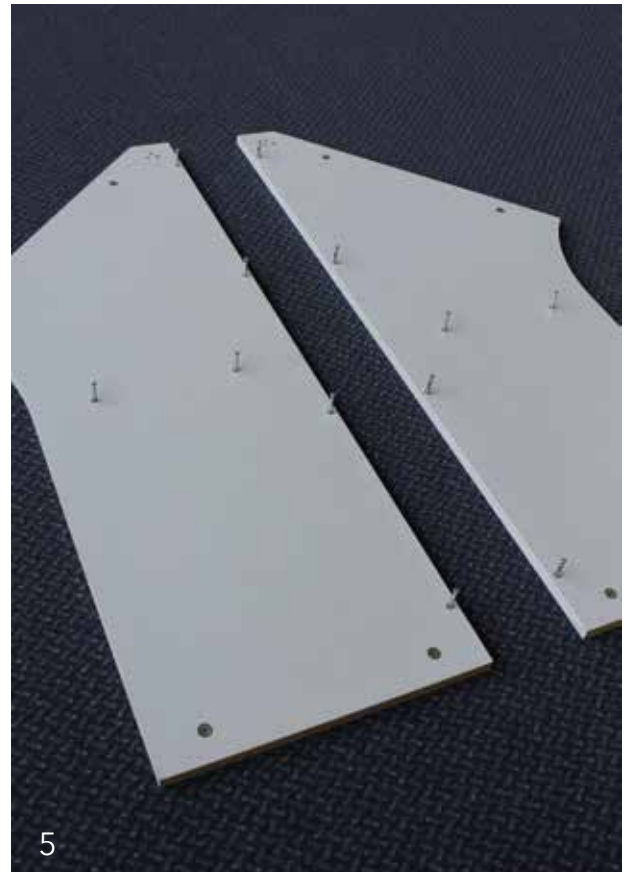

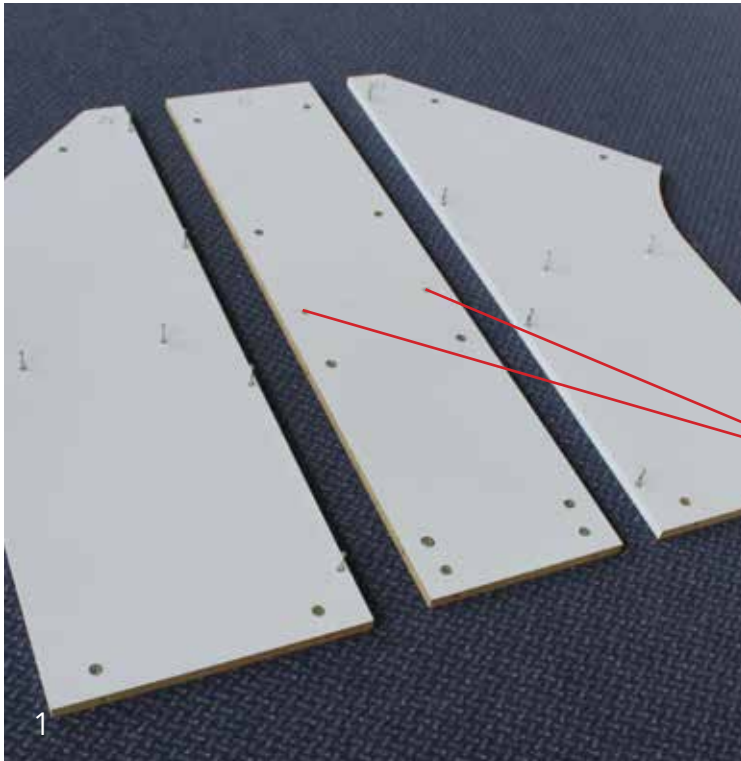

3. Follow the same process than in steps 1 and 2 with the back side of the display.


4. Install the central shelf and secure the bolts with a manual screwdriver as shown on images 4 and 5.

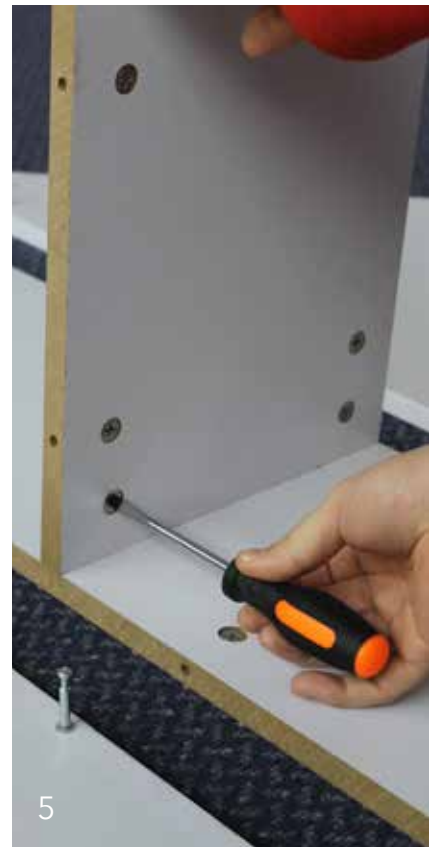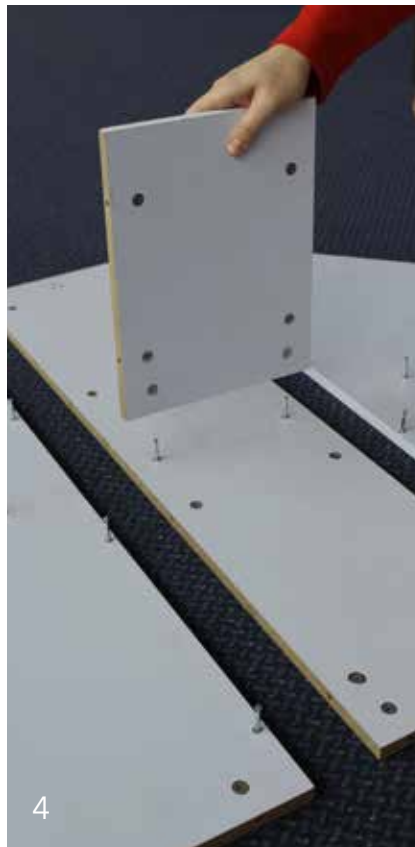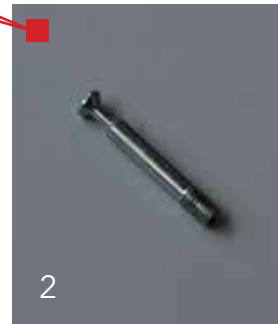




5. Install all three metal L-shape parts on the top part of the display.

6. Attach the top to the back of the display using the L-shape metal part as shown on image 4.

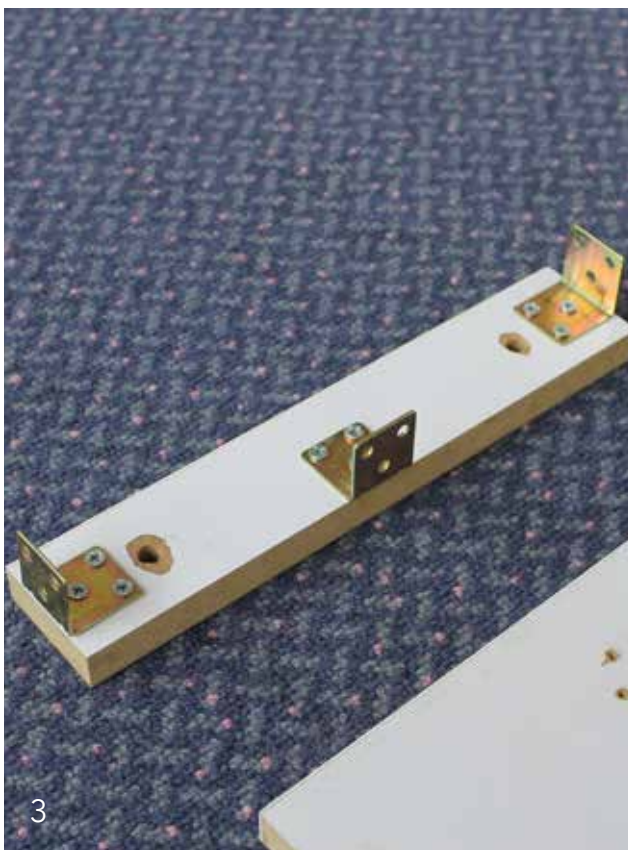

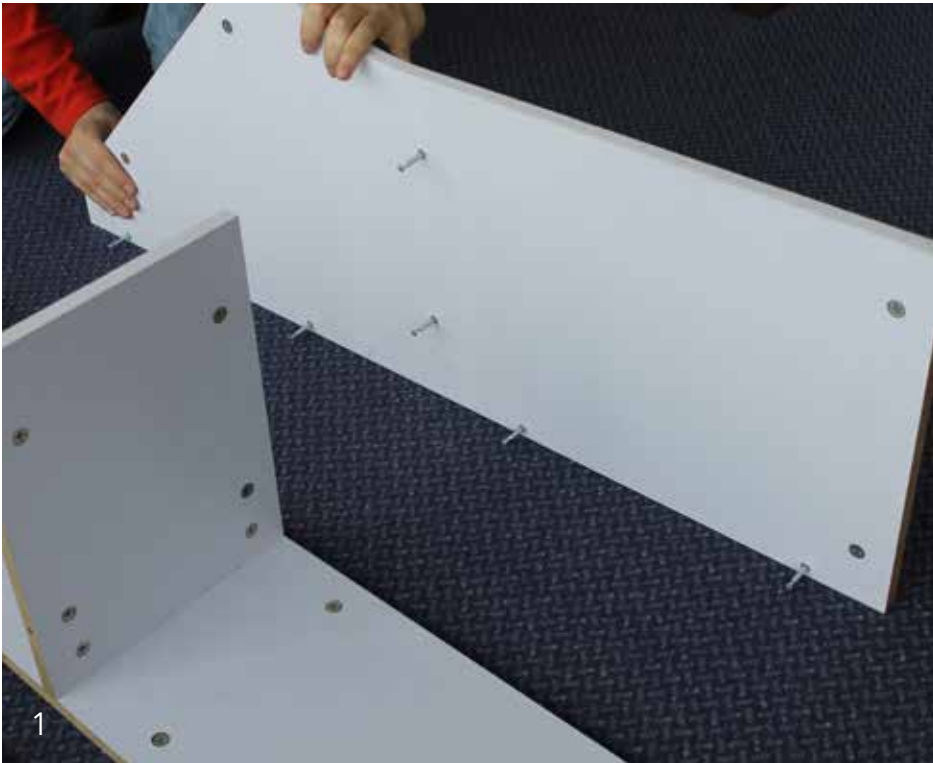

7. Attach the sides of the display to the back and central parts.


8. Secure all the bolts with a manual screwdriver. (6 bolts per side)


9. Repeat step 7 and 8 for the other side of the display.

10. Use either an electric or a manual screwdriver to attach the top part to the sides of the display.



11. Install the graphics structure on the top of the display and secure it with the provided nuts.

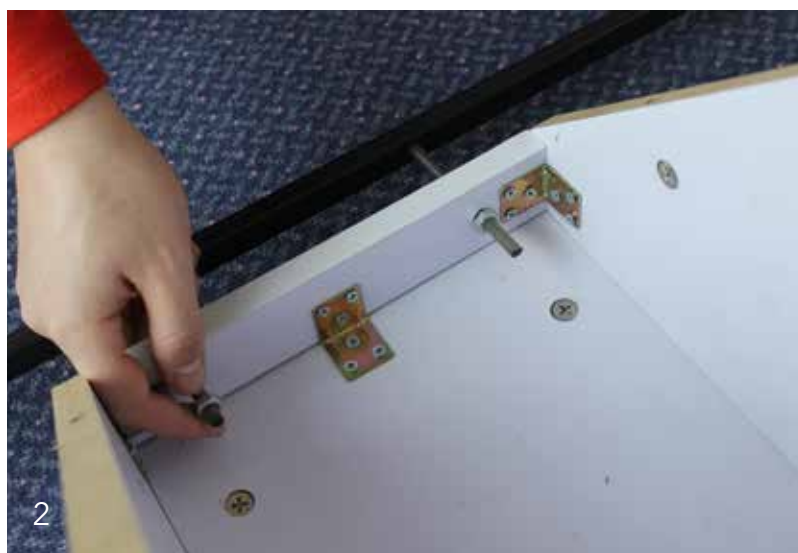

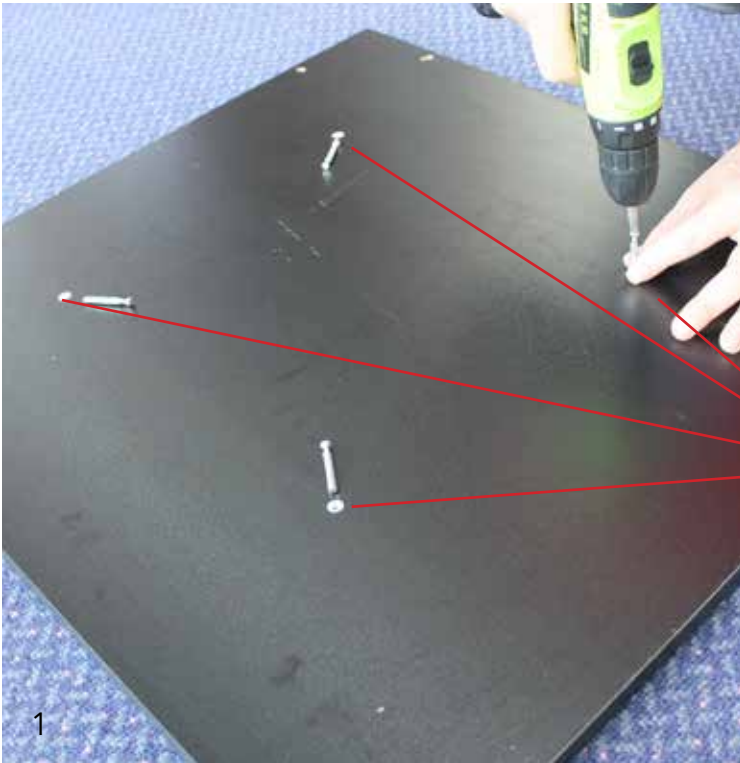

12. Install the bolts on the top table. (Black part with square corners)

13. Install the top table on the top of the display.

14. Secure all 4 bolts using a manual screwdriver.





15. Install the bolts on the base of the display. (Black part with round corners)

WARNING: Himalaya Carpets USA strongly recommends two people to perform the next step of the process.

16. Install the display on the base.

17. Secure all 6 bolts on the base using a manual screwdriver.






18. Install the flip cards structure on the table top of the display using all 8 bolts with nuts supplied.


NOTE: the long pins must to be at the top of the structure.

19. Secure them using either a manual or an electric screwdriver.

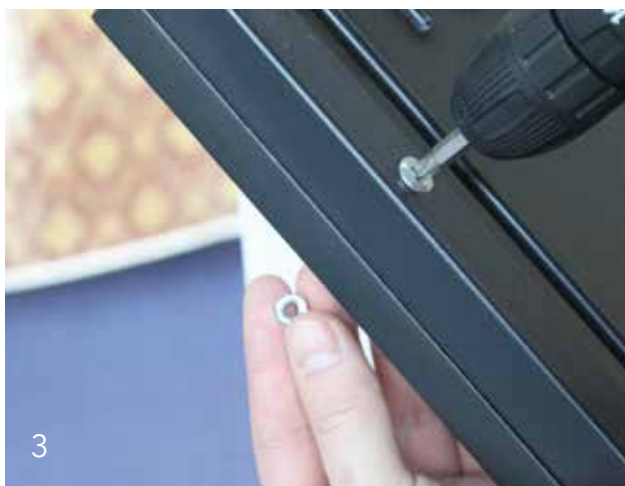

20. Install both side plates of the display.

WARNING: This is a heavy part. Handle with care.

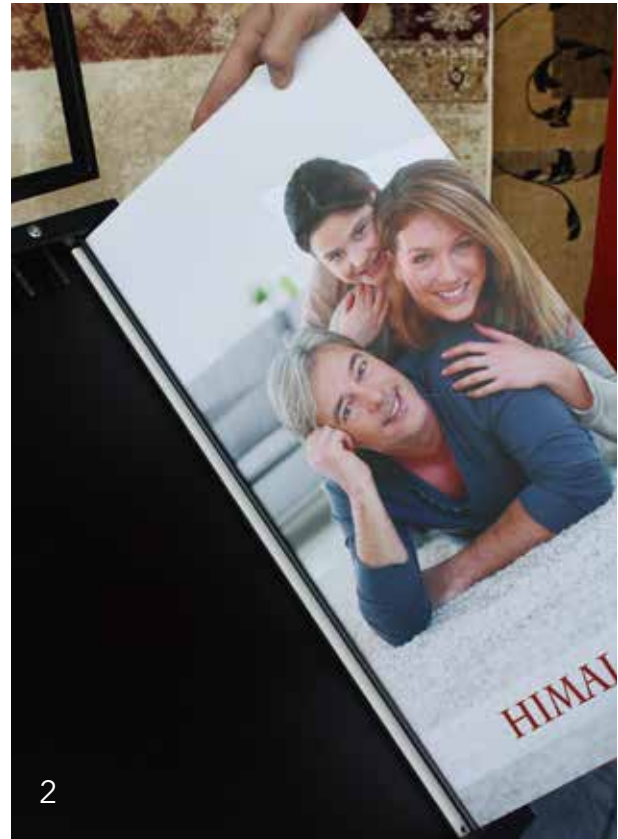



21. Install the flip cards on the display. First insert the top pin, then the bottom pin.


NOTE. The flip cards follow a specific order, please install them following the order of the numbers on the boards.





1

22. Install the graphic backboard on the top structure sliding it to the bottom of it.

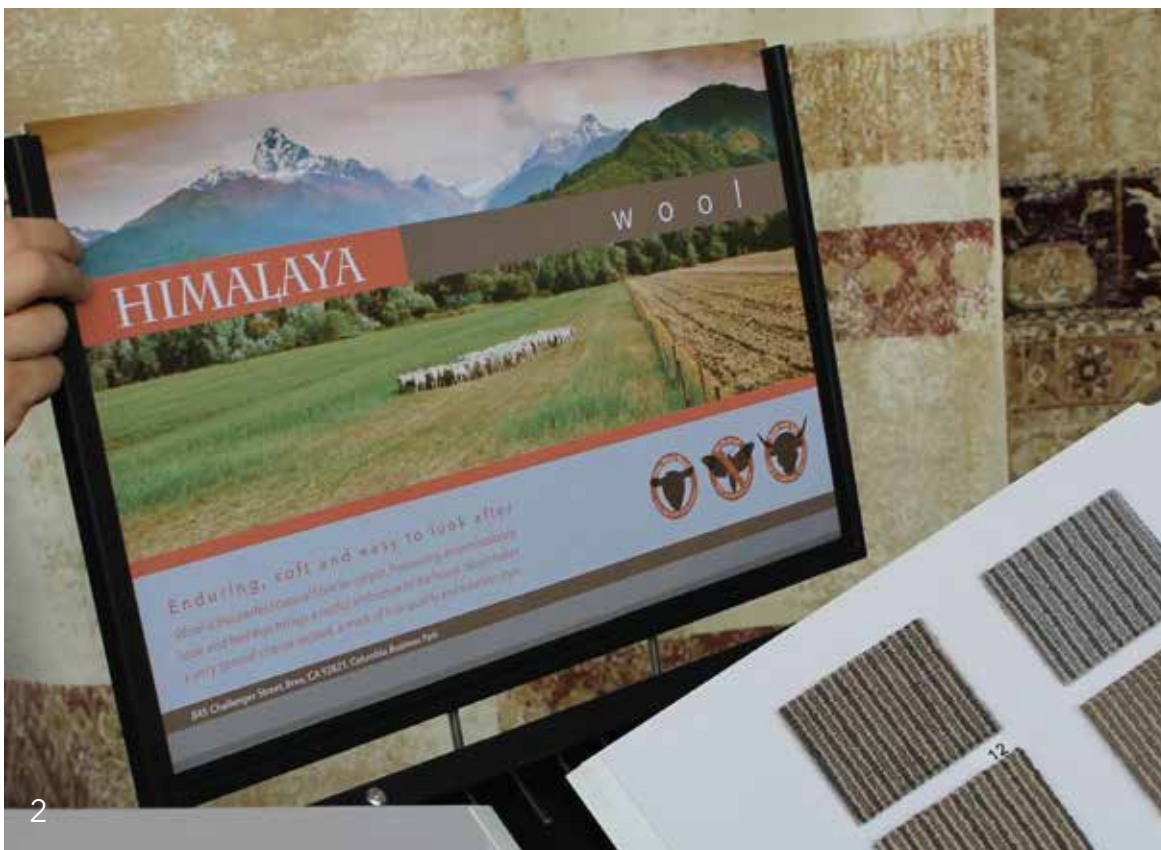

2