

## HOW TO REPLACE FRONT BEARING IN BC 3 & 5:

Remove 3 cover bolts



Pull off cover  
(you may want to  
put other  
hand in  
drum door  
to push  
up on  
drum)



Bearing is inside cover:

Put upside down between 2 2x4's



Use a wood or non metal handle that fits in bearing cover then gently tap out old bearing:



Bearing removed:



Put new bearing into holder and reattached. Grease with High temperature FOOD GRADE GREASE ONLY. Every month apply some grease to front bearing. Back bearing only needs greased every couple months unless using roaster daily.

