



WINGS AEROSPACE, LLC

P-3 REPAIR CAPABILITIES LIST

PARTNO	NSN	ITEM_NAME
60030	4820-01-191-4184	CYLINDER, MLG UPLOCK RELEASE
105010	6610-00-116-4020	INDICATOR
415509	4320-01-044-0522	MOTORPUMP, HYD
607618	4320-00-887-1898	MOTORPUMP ASSY, A/C HYD
607713	3020-00-832-2153	PUMP, HYDRAULIC
14200000	4920-00-169-1698	INTERROGATOR TEST SET
22253742	1650-01-334-3030	SERVOVALVE ASSEMBLY
0009-0112-1	3010-01-437-8146	ACTUATOR, WING FLAP
0503101-1	1680-00-887-1967	REGULATOR, CABLE TENSION
0503102-1	1680-00-887-1968	REGULATOR, CABLE TENSION
10067174-102	5841-01-111-5938	RADAR MODULATOR
102210-14-1	1660-01-067-0390	CONTROLLER, CAB PRES
102210-14-2	1660-01-159-9078	CONTROLLER, CAB PRES
102210-14-2A	1660-01-159-9078	CONTROLLER, CAB PRES
102210-16-1	1660-01-311-9984	CONTROLLER, CAB PRES
102210-9	1660-00-887-6728	CONTROLLER VALVE
102210-9 Series 2	1660-00-887-6728	CONTROLLER, CAB PRES
102210-9 Series 4	1660-00-887-6728	CONTROLLER, CAB PRES
102210-9A	1660-00-887-6728	CONTROLLER, CAB PRES
102226-3	1660-00-887-6729	VALVE, OUTFLOW
106040-3	1660-00-625-6195	REGULATOR, VENTURI-TYPE AIR FLOW
106040-4-1	1660-00-084-6707	REGULATOR, VENTURI-TYPE AIR FLOW
106462-1	1660-00-887-1914	VALVE, WING ANTI ICING
106462-3-1	4810-00-884-7571	VALVE, WING ANTI ICING
108342-2	2995-00-996-2333	VALVE, STARTER CTRL
108342-345-1	2995-00-996-2334	VALVE, STARTER CTRL
119415-4	5895-01-272-8047	RECEIVER TRANSMITTER
130R1903-4	4310-00-066-6168	COMPRESSOR PACKAGE ASSY
130R1903-5	4310-00-547-2747	COMPRESSOR PACKAGE ASSY
133258-2-1	1660-00-757-7908	X-DUCER, PRESS GAUGE
133258-3-1	6695-01-342-6134	X-DUCER, PRESS GAUGE
15720-5	1630-00-887-1916	VALVE, BRAKE
15868-1A	6615-00-887-6721	RATE OF TURN CONTROL
15885-1B	6615-00-986-8995	VERTICAL GYRO
15885-1C	6615-00-182-7698	VERTICAL GYRO
1616-5	1650-00-887-1917	ACTUATING CYLINDER, MLG DOOD
1616-7	1650-00-887-1917	ACTUATING CYLINDER, MLG DOOD
162B3		INDICATOR
179250-0003	5865-01-451-2868	COUNTERMEASURES DISPENSER SWITCH
203250-1	1660-00-887-4282	COOLING TURBINES
203250-2	1660-00-887-4283	COOLING TURBINES
204770-1-1	1660-00-909-9594	COOLING TURBINES
204770-2-1	1660-00-909-9595	COOLING TURBINES
204790-1-1	4310-00-909-5591	COMPRESSORS, TURBINE DRIVEN
204790-2-1	4310-01-177-9505	COMPRESSORS, TURBINE DRIVEN
206400-2-1	4310-00-143-9222	COMPRESSOR, ENG DRVN



WINGS AEROSPACE, LLC

P-3 REPAIR CAPABILITIES LIST

PARTNO	NSN	ITEM_NAME
206400-2-2	4310-00-149-7845	COMPRESSOR, ENG DRVN
206400-3-1	4310-00-567-3136	COMPRESSOR, ENG DRVN
206400-3-1B	4310-01-462-3916	COMPRESSOR, ENG DRVN
206400-6-1	4310-21-879-7180	COMPRESSOR, ENG DRVN
206400-7-1	4310-01-296-0634	COMPRESSOR, ENG DRVN
206400-7-1A	4310-01-296-0634	COMPRESSOR, ENG DRVN
206400-7-2	4310-01-296-0634	COMPRESSOR, ENG DRVN
206449-6	4820-01-144-4063	SURGE BLEED VALVE
206449-7	4820-01-322-7052	SURGE BLEED VALVE
206623-10	4310-01-434-1995	ASSY, COMP PRE-SWIRL
206623-8	4310-01-431-0665	ASSY, COMP PRE-SWIRL
2210191-1	4310-01-319-5804	ASSY, COMP DISCONNECT
2215790-2-1	4310-01-477-7389	AIR FLOW MULTIPLIER
25101A10C2C1	6620-00-717-1900	INDICATOR
27500-1	4920-00-799-5023	AUTOPILOT LOAD SENSOR
31400-1	6615-00-566-0331	AUTOPILOT LOAD SENSOR
3-1864-4-2	1680-00-866-7184	VALVE, NEEDLE CONTROL
37200-301	1650-00-887-4278	VALVE, WING FLAP HYD CONTROL
383074-1-1		STARTER, AIR TURBINE
383074-1-5		STARTER, AIR TURBINE
383076-1-1	2995-00-020-6111	STARTER, AIR TURBINE
383076-1-5		STARTER, AIR TURBINE
383650-1-1	2995-00-045-3347	STARTER, AIR TURBINE
383650-1-2	2995-00-045-3347	STARTER, AIR TURBINE
383650-2	2995-01-462-4613	STARTER, AIR TURBINE
383650-3	2995-01-534-2540	STARTER, AIR TURBINE
383652-1-1	2995-00-111-3653	STARTER, AIR TURBINE
383652-1-2		STARTER, AIR TURBINE
392200-11-1	4810-00-106-7401	VALVE, PRESSURE REGULATING
392200-12-1		VALVE, PRESSURE REGULATING
392556-1-1	1660-00-903-0836	VALVE, FLUID REGULATING
393007-07869	6680-00-815-7282	FUEL QTY INDICATOR
393007-07870	6680-00-815-7285	FUEL QTY INDICATOR
41D110	4810-00-822-3052	VALVE, SHUTOFF MOTOR OPERATED
41D110-1	4810-00-943-5223	VALVE, SHUTOFF MOTOR OPERATED
41D230	2995-00-822-3053	VALVE, SHUTOFF
4217-543000	1650-00-130-6961	MOTOR, DIRECT CURRENT
4562-5A7-1	6610-00-561-9375	TRANSMITTER. DUAL POSITION
4564-5A6-1	6610-00-887-9308	TRANSMITTER ASSY. SINGLE POS
500702-3613	4140-00-241-0065	FAN ASSEMBLY, VANE AXIAL
52730-2	1650-01-245-5935	VALVE, FLAP ASYMMETRY
583R496H01	1270-01-060-1083	WAVEGUIDE DUPLEXER
607618-1	4320-00-124-1588	MOTORPUMP ASSY, A/C HYD
6-256-251	2915-00-822-3059	VALVE, LEVEL SENSING PILOT
669424-7	3040-00-566-0336	ACTUATOR, WING FLAP
671CPX10-051		ALTIMETER
681508-1	5945-01-224-0481	SOLENOID ASSY



WINGS AEROSPACE, LLC

P-3 REPAIR CAPABILITIES LIST

PARTNO	NSN	ITEM_NAME
681509-2	1660-01-004-5583	ASSY, COMP DISCONNECT
801471-9	1650-00-804-3608	ACTUATOR ASSEMBLY, MLG
802275-1	1650-00-887-4299	ACTUATING CYLINDER, NLG
802406-2		RATE INTEGRATING GYRO, LC22A
832071-3	1560-00-806-6288	DAMPER ASSEMBLY, CO-PILOTS COLUMN
8AW43AAA221		AMMETER AC
8AW61-LAL3		AC FAULT IND
8DJ64GAX1	6620-00-021-2239	INDICATOR, FUEL FLOW
8DJ64-GAX1		FUEL FLOW INDICATOR
8DJ81CAA2	6620-00-969-3972	INDICATOR
8DJ81CAN1	6620-00-800-2601	INDICATOR, TACH
8DJ81-CAN1		TACH INDICATOR
8DJ81-CAN2		INDICATOR
8TJ64GAL	6620-00-020-3211	XMIT, FUEL FLOW
8TJ64GAL1	6620-00-020-3211	FUEL FLOW TRANSMITTER
8TJ88GAH1	6130-00-906-9917	FLOWMETER, FUEL
8TJ88-GAH1		FUEL FLOWMETER
8TJ88GAH3	6130-01-224-4291	FLOWMETER, FUEL
901559-113	1650-00-962-1755	BOOSTER ASSEMBLY, AILERON
901561-113	1650-00-962-1558	BOOSTER ASSEMBLY, ELEVATOR
901572-3	1650-00-821-4048	CYLINDER ASSY, AILERON BOOSTER ACTU
901574-3	1650-00-821-4051	CYLINDER ASSY, ELEV BOOSTER ACTU
901711-1	1680-00-887-4392	ACTUATOR ASSY, DEMAGNETIZED
901711-109	1680-00-887-4392	ACTUATOR ASSY, L/H ELEV TRIM TAB
901711-111	1680-00-887-4392	ACTUATOR ASSY, R/H ELEV TRIM TAB
901711-113	1680-00-887-4392	ACTUATOR ASSY, RUDDER TRIM TAB
901711-119	1680-00-966-9485	ACTUATOR ASSY, UNIVERSAL TRIM
901711-121	1680-00-887-4392	ACTUATOR ASSY, L/H AILERON TRIM
901711-123	1680-00-887-4392	ACTUATOR ASSY, R/H AILERON TRIM
901711-3	1680-00-887-4392	ACTUATOR ASSY, DEMAGNETIZED
901711-5	1680-00-887-4392	ACTUATOR ASSY, DEMAGNETIZED
902607-1	1650-00-887-4305	CYLINDER ASSEMBLY, UPLOCK, BOMB BAY DOORS
908914-7	1560-00-806-5595	DAMPER ASSEMBLY, UPPER RUDDER VISCOUS
921874-1	1560-00-806-5594	DAMPER ASSEMBLY, LOWER RUDDER VISCOUS
931998-101	1560-00-073-6983	DAMPER ASSEMBLY, HORIZONTAL STABILIZER ELEVATOR
932579-101		INDICATOR
933137-101	1680-21-894-1917	ACTUATOR ASSY, DEMAGNETIZED
933137-103	1680-21-894-1918	ACTUATOR ASSY, DEMAGNETIZED
933137-105	1680-01-005-4807	ACTUATOR ASSY, DEMAGNETIZED
933137-107	1680-00-760-0654	ACTUATOR ASSY, DEMAGNETIZED
933137-109	1680-21-894-1919	ACTUATOR ASSY, DEMAGNETIZED
933137-111	1680-21-894-1920	ACTUATOR ASSY, DEMAGNETIZED
938000-101		HYD ASSY, RUDDER
938000-107	1650-00-004-4791	HYD ASSY, RUDDER
938000-109	1650-00-003-8887	HYD ASSY, RUDDER
938000-111	1650-00-148-7564	HYD ASSY, RUDDER



WINGS AEROSPACE, LLC

P-3 REPAIR CAPABILITIES LIST

PARTNO	NSN	ITEM_NAME
938001-101	1650-00-929-8870	BOOSTER ASSY, RUDDER
938001-103		BOOSTER ASSY, RUDDER
938001-105	1650-00-021-4292	BOOSTER ASSY, RUDDER
938001-109	1650-00-449-1909	BOOSTER ASSY, RUDDER
938001-111	1650-00-148-7563	BOOSTER ASSY, RUDDER
938002-101		HYD ASSY, AILERON
938002-107	1650-00-004-9788	HYD ASSY, AILERON
938002-109	1650-00-004-9789	HYD ASSY, AILERON
938002-111	1650-00-148-7567	HYD ASSY, AILERON
938003-101	1650-00-929-8866	BOOSTER ASSY, AILERON
938003-103		BOOSTER ASSY, AILERON
938003-105	1650-00-021-4294	BOOSTER ASSY, AILERON
938003-109	1650-00-449-1922	BOOSTER ASSY, AILERON
938003-111	1650-00-148-7566	BOOSTER ASSY, AILERON
938004-101		HYD ASSY, ELEVATOR
938004-107	1650-00-004-9757	HYD ASSY, ELEVATOR
938004-109	1650-00-004-9758	HYD ASSY, ELEVATOR
938004-111	1650-00-148-7570	HYD ASSY, ELEVATOR
938005-101	1650-00-929-8871	BOOST ASSY, ELEVATOR
938005-103		BOOST ASSY, ELEVATOR
938005-105	1650-00-021-4291	BOOST ASSY, ELEVATOR
938005-111	1650-00-148-7568	BOOST ASSY, ELEVATOR
953183-1	5985-01-187-9140	ELECTRONIC SWITCH CIRCUIT CARD ASSEMBLY
979369-103	3040-01-397-6147	ACTUATOR, WIND FLAP
A13A	6645-00-403-4947	AIRCRAFT CLOCK
A13A2	6645-00-150-6526	AIRCRAFT ELAPSED TIME CLOCK
A26877-10-001	6685-00-887-9302	INDICATOR
A2850-5	6615-00-869-0825	RATE GYRO XMITTER
A-9381	6105-00-858-0383	MOTOR, DIRECT CURRENT
A-9381M1	1650-00-130-6961	MOTOR, DIRECT CURRENT
AAU21A	6610-00-405-6461	ALTIMETER
AAU24A		ALTIMETER
AN3203V30		VOLTMETER
AN5766T4		STANDBY COMPASS
ATS100-169		STARTER, AIR TURBINE
ATS100-346	2995-00-470-8080	STARTER, AIR TURBINE
AV16D1121B	2915-00-818-7798	VALVE, MOTOR OPER. SHUT OFF
AV16E1131B	2915-00-887-1904	VALVE, MOTOR OPER. SHUT OFF
B2-96800-2		ASSY, CONTROL VALVE
B2-96800-3		ASSY, CONTROL VALVE
B6200-2		ASSY, CONTROL VALVE
BYLB7520	4810-00-566-0332	ACTUATOR & VALVE ASSY
C2-96000-8	1680-00-070-4812	ACTUATOR
C2-96100-8	1680-00-070-5993	WINDOW UNIT L/H
C2-96300-8	1680-00-070-5994	WINDOW UNIT R/H
D6100-4		WINDOW UNIT L/H
D6100-5		WINDOW UNIT L/H



WINGS AEROSPACE, LLC

P-3 REPAIR CAPABILITIES LIST

PARTNO	NSN	ITEM_NAME
D6100-6		WINDOW UNIT L/H
D6100-7	1680-00-070-5993	WINDOW UNIT L/H
D-6100-7	1680-00-070-5993	WINDOW UNIT
D6300-5		WINDOW UNIT R/H
D6300-6	1680-00-325-1266	WINDOW UNIT R/H
D6300-7	1680-00-070-5994	WINDOW UNIT R/H
D-6300-7	1680-00-070-5994	WINDOW UNIT
DG1032AA02	5841-01-111-5938	RADAR MODULATOR (PULSED RF SOURCE)
DL1326M39-4	1680-00-877-6385	LINEAR ACTUATOR, ELEC
DL1326M39-4A	1680-00-877-6385	LINEAR ACTUATOR, ELEC
DL1326M39-5	1680-01-181-3218	LINEAR ACTUATOR, ELEC
DL1326M40-3	1680-00-877-6388	ACTUATOR
DL1326M40-4	1680-01-181-1374	LINEAR ACTUATOR, ELEC
DYLZ5858-1	1660-00-818-7701	VALVE, SHUTOFF
EA-1045-037-1A	1650-00-786-7710	MOTORPUMP, HYD
EA-1045-037-2	4320-00-072-2291	MOTORPUMP, HYD
EA-1045-037-2B	4320-00-949-6842	MOTORPUMP, HYD
EA-1045-039-2A	4320-00-856-9396	MOTORPUMP, HYD
EA1068A2313		XMIT, ENGINE OIL
EA1068A2352	6680-00-319-1723	XMIT, QTY
EA1320-077	4320-00-887-1898	MOTORPUMP, HYD
EA1320-077-1	4320-00-124-1588	MOTORPUMP, HYD
EA-1320-422-1	4320-00-949-6840	MOTORPUMP, HYD
EA-1320-442	4320-00-226-5642	MOTORPUMP, HYD
EA148ANH95H	6680-00-319-1711	HYD. QTY INDICATOR
M3500-5		INDICATOR
MB1		ALTIMETER
MF10-3911-25Z		HYDRAULIC MOTOR ASSEMBLY
MF10-3911-25ZE		HYDRAULIC MOTOR ASSEMBLY
MF19-3911-25ZE		HYDRAULIC MOTOR ASSEMBLY
MF19-3911-30Z		HYDRAULIC MOTOR ASSEMBLY
MF19-3911-30ZE		HYDRAULIC MOTOR ASSEMBLY
MF45-3911-20Z		HYDRAULIC MOTOR ASSEMBLY
MF69-3906-30BCD-4	1650-00-887-1903	MOTOR ASSY, HYD
MF8-3911-25Z		HYDRAULIC MOTOR ASSEMBLY
MF9-3911-20S390		HYDRAULIC MOTOR ASSEMBLY
MF9-3911-25Z		HYDRAULIC MOTOR ASSEMBLY
MF9-3911-25ZG		HYDRAULIC MOTOR ASSEMBLY
MF9-3911-30Z	1650-00-508-7109	HYDRAULIC MOTOR ASSEMBLY
MF9-3911-30ZE	4320-01-224-9869	HYDRAULIC MOTOR ASSEMBLY
MF9-3911-30Z-S295		HYDRAULIC MOTOR ASSEMBLY
MF9-3911-30Z-S481	1650-01-815-9387	HYDRAULIC MOTOR ASSEMBLY
MPEV1-060-1	4320-01-044-0522	MOTORPUMP, HYD
MS17983-2	6605-00-551-8187	COMPASS
MS25470-7	6685-00-882-8127	HYD PRESS IND
MS28008-1		AIR TEMP INDICATOR
MS28009-2		INDICATOR



WINGS AEROSPACE, LLC

P-3 REPAIR CAPABILITIES LIST

PARTNO	NSN	ITEM_NAME
MS28010-2	6620-00-557-0350	INDICATOR
MS28010-8	6620-00-935-1321	INDICATOR
MS28075-1	6610-00-473-5046	RATE OF CLIMB INDICATOR
R1596M5	1680-00-887-1911	ACTUATOR, OIL COOLER
SD607711		PUMP, HYDRAULIC
SD609802	4320-00-248-9078	PUMP, HYDRAULIC
SPL5568-3	3040-00-566-0336	WING FLAP ACTUATOR
SPL5568-5	3040-01-397-6147	ACTUATOR, WING FLAP
SPL5569-3	1680-00-887-1909	BRAKE, FLAP ACT
SPL5569-5		BRAKE, FLAP ACT
SPL5569-7	1680-01-253-9642	BRAKE, FLAP ACT
SPL5569-9	1680-01-382-5112	BRAKE, FLAP ACT
SR4J		INDICATOR
SR-4J	6685-00-887-6814	INDICATOR, POSITION
SR4W	6610-00-858-0615	INDICATOR
SR5E		INDICATOR
SRD-9B	6685-00-887-9303	INDICATOR, DUAL PRES
ST-104E	6685-01-334-3244	XMIT, PRES
ST105F	6685-00-887-1972	TRANSMITTER
ST-105F	6685-00-887-1972	XMIT, PRES
ST109C	6685-00-887-1971	CABIN TRANSMITTER
ST-109C	6685-00-887-1971	XMIT, CABIN PRES
ST-3G	6685-00-887-1970	XMIT, X-FEED PRES
TRU2AA		RATE GYRO TRANSMITTER