


AMERICAN ELECTRIC EQUIPMENT, INC.

P.O. BOX 710 BECKLEY, WV 25801 PHONE: 304-255-7438 FAX: 304-255-7448

030-5-25593-1 LOW VOLTAGE GROUND MONITOR Document A-8802 JULY 12, 2006

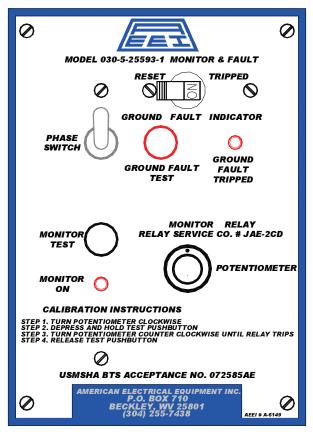

Features

- ✓ MSHA accepted for trailing cable use
- ✓ Harsh environment operation; no sensitive electronic components to fail
- ✓ Easy adjustment from front of unit
- ✓ Failsafe operation
- No terminating device required
- Phase reversal switch to prevent nuisance tripping
- Integral ground fault relay
- Test pushbuttons for ground fault and ground monitor functions
- ✓ Monitor trip indicating light
- ✓ Latched ground fault indication with light

Description

The AEEI 030-5 ground monitor is a pilot wire impedance type ground monitor. The MSHA BTS acceptance number allows its use in mining applications where trailing cables feed mobile equipment. It features an integral ground fault relay optimized for use on 15 A or 25 A resistance grounded systems.

Operation

Connect monitor and ground fault CT as shown on drawing.

When power is applied to monitor initially, adjustment is required. Follow instructions on monitor faceplate to calibrate monitor. The ground fault indicator must be set to the RESET position.

If the pilot-ground loop is intact the MONITOR light will be on.

<u>Faults</u>

There are two types of faults, both provided with a light and test pushbutton:

1. MONITOR ON

If the pilot-ground loop's impedance is greater than the trip value, the MONITOR ON light is off. It will come on when a good pilot-ground loop is established.

2. GROUND FAULT TRIPPED

The GROUND FAULT indicator will point toward tripped and the ground fault light will be on if a ground fault has occurred. It must be flipped to RESET for the monitor to pick back up.

Monitor Output Signal

The monitor is designed for use on circuit breakers with a 120 VAC UVR relay. The monitor output on terminals 5 and 6 is 120 VAC for normal operation and 0 VAC for a trip condition.

Undervoltage Protection

Contacts change state on loss of power, so the monitor can be used to provide undervoltage protection to a circuit.

Phase Reversal Switch

The PHASE SWITCH has the effect of reversing polarity on the monitor loop output. Polarity does not matter except in an environment of high induced pilot wire currents. If such currents exist, flipping the PHASE SWITCH and going to the opposite polarity may be of benefit in preventing accidental tripping of the monitor.

Testing

The MONITOR TEST and GROUND FAULT TEST pushbuttons can be used to test the monitor without disconnecting wires.

MONITOR TEST simulates a rise in pilot to ground loop resistance by inserting a test resistance in the pilot to ground loop.

GROUND FAULT TEST passes a test current of approximately 2.5 amps 4 times through the CT core to simulate a ground fault condition. This test will completely test the 030-5 ground fault circuit including all CT connections. This test does not check grounding resistor integrity.

ORDERING INFORMATION

MONITOR PART NUMBER: 030-5-25593-1

CT WITH 2" WINDOW PART NUMBER: A-2550

CT WITH 3" WINDOW PART NUMBER: A-3858

AMERICAN ELECTRIC EQUIPMENT P.O. BOX 710 BECKLEY, WV PHONE: 304-255-7438 FAX: 304-255-7448

