


DFT - Unit Maintenance

Honda™

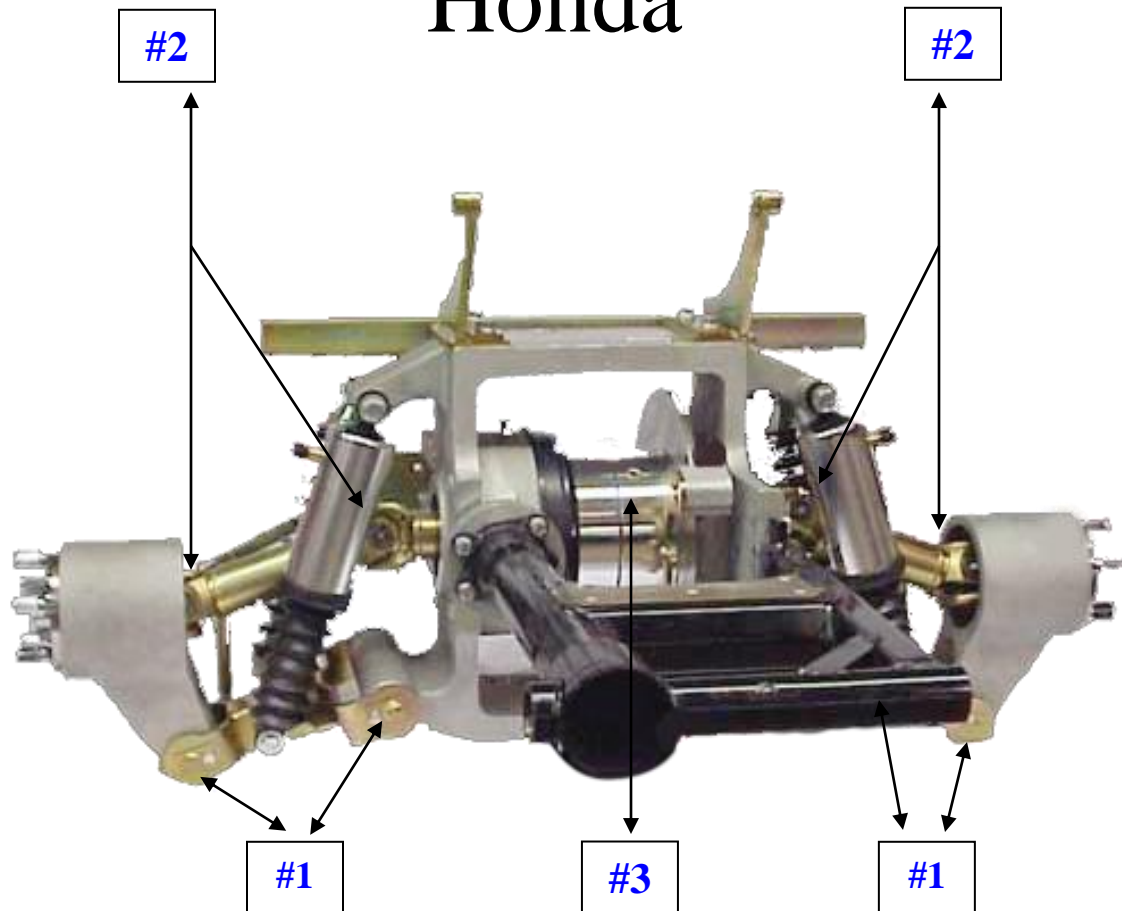

1 Grease the four zerk fittings on the lower control arms (ARROW #1) when engine oil is changed.

2 Grease the four zerk fittings on the universal joints (ARROW #2) when engine oils is changed.

3 Change oil in differential (ARROW #3) at 5000 – 7500 miles. On Honda units drain and refill the gear box also and refill with 4 oz. of 80 – 90 wt. gear lube. (Drain is located on the bottom of the gear box and fill is located on the rear of gear box).

4 Brake pads recommended for the Honda GL1500 units are EBC Kevlar pads Part Number FA69/3, Honda GL1800 units are Galfer Brake pads number FD207G1054, (Some Honda units used the H.D. pads and Caliper. Call us if you are unsure of the pads to use)



L.A.T. Enterprises, Inc.