 
 



Scanner user manual

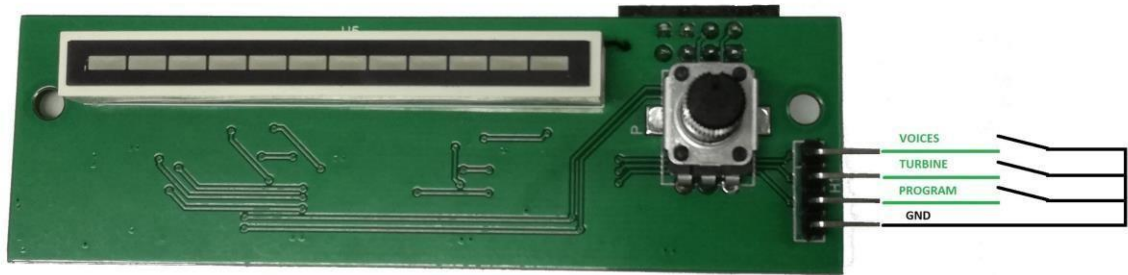

press turbine 1 time= on/off turbine
hold turbine 2 sec.= on/off scanner sound
press voice 1 to 10 times= play one of 10 voices
hold voice 2 sec.= on/off demo voices
press program= change light joke

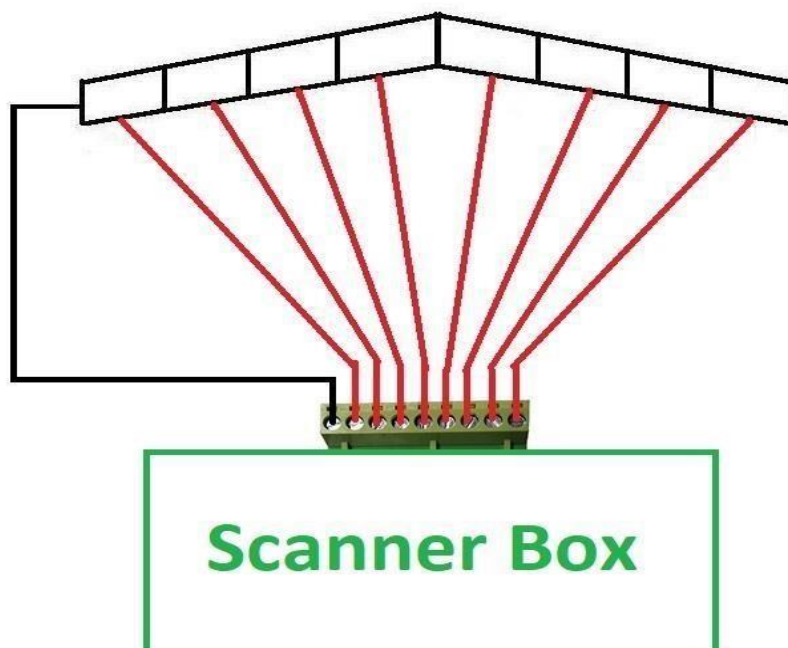

 SD-CARD content

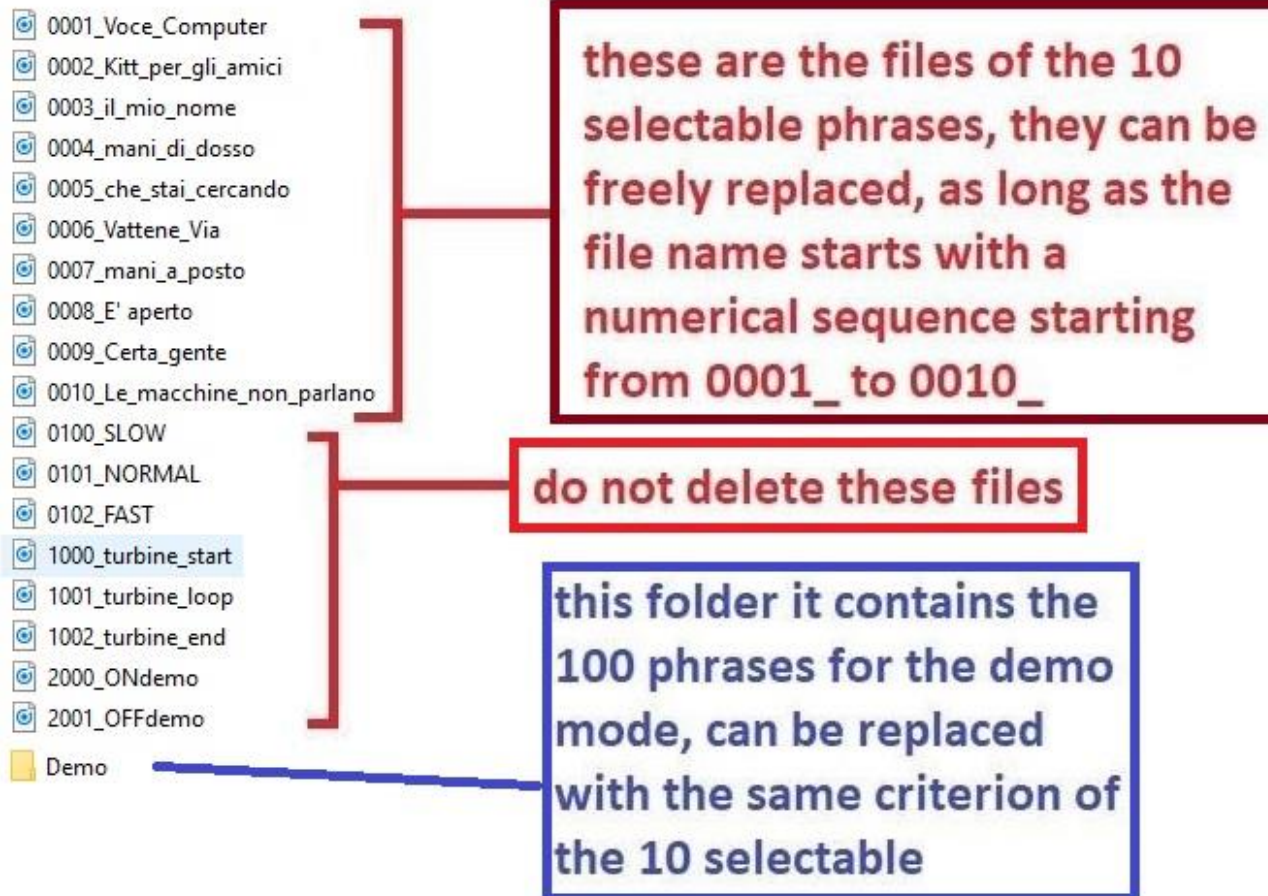

The correct procedure for replace the files on sd-card:

1. Copy all files in to a folder on your pc
2. Replace the files of phrases and demo
3. Format the sd-card
4. Copy all files of the folder to root of sd-card