



Request a Free Furniture ASHLEY® Tip Restraint: (800) 477 2222 ashleyfurniturehomestore.com/achorit

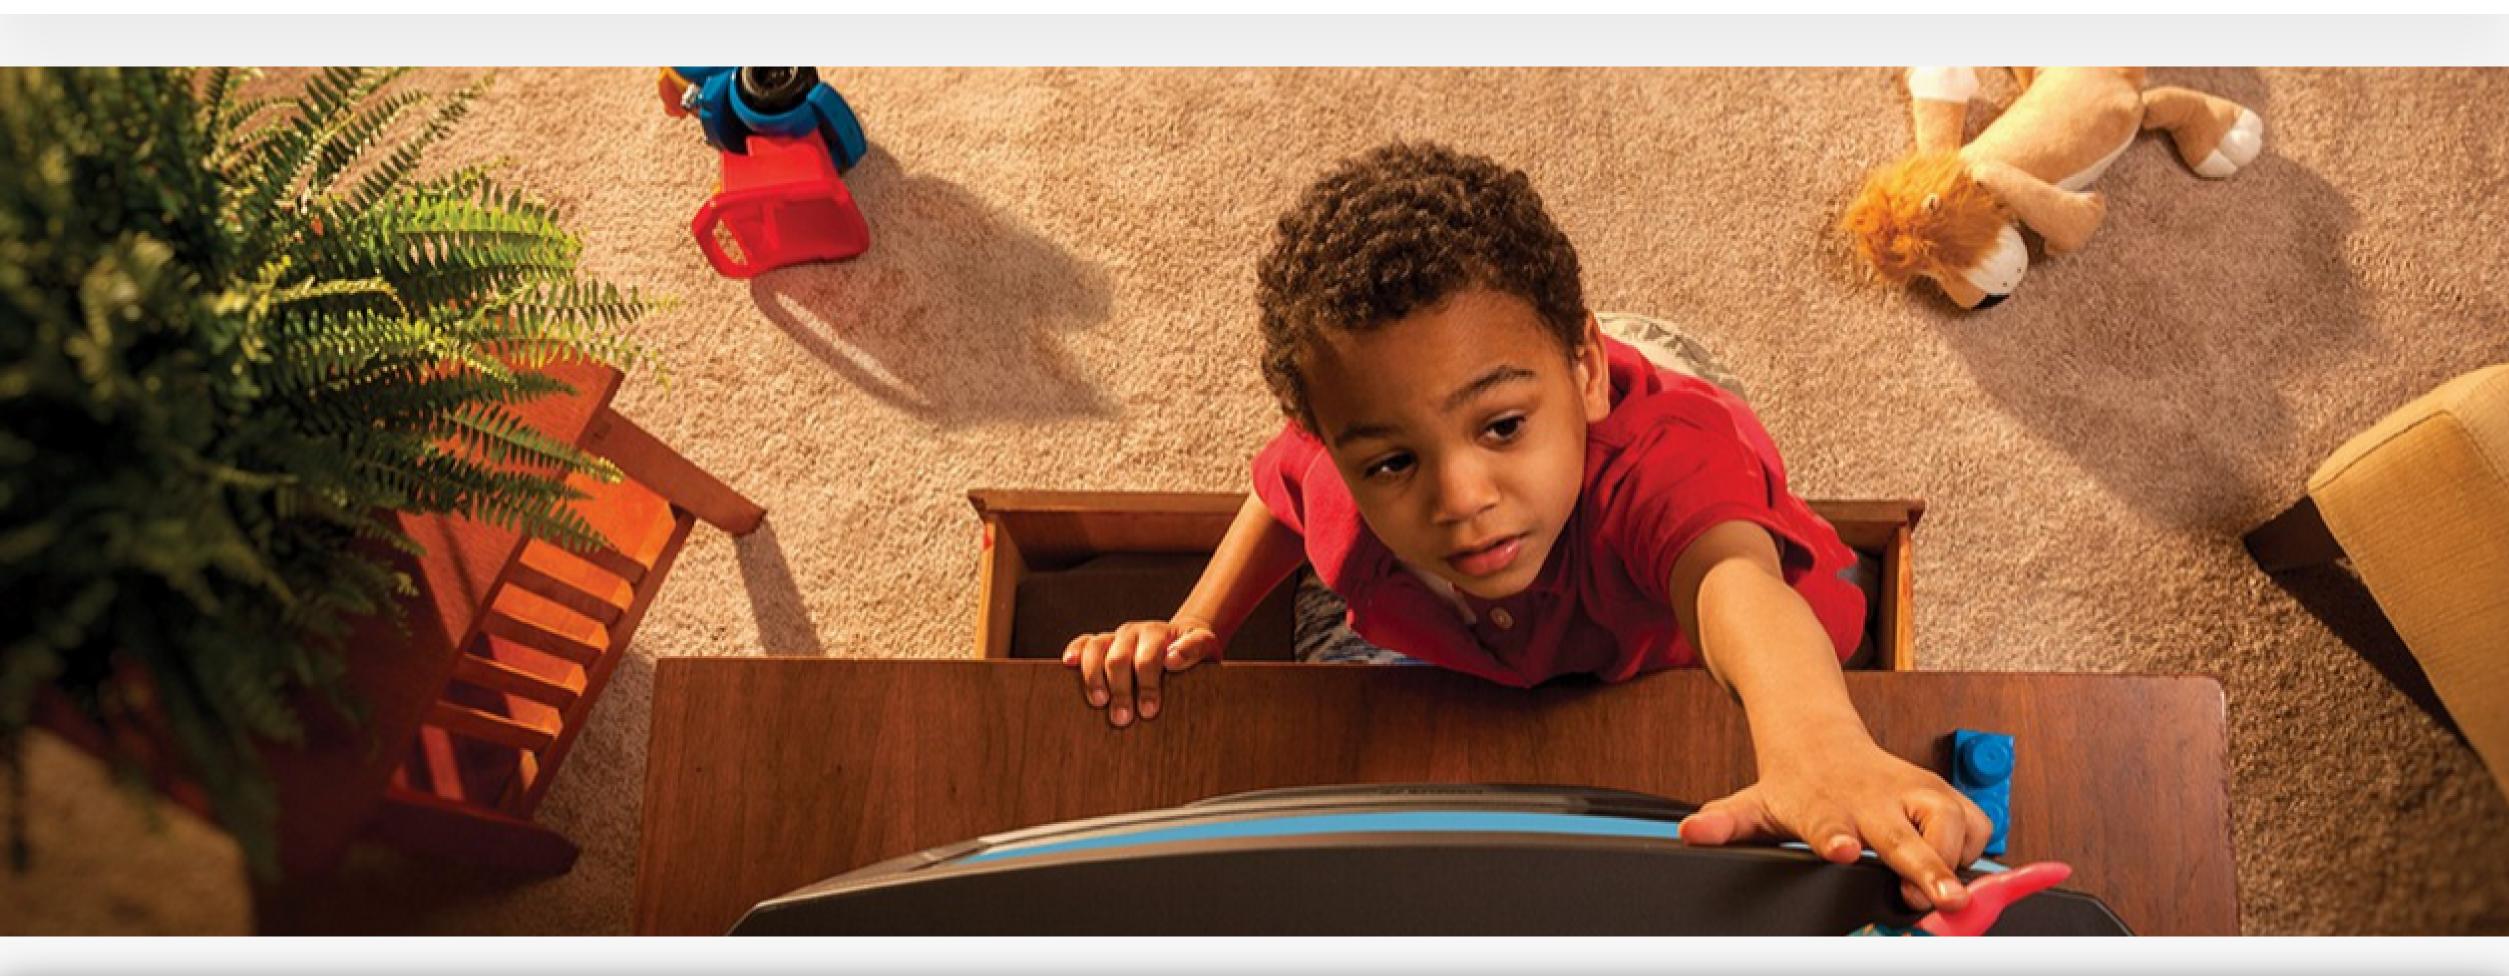

The threat is serious but the solution is simple



Easy to Secure Furniture

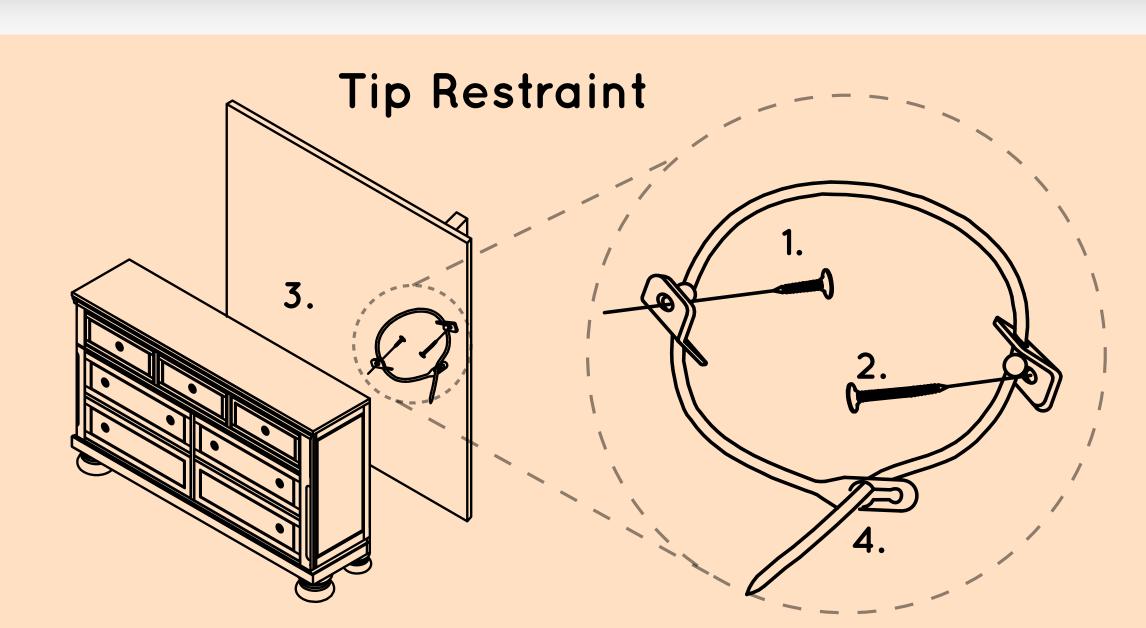

5 Easy Steps To Secure Furniture


- 1. Attach a bracket and screw to back of furniture
- 2. Attach other bracket 2" lower into wall and stud with screw
- 3. Place the furniture into position and align with brackets
- 4. Lace the zip tie through both brackets and eliminate any slack
- 5. Confirm that the strap is securely laced and locked


What can you do?

··· Anchor III.···

- 1. Always anchor TVs and furniture to prevent tipping.
- 2. Avoid keeping items such as toys and remotes in places where kids might be tempted to climb to reach them.
- 3. Unless designed to accommodate, never set TVs or other heavy objects on top of furniture.
- 4. Recycle unused TVs and if moving TVs to a new location, always anchor to the wall.



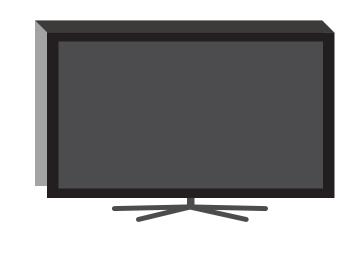

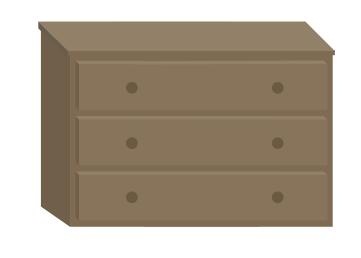

Chests