



## Clock setting:

- SIG input to GND
- Click SELECT Switch to select the value to modify, it will start to blink hours.
- Value+ to select the right value
- Press SELECT to change to minutes > second > save.
- Time will not blink anymore.

