INSTALLATION INSTRUCTIONS

HONEYCOMB SHADES

CORDLESS LIFT & LOCK

Thank you for your purchase. This shade has been custom built for you from the highest quality materials.

To avoid errors and save valuable time, please read these instructions before installing your new shade.



TOOLS YOU WILL NEED

- Pencil or Marker
- 2. Measuring Tape
- 3. Needlenose Pliers
- 4. Phillips Screwdriver
- 5. Carpenter's Level
- 6. Power Drill
- 7. Mounting Fasteners



Mounting Surface	Fastener		
Drywall, Plaster	Wall Anchors, Expansion Bolts (Not Provided)	Filt Comme	
Metal	Sheet Metal Screws (Not Provided)		
Wood	No. 6 Hex Head Screws (Provided)	(Constitution of the Constitution of the Const	

GETTING STARTED

All the required installation components are wrapped in your package along with these instructions. Check that the parts you have correspond to the parts shown below. <u>NOTE</u>: Some parts may vary depending upon your chosen mounting options.

PARTS





Extension Bracket (optional)



Spacer Blocks (optional)



Screws



 
STEP 1: MOUNTING THE BRACKETS

Installation brackets may be used for **INSIDE or OUTSIDE** mounts.

Mounting the brackets level is essential for proper operation of the shade.

Shim the brackets if necessary to achieve a level alignment.

The bracket requirements and placements are the same for inside and outside mounts. Refer to the following spacing diagram and bracket requirement chart.



Installation Bracket Requirement Chart

Shade Width	Brackets Required
12" to 31"	2
31-1/8" to 79"	3
79-1/8" to 84"	4

INSIDE MOUNTS:

For inside mounts the installation brackets will be screwed in place through the top hole of each bracket.


Inside Mount Depth Requirements

Minimum Depth	Fully Recessed
1"	2-1/2"

NOTE: Prior to mounting the brackets, <u>add any clearance depth required</u> to avoid obstructions such as window cranks or handles.

ATTACH THE BRACKETS:

Screw bracket through top hole to desired window sill location.

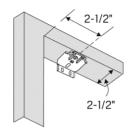

OUTSIDE MOUNTS:


For outside mounts the installation brackets will be screwed in place through the two back holes of each bracket. Refer to the minimum surface height chart below.

Outside Mount Surface Height Requirements

Minimum Height		
3/4"		

ATTACH THE BRACKETS:

Screw brackets through two back holes to desired location.

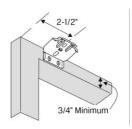

SPACER BLOCKS (optional):


- Spacer blocks will be attached to the end of each bracket.
- Ensure the screws are long enough to secure brackets to surface.
- Do not use more than three spacer bocks per bracket.
- If installing extension brackets, do not use spacer blocks.

EXTENSION BRACKETS (optional):

- Position the extension brackets to the desired wall location.
- The bracket tops must be aligned and level to one another.
- Mount the extension brackets through the back holes with two screws.
- Attach the installation brackets to the extension brackets.

Installation brackets attached to extension brackets with the included screws and nuts.

Use the same holes for all brackets to ensure even

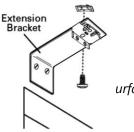

urface.

 
STEP 2: INSTALLING THE SHADE

MOUNT THE HEADRAIL:

 Hold the shade up near the brackets and insert the front clip of the bracket

into the front groove of the rail.

- Make sure the shade is centered in the window opening.
- Push the rail back and up until the back clips of the bracket are inserted in the back groove of the rail.



To **REMOVE** shade, reverse the procedure.

STEP 3: OPERATING THE SHADE

TO RAISE AND LOWER A CORDLESS LIFT & LOCK SHADE:

- Push and hold the <u>button</u> on the bottomrail handle.
- Raise or lower the shade to the desired position.
- Release the button to <u>lock the shade into place</u>.

STEP 4: ADJUSTING THE SHADE

- Raise and lower the shade several times.
- If the length is incorrect or the bottomrail is not level, use the following steps to correct.

SHADE ADJUSTMENT:

- Remove headrail from mounting brackets.
- Use a screwdriver or dime.
 - Turn screw clockwise to lift that side of the shade
 - Turn screw counter clockwise to lower that side of the shade
 - Half a revolution is ¼" adjustment (maximum adjustment is ½")

 




INTERMEDIATE RAIL SHADE ADJUSTMENT:

- Lift intermediate rail on side to be adjusted. This will take the weight off the cord.
- Use a screwdriver or dime.
 - o Turn screw clockwise to lift that side of the rail
 - Turn screw counter clockwise to lower that side of the rail
 - Half a revolution is ¼" adjustment (maximum adjustment is ½")





CLEANING INSTRUCTIONS

Honeycomb shades are made of an anti-static, dust resistant fabric which repels dirt and dust. For most of these fabrics, the following options are available if your shade needs cleaning.

DUSTING: Regular light dusting with a feather duster is all the cleaning that is needed in most circumstances.

VACUUMING: Use a hand-held vacuum with low suction for more thorough dust removal.

SPOT CLEANING: Use the following steps for spot cleaning: (1) Prepare a solution of warm water and mild dishwashing detergent. (2) Dampen a clean cloth in the solution and ring it out. (3) Dab the spot with the dampened cloth until it is gone. DO NOT RUB THE FABRIC. (4) Allow the shade to dry in the completely lowered position.

CAUTION: Avoid creasing Blackout fabrics during cleaning.

DEEP CLEANING: Use the following steps for deep cleaning: (1) Immerse shade in basin or bathtub filled with warm water and mild detergent. (2) Rinse with clean water. (3) Fully raise shade and tilt to eliminate excess water, (4) Reinstall damp shade, lower it, and let it dry completely.

CAUTION: Do not immerse Blackout fabrics. Do not immerse Cordless Lift & Lock bottomrail in water.

ULTRASONIC CLEANING: Standard shades, except those made with Blackout or Blackout Lining can be ultrasonically cleaned by a professional.

- Specify that a mild detergent be used.
- Never immerse the headrail in the solution.
- Dry the shade completely in the lowered position.

CAUTION: Do not ultrasonically clean Blackout fabrics. Do not immerse headrail in water.

SAFETY NOTES

WARNING

Inner or exposed cords can pull out to form a loop, which can STRANGLE a young child.





 Children can climb furniture to access inner or exposed cords. Move cribs, playpens, and other furniture away from window coverings.



Always keep cords out of the reach of children.

CANADIAN RESIDENTS ONLY:



For more safety information call 1-866-662-0666 or go to www.healthcanada.gc.ca/blindcords



WARRANTY INFORMATION

Lifetime Limited Warranty covering our Custom Made Blinds

We extend this lifetime limited warranty to the original purchaser. This warranty applies only to manually operated Custom Products properly installed in the window, door or interior area for which they were intended. Installation of the product must be in accordance with accompanying instructions. The product cannot be modified. It is the purchaser's responsibility to maintain and clean the product in compliance with the instruction provided. The product must be used only in the window for which it was purchased. Damage to the product resulting from misuse, abuse, direct exposure to salty air or discoloration due to sunlight or the passage of time is not covered by this warranty.

This warranty does not apply to conditions caused by normal wear and tear upon the product. This warranty is exclusive and in lieu of all other obligations, liabilities or warranties. In no event shall the Manufacturer be liable for incidental or consequential damages or for any other direct or indirect damage, loss, cost, expense or fee. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this exclusion or limitation may not apply to you.

In the event of a defect under this warranty, we will repair or replace the product, at our option, provided it is returned to our store. Our warranty obligation excludes shipping charges and labor costs for measuring and installation. Repairs will be made with like or similar parts. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Notes: Specialty Blinds and Shades are warranted for one year from the date of purchase. This warranty does not apply to Commercial Orders.

C8-20-4402•Rev 1/17