Locating and Defining the Model and Serial Number

Location of the model & serial number sticker is on the rear (hot side of the unit) on the lower left-hand side. If the condenser grille is on you can look in-between the louvers to see the sticker. The model & serial number sticker for the WKS & WKSL models are located behind the discharge grilles. The warranty starts on the date of purchase not the date of install.

| Definition | of Unit | Sprial | Num | here |
|------------|---------|--------|-----|------|
| | | | | |

| One Letter & 6 Digits (s | tarted Jan 2007 – | Present) | | | |
|--------------------------|-----------------------|--------------|-------------|----------------------------------|--|
| G011001 G=YEAR (2007 | ') 01=MON | TH 1=MO | DEL | 001=1st unit built that month | |
| H=2008, I=2009, J=2010 |), K=2011, L=2012 | , M=13, M=14 | 4, P=15, S= | =2016 | |
| 7 Digits (started 1997 – | Dec 2006) | | | | |
| 3032034 3=YEAR (2003) |) 03=MON | TH 2=MC | DEL | 034=34th unit built that month | |
| 6 Digits (from 1987 – 19 | 996) | | | | |
| 602501 6=YEAR (1996) | 02=MONTH 5 | S=MODEL | 01=1 ST | unit built that month | |
| Model of Units | | | | | |
| (1) 1060 WK, WKL | (2) 2200 WK, WK | L, WKS, WKSI | _ | (3) 1060 WKC, WKCE | |
| (4) 2200 WKC, WKCE | (5) 3000 WK, WKL, WKE | | | (6) 4000 WK, WKL, WKE, WKS, WKSL | |
| (8) 6000 or 8000 WK, W | /KE, WKL | | | | |
| 8 Digits (OEM) (unit wa | rranty through cal | oinet manufa | cture) | | |
| 06011006 06=YEAR | 01=MONTH 1 | L=VENDOR | 006=6 t | h unit built that month | |
| Model Number: | Serial Nur | nber: | | | |

Place your model and serial number above for your records. For warranty questions please go to the warranty link or contact our service department.