 



- (1) Install Dirver.



- (2) Start Artisan, Select "Config" -> "Device...", Switch to "ET/BT" Tab, Choose "PID".
Set Control ET as "Fuji PXR 2".
Set Read BT as "Fuji PXR 1".

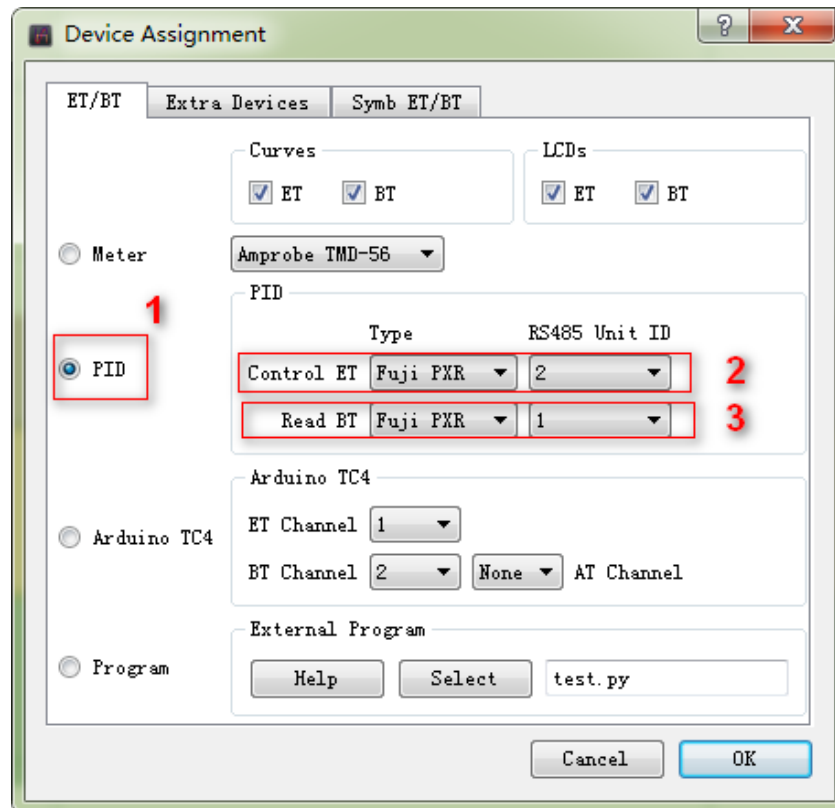

- (3) Serial Ports Configuration As Follow.
- Comm Port: **Use Your Own Port Num.**
- Baud Rate: **9600**
- Byte Size: **8**
- Parity: **0**
- Stopbits: **1**

