



Contact Service 1866-550-8502

HYOSUNG

CLOSE OUT SHEET

PRESS DOWN the ENTER, then CLEAR then CANCEL KEYS AND THEN PRESS 1, 2, 3 KEYS IN ORDER

(This will bring up a password screen)

THEN TYPE YOUR SIX DIGIT CODE. 654321 or your code

CHOOSE SETTLEMENT FROM THE OPERATOR MENU

PRESS CASSETTE TOTAL (To clear total bill count)

PRESS ADD CASSETTE # 1 BUTTON (To add bills)

PRESS ADD CASS

ENTER THE NUMBER OF BILLS ADDED TO THE CASSETTE (Not the amount of money)

PRESS THE ENTER KEY WHEN FINISHED TO SET THE AMOUNT.

PRESS APPLY

PRESS TRIAL CASSETTE TOTAL (This will be your report to keep as your record)

PRESS CANCEL TO RETURN TO MAIN SCREEN

DONE!

Contact Service 1866-550-8502

HYOSUNG

LOADING CASSETTE BOX

USE LARGER KEY TO OPEN LOWER COVER

One Number Combo SPIN CONBINATION DIAL 3 TIMES TO THE LEFT STOPPING ON YOUR COMBINATION NUMBER or

Three Number Combo

SPIN DIAL 4 TIMES LEFT STOPPING ON YOUR FIRST NUMBER, THEN SPIN TO THE RIGHT AND STOP AT THE 2^{ND} NUMBER AT THE THRID TIME THEN TURN TO TH LEFT AND STOP AT THE 3^{RD} NUMBER AT THE 2^{ND} TIME THEN TURN RIGHT UNTIL THE DIAL DOES NOT MOVE ANYMORE

SPIN BACK TO THE RIGHT UNTIL YOU HIT around the 90 MARK AND FEEL THE CLICK

TURN HANDLE NEXT TO THE COMBINATION DIAL

OPEN DOOR

REMOVE LARGE MONEY BOX

USE SMALLER KEY TO OPEN BOX

INSTALL MONEY NEATLY BEHIND BLACK SPRING LOADED LEVER, CLOSE COVER

INSTALL BOX BACK INTO TRACKS OF CASSETTE AND PUSH GENTLY UNTIL YOU HEAR A CLICK.

CLOSE DOOR AND TURN HANDLE UNTIL ITS STIRGHT UP, SPIN DIAL AND LOCK PLASTIC COVER.

DONE!