 



- (1) Install Dirver.



- (2) Start Artisan, Select "Config" -> "Device...", Switch to "ET/BT" Tab, Choose "PID".  
Set Control ET as "Fuji PXR 2".  
Set Read BT as "Fuji PXR 1".

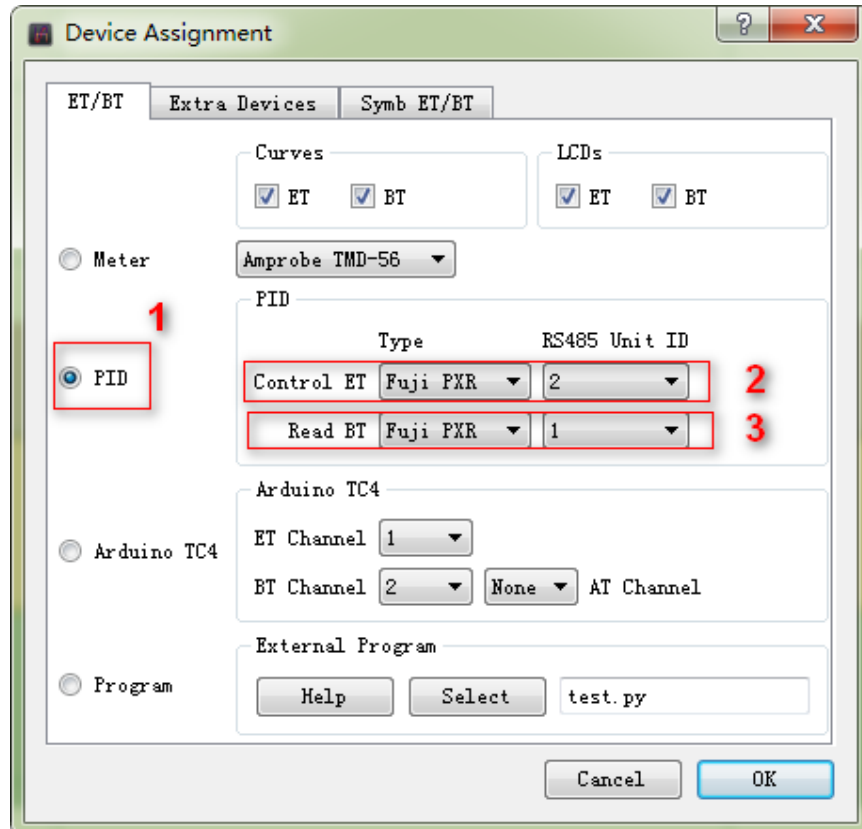

(3) Serial Ports Configuration As Follow.

Comm Port: **Use Your Own Port Num.**

Baud Rate: **9600**

Byte Size: **8**

Parity: **0**

Stopbits: **1**

